ORDER NO. MD0503080C3

Service Manual

DVD Home Theater Sound System

SA-HT730GCP

Colour

(S).....Silver Type

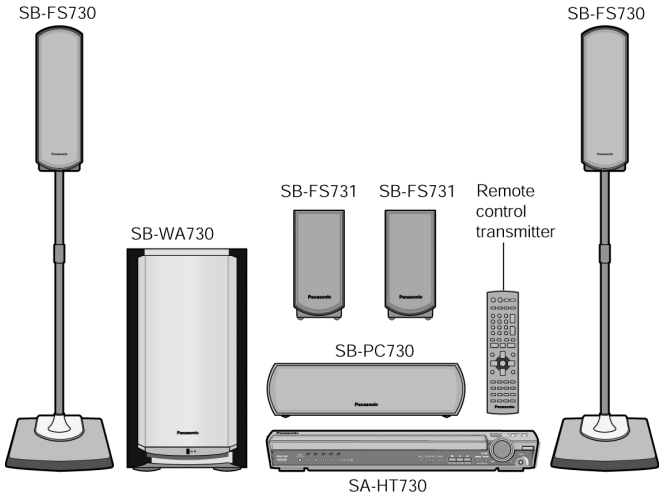

Specifications

IGeneral

Power Source:

AC 110/127/220-230/240,50/60Hz

Power consumption: 25 W

Dimensions (W×H×D): 430×68×423 mm

Mass: 4 kg (8.9lbs)

IAmplifier section

RMS Output Power: Dolby Digital Mode

ITotal RMS Dolby Digital mode Power: 800 W

At 1kHz and total harmonic of 10%

IFront: 70 W/ Channel (4Ω)

ICenter: 260 W/ Channel (4Ω)

ISurround: 70 W/ Channel (4Ω)

At 100Hz and total harmonic of 10%

IActive subwoofers: 260 W/ Channel (4Ω)

DIN Output Power: Dolby Digital Mode:

ITotal DIN Dolby Digital mode Power: 520 W

At 1Hz and total harmonic of 1%

IFront: 50 W/ Channel (4Ω)

ICenter: 160 W/ Channel (4Ω)

ISurround: 50 W/ Channel (4Ω)

At 100Hz and total harmonic of 1%

ISubwoofer: 160 W/ Channel (4Ω)

IFM tuner section

Frequency Range: 87.5-108.0MHz (50kHz in step)

Sensitivity: 2.5µV (IHF)

S/N 26dB 2.2µV

Antenna Terminal: 75Ω (non balance)

IAM tuner section

Frequency Range: 522-1629kHz (9kHz in step)
520-1630kHz (10kHz in step)

AM Sensitivity S/N 20dB at 999kHz: 560µV/m

IPhone Jack:

Terminal: Stereo 3.5 mm jack

IDisc section

Discs played [8 cm or 12 cm]:

(1) DVD-RAM (DVD-VR compatible, JPEG formatted discs)

(2) DVD-Audio

(3) DVD-Video

Panasonic

© 2005 Panasonic AVC Networks Singapore Pte. Ltd. All rights reserved. Unauthorized copying and distribution is a violation of law.

(4) DVD-R, DVD-RW (DVD-Video compatible)
+R, +RW (Video compatible)
(5) CD-Audio (CD-DA)
(6) Video CD
(7) SVCD (Conforming to IEC62107)
(8) CD-R/CD-RW (CD-DA, Video-CD, SVCD, MP3, WMA, JPEG formatted discs)
(9) MP3/WMA
lCompatible compression rate:
MP3: between 32 kbps and 320 kbps
WMA: between 48 kbps and 320 kbps
lMaximum number of recognizable audio and picture contents and groups:
4000 audio and picture contents and 400 groups
(10) JPEG
lExif Ver 2.1 JPEG Baseline files
lPicture resolution: between 320 x 240 and 6144 x 4096 pixels (sub sampling is 4:2:2 or 4:2:0)
lMaximum number of recognizable audio and picture contents and groups:
4000 audio and picture contents and 400 groups
(11) HighMAT Level 2 (Audio and Image)

Pick up:

Wavelength:

lCD:	785nm
lDVD:	662nm
Laser power:	CLASS 2/ CLASS 3A

Audio output (DISC):

Number of channels:	5.1 ch (FL, FR, C, SL, SR, SW)

lVideo section

Video system:

Signal system:	NTSC

Composite video output:

Output level:	1 Vp-p (75 Ω)
Terminal:	Pin jack (1 system)

S-video output:

Y output level:	1 Vp-p (75 Ω)
C output level:	NTSC; 0.286 Vp-p (75 Ω)
Terminal	S terminal (1 system)

Component video output (480P/480I):

Y output level:	1 Vp-p (75 Ω)
P_B output level:	0.7 Vp-p (75 Ω)
P_R output level:	0.7 Vp-p (75 Ω)
Terminal:	Pin jack (Y: green, P_B: blue, P_R: red) (1 system)

Power consumption in standby mode:
approx 0.9W

Note:

1. Specifications are subject to change without notice.
Mass and dimensions are approximate.
2. Total harmonic distortion is measured by the digital spectrum analyzer.

Solder:
This model uses lead free solder (PbF).

system	SC-HT730
Main unit	**SA-HT730**
Front speakers	SB-FS730
Center speaker	SB-PC730
Surround speakers	SB-FS731
Active subwoofer	SB-WA730

MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson multimedia.

Windows Media, and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.
WMA is a compression format developed by Microsoft Corporation. It achieves the same sound quality as MP3 with a file size that is smaller than that of MP3.

Designed for Windows Media™

HIGH m·A·T AUDIO·IMAGE

HighMAT and the HighMAT logo are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

■ Built-in decoders

You can play discs with these symbols.

DOLBY DIGITAL

DIGITAL dts SURROUND

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public.
It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.
Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

CONTENTS

Page

1 Use of Active Subwoofer ---- 4
1.1. Checking Player when Active Subwoofer is not used ---- 4
2 Safety Precautions ---- 5
2.1. GENERAL GUIDELINES ---- 5

Page

3 Prevention of Electro Static Discharge (ESD) to Electrostatically Sensitive (ES) Devices ---- 5
4 Before Repair and Adjustment (Using Active Subwoofer) ---- 6
5 Protection Circuitry ---- 6
6 Precaution of Laser Diode ---- 7

7 About Lead Free Solder (PbF) **7**
8 General Description **8**
8.1. Operating instructions 8
8.2. Disc information 9
8.3. About HighMAT 10
9 Accessories **15**
10 Handling Precautions for Optical Pickup Unit **16**
10.1. Cautions to Be Taken in Handling the Optical Pickup Unit 16
10.2. Grounding for electrostatic breakdown prevention 16
11 Disassembly and Main Component Replacement Procedure **18**
11.1. Disassembly Procedure 19
11.2. Main Components and P.C.B. Locations 20
11.3. Disassembling the Top Cabinet 21
11.4. Disassembling the Front Panel 21
11.5. Disassembling the Tray Assembly 22
11.6. Disassembling the Mechanism Base Block 22
11.7. Disassembling the Main P.C.Board 22
11.8. Removal of the Tray Base Guide (L) and Tray Base Guide (R) 23
11.9. Removal of the Rotary Tray 23
11.10. Removal of the Open Lock Gear 23
11.11. Removal of the Close Lock Gear 23
11.12. Removal of the Tray Motor P.C.B. and Sensor P.C.B. 24
11.13. Removal of the Traverse Unit 24
11.14. Removal of the Pulley Gear 24
11.15. Removal of the Loading Motor P.C.B. 25
11.16. Removal of the Drive Gear (A) & (B) 25
11.17. Disassembling the Fixed Plate, Magnet and Clamper 25
11.18. Removal of the Cam Gear & Support Piece 26
11.19. Removal of the Slide Plate (L) & (R) and Change Lever 26
11.20. Assembly of Tray Base 27
12 Service Position **28**
12.1. Checking & Repair Tray Motor P.C.B and Sensor P.C.B 28
12.2. Checking & Repair Main P.C.B 28
12.3. Checking & Repair DVD Module P.C.B 28
13 Optical Pick-up Self-Diagnosis and Replacement Procedure **29**
13.1. Optical Pickup Breakdown Diagnosis 29
13.2. Service Mode Table 1 30
13.3. DVD Self Diagnostic Function-Error Code 30
13.4. Service mode table 2 32
13.5. Sales demonstration lock function 34
13.6. Handling After Completing Repairs 34
14 Self-Diagnosis Function **35**
14.1. Automatic Displayed Error Codes 35
14.2. Memorized Error Codes 35
15 Service Precautions **36**
15.1. Recovery after the DVD player is repaired 36
15.2. Firmware version-up of the DVD player 36
16 Adjustment Procedure **37**
16.1. Service Tools and Equipment 37
16.2. Important points in adjustment 37
16.3. Storing and Handling Test Discs 37
16.4. Optical adjustment 38
17 Abbreviations **39**
18 Voltage Chart **41**
18.1. DVD Module P.C.B. 41
18.2. Main P.C.B. 42
18.3. FL P.C.B. 43
18.4. Loading Motor P.C.B., Tray Motor P.C.B., Sensor P.C.B. 43
19 Wave Form Chart **44**
20 Schematic Diagram Notes **45**
21 Block Diagram **47**
22 Schematic Diagram **53**
23 Printed Circuit Board Diagram **63**
24 Wiring Connection Diagram **67**
25 Illustration of IC 痴, Transistors and Diodes **69**
26 Terminal Function of ICs **70**
26.1. IC2018 (MN101C49GHB): Operation CPU 70
27 Parts Location and Replacement Parts List **71**
27.1. Loading Mechanism, Traverse Unit & Cabinet 72
27.2. Component Parts List 76
27.3. Packing Materials & Accessories Parts List 85
27.4. Packaging 85
28 Schematic Diagram for printing with letter size **86**

1 Use of Active Subwoofer

1.1. Checking Player when Active Subwoofer is not used

1. This unit uses the active subwoofer to supply the power of the component, and the active subwoofer should be connected to the component to check operational conditions of the component.

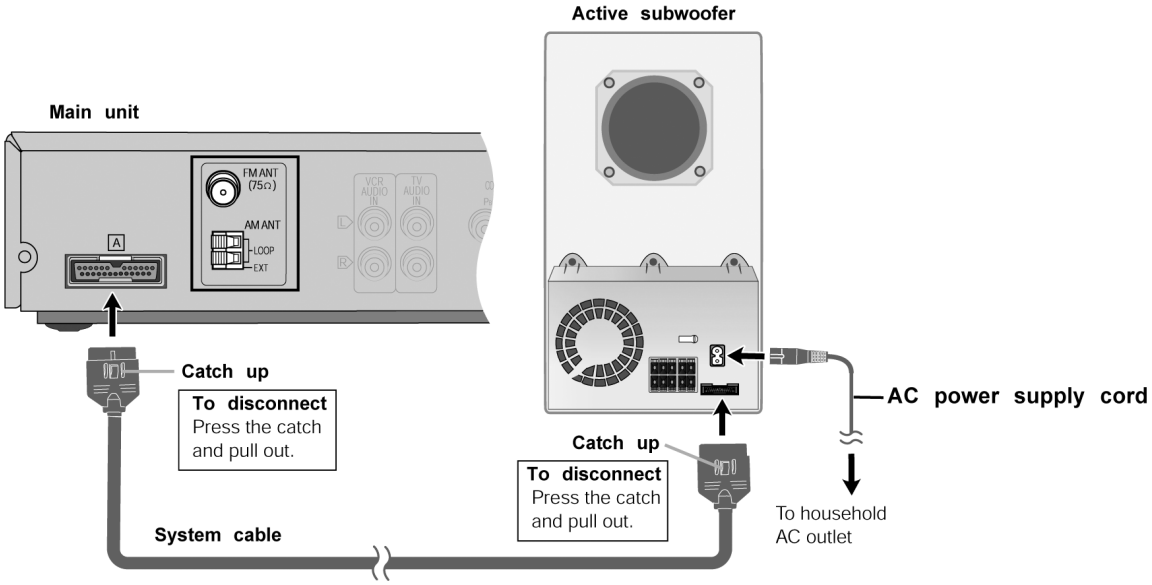

2. If the active subwoofer is not available due to repair of the unit, use the following equipment.

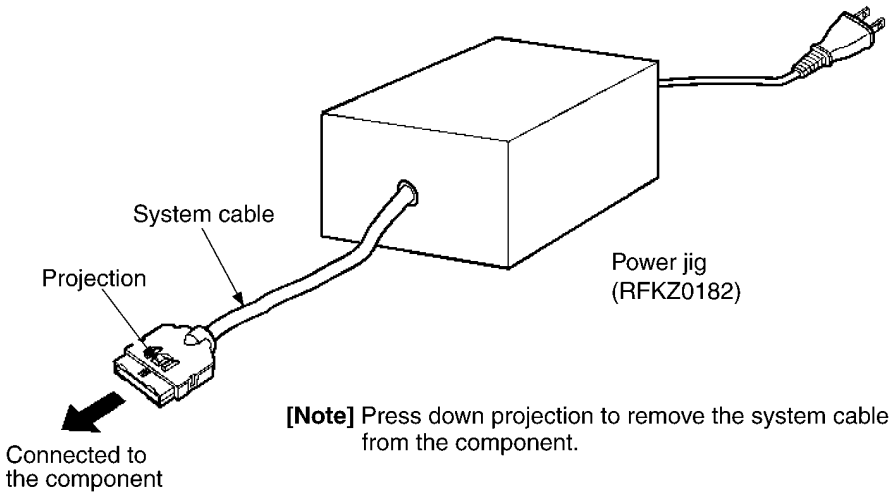

Jig product number: RFKZ0182 (110V, 127V, 220V, 230V-240V for overseas domestic use)

2 Safety Precautions

2.1. GENERAL GUIDELINES

1. When servicing, observe the original lead dress. If a short circuit is found, replace all parts which have been overheated or damaged by the short circuit.
2. After servicing, see to it that all the protective devices such as insulation barriers, insulation papers shields are properly installed.
3. After servicing, carry out the following leakage current checks to prevent the customer from being exposed to shock hazards.

2.1.1. LEAKAGE CURRENT COLD CHECK

1. Unplug the AC cord and connect a jumper between the two prongs on the plug.
2. Measure the resistance value, with an ohmmeter, between the jumpered AC plug and each exposed metallic cabinet part on the equipment such as screwheads, connectors, control shafts, etc. When the exposed metallic part has a return path to the chassis, the reading should be between 1MΩ and 5.2MΩ.
   When the exposed metal does not have a return path to the chassis, the reading must be ∞.

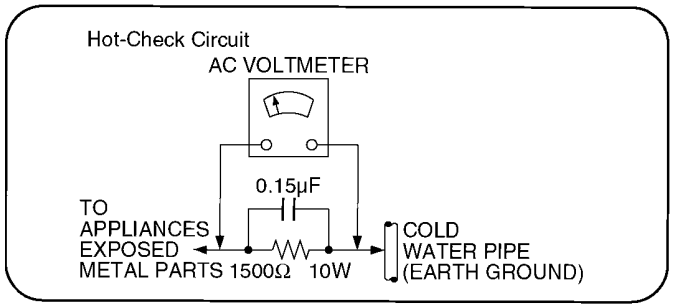

Figure 1

2.1.2. LEAKAGE CURRENT HOT CHECK (See Figure 1 .)

1. Plug the AC cord directly into the AC outlet. Do not use an isolation transformer for this check.
2. Connect a 1.5kΩ, 10 watts resistor, in parallel with a 0.15µF capacitors, between each exposed metallic part on the set and a good earth ground such as a water pipe, as shown in Figure 1.
3. Use an AC voltmeter, with 1000 ohms/volt or more sensitivity, to measure the potential across the resistor.
4. Check each exposed metallic part, and measure the voltage at each point.
5. Reverse the AC plug in the AC outlet and repeat each of the above measurements.
6. The potential at any point should not exceed 0.75 volts RMS. A leakage current tester (Simpson Model 229 or equivalent) may be used to make the hot checks, leakage current must not exceed 1/2 milliamp. In case a measurement is outside of the limits specified, there is a possibility of a shock hazard, and the equipment should be repaired and rechecked before it is returned to the customer.

3 Prevention of Electro Static Discharge (ESD) to Electrostatically Sensitive (ES) Devices

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by electro static discharge (ESD).

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any ESD on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging ESD wrist strap, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static (ESD protected)" can generate electrical charge sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

Caution

Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity (ESD) sufficient to damage an ES device).

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are imporant for safety.
These parts are marked by ⚠ in the schematic diagrams, Exploded Views and replacement parts list. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock. fire, or other hazards. Do not modify the original design without permission of manufacturer.

4 Before Repair and Adjustment (Using Active Subwoofer)

Disconnect AC power, discharge Power Supply Capacitors C547~C549 through a 10 Ω, 10 W resistor to ground.

DO NOT SHORT-CIRCUIT DIRECTLY (with a screwdriver blade, for instance), as this may destroy solid state devices.

After repairs are completed, restore power gradually using a variac, to avoid overcurrent.

Current consumption at AC 100/110 V, 50/60 Hz in NO SIGNAL mode should be ~ 1180 mA. [At 230-240V, 50Hz should be ~ 600mA]

5 Protection Circuitry

The protection circuitry may have operated if either of the following conditions are noticed:

- No sound is heard when the power is turned on.
- Sound stops during a performance.

The function of this circuitry is to prevent circuitry damage if, for example, the positive and negative speaker connection wires are "shorted", or if speaker systems with an impedance less than the indicated rated impedance of the amplifier are used.

If this occurs, follow the procedure outlines below:

1. Turn off the power.
2. Determine the cause of the problem and correct it.
3. Turn on the power once again after one minute.

Note:

When the protection circuitry functions, the unit will not operate unless the power is first turned off and then on again.

6 Precaution of Laser Diode

CAUTION :

This product utilizes a laser. Invisible laser radiation is emitted from the optical pick up lens when the unit is turned on.

Wavelength : 662nm(DVD)/785nm(VCD/CD)

Maximum output radiation power from pick up : 100μW/VDE

Laser radiation from pick up unit is safety level, but be sure the followings:

1. Do not disassemble the optical pick up unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pick up unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pick up lens for a long time.

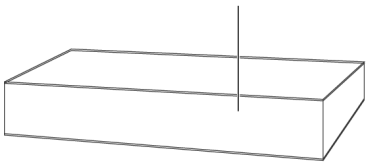

(Back of product)

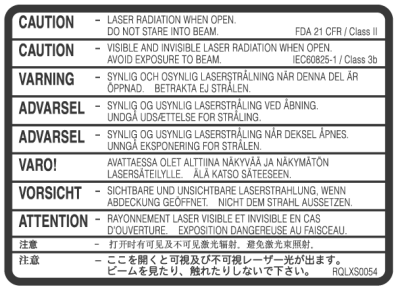
CAUTION – LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FDA 21 CFR / Class II
CAUTION – VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO BEAM. IEC60825-1 / Class 3b
VARNING – SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD. BETRAKTA EJ STRÅLEN.
ADVARSEL – SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING. UNDGÅ UDSÆTTELSE FOR STRÅLING.
ADVARSEL – SYNLIG OG USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES. UNNGÅ EKSPONERING FOR STRÅLEN.
VARO! AVATTAESSA OLET ALTTIINA NÄKYVÄÄ JA NÄKYMÄTÖN LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
VORSICHT – SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.
ATTENTION – RAYONNEMENT LASER VISIBLE ET INVISIBLE EN CAS D'OUVERTURE. EXPOSITION DANGEREUSE AU FAISCEAU.
注意 – 打开时有可见及不可见激光辐射，避免激光束照射。
注意 – ここを開くと可視及び不可視レーザー光が出ます。ビームを見たり、触れたりしないで下さい。 RQLXS0054

(Inside of product)

CAUTION:
THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

7 About Lead Free Solder (PbF)

Distinction of PbF PCB: PCBs (manufactured) using lead free solder will have a Pbf stamp on the PCB.

Caution:

- Pb free solder has a higher melting point than standard solder; Typically the melting point is 50 - 70°F (30 - 40°C) higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 700 ± 20°F (370 ± 10°C).
- Pb free solder will tend to splash when heated too high (about 1100°F/ 600°C).

When soldering or unsoldering, please completely remove all of the solder on the pins or solder area, and be sure to heat the soldering points with the Pb free solder until it melts enough.

8 General Description

8.1. Operating instructions

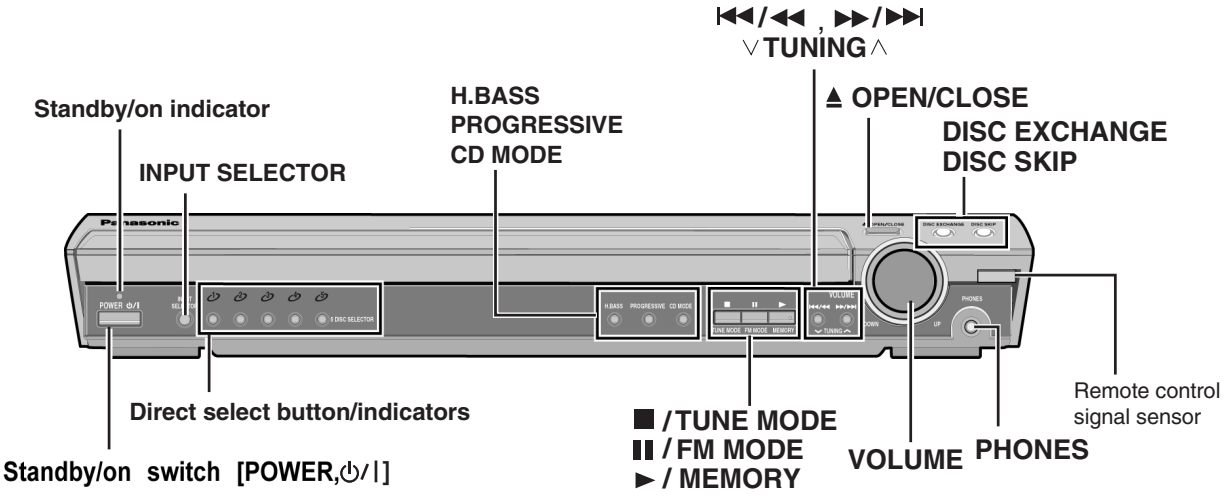

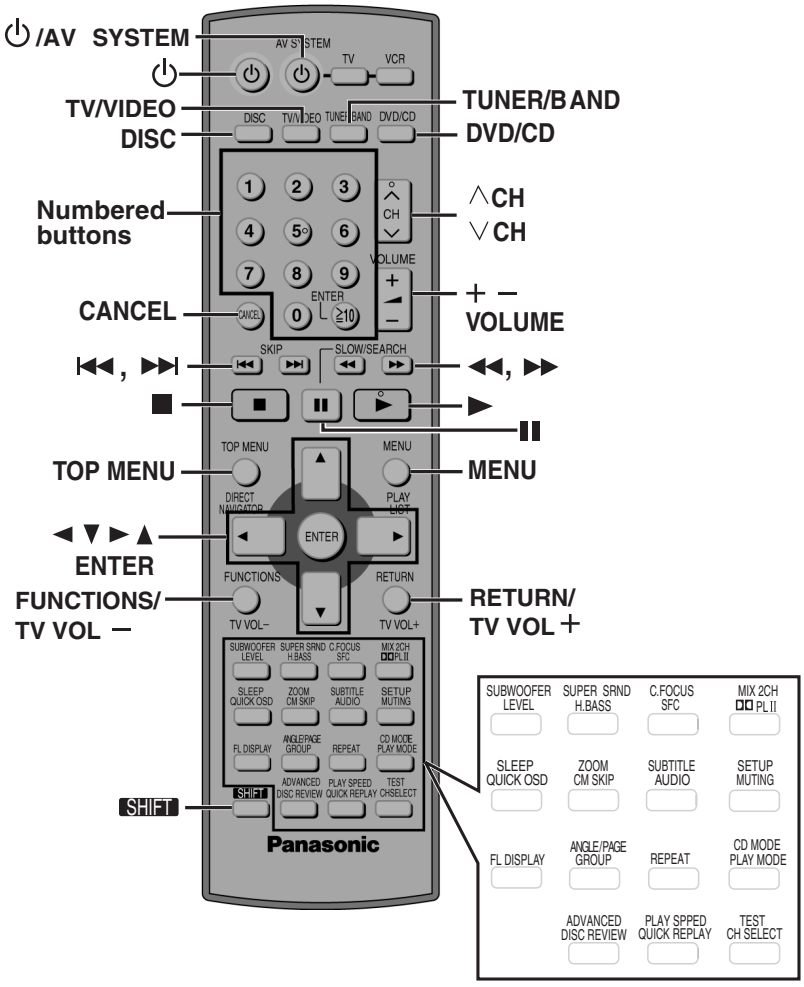

8.2. Disc information

■ Discs that can be played

Disc	Logo	Indication in these operating instructions	Remarks
DVD-RAM	DVD RAM RAM4.7	RAM	Recorded with devices using Version 1.1 of the Video Recording Format (a unified video recording standard), such as DVD video recorders, DVD video cameras, personal computers, etc.
		JPEG	Recorded using the DCF (Design rule for Camera File system) standard Version 1.0. ●To play JPEG files, select “Play as Data Disc” in Other Menu.
DVD-Audio	DVD AUDIO	DVD-A	—
		DVD-V	Some DVD-Audio discs contain DVD-Video content. To play DVD-Video content, select “Play as DVD-Video” in Other Menu.
DVD-Video	DVD VIDEO DVD VIDEO	DVD-V	—
DVD-R (DVD-Video)/ DVD-RW (DVD-Video)	DVD R R4.7 DVD RW		Discs recorded and finalized※ on DVD video recorders or DVD video cameras.
+ R (Video) / + RW (Video)	—		Discs recorded and finalized※ on DVD video recorders or DVD video cameras.
Video CD	COMPACT disc DIGITAL VIDEO	VCD	—
SVCD	COMPACT disc SUPER VIDEO		Conforming to IEC62107
CD	COMPACT disc DIGITAL AUDIO COMPACT disc DIGITAL AUDIO TEXT	CD	This unit is compatible with HDCD, but does not support the Peak Extend function (a function which expands the dynamic range of high level signals). HDCD-encoded CD’s sound better because they are encoded with 20 bits, as compared with 16 bits for all other CD’s.
CD-R CD-RW	—	WMA MP3 JPEG CD VCD	● This unit can play CD-R/RW (audio recording disc) recorded with the formats on the left. Close the sessions or finalize※ the disc after recording. ● **HighMAT discs** WMA, MP3 or JPEG files only. To play without using the HighMAT function, select “Play as Data Disc” in Other Menu. ● WMA This unit does not support Multiple Bit Rate (MBR: a file that contains the same content encoded at several different bit rates).

※A process that allows play on compatible equipment.

●It may not be possible to play the above discs in all cases due to the type of disc or condition of the recording.

■ Discs that cannot be played

DVD-ROM, CD-ROM, CDV, CD-G, SACD, DivX Video Discs and Photo CD, DVD-RAM that cannot be removed from their cartridge, 2.6-GB and 5.2-GB DVD-RAM, and “Chaoji VCD” available on the market including CVD, DVCD and SVCD that do not conform to IEC62107.

■ Audio format of DVD’s

This unit automatically recognizes and decodes discs with these symbols.

DOLBY DIGITAL

DIGITAL dts SURROUND

■ To prevent damage

Do not:

–load more than one disc per tray.

–touch the drawer or the carousel while they are in motion.

–rotate the carousel by hand.

–close the drawer by hand.

■ To clean discs

DVD-Audio, DVD-Video, Video CD, SVCD and CD

Wipe with a damp cloth and then wipe dry.



■ Disc handling precautions

- Do not attach labels or stickers to discs (This may cause disc warping, rendering it unusable).
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids or any other solvent.
- Do not use scratch-proof protectors or covers.
- Do not use the following discs:
  – Discs with exposed adhesive from removed stickers or labels (rented discs, etc).
  – Discs that are badly warped or cracked.
  – Irregularly shaped discs, such as heart shapes.

Tips for making WMA/MP3 and JPEG discs (For CD-R, CD-RW)

- Discs must conform to ISO9660 level 1 or 2 (except for extended formats).
- This unit supports multi-session but if there are a lot of sessions it takes more time for play to start. Keep the number of sessions to a minimum to avoid this.
- When there are more than 8 groups, the eighth group onwards will be displayed on one vertical line in the menu screen.
- There may be differences in the display order on the menu screen and computer screen.
- This unit cannot play files recorded using packet write.

Naming folders and files
(Files are treated as content and folders are treated as groups on this unit.)
At the time of recording, prefix folder and file names with 3-digit numbers in the order you want to play them (this may not work at times).
Files must have the extension:
".WMA" or ".wma"
".MP3" or ".mp3"
".JPG", ".jpg", ".JPEG" or ".jpeg"

e.g. MP3

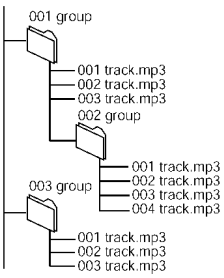

WMA

- You cannot play WMA files that are copy protected.
- This unit does not support Multiple Bit Rate (MBR).

MP3

This unit does not support ID3 tags.
Compatible sampling rates: 8, 11.02, 12, 16, 22.05, 24, 32, 44.1 and 48 kHz.

JPEG

- To view JPEG files on this unit:
  - Take them on a digital camera that meets the DCF Standard (Design rule for Camera File system) Version 1.0. Some digital cameras have functions that are not supported by the DCF Standard Version 1.0 like automatic picture rotation which may render a picture un-viewable.
  - Do not alter the files in any way or save them under a different name.
- This unit cannot display moving pictures, MOTION JPEG and other such formats, still pictures other than JPEG (e.g. TIFF) or play pictures with attached audio.

8.3. About HighMAT

8.3.1. What's HighMAT?

Consumers worldwide are using PCs to create their own collections of music, photos and even video by burning them onto CDs. But how these collections can be experienced across different devices can be confusing to navigate, time consuming to access for a DVD player, and be incomplete in terms of music information available to the customer.

HighMAT offers a solution to this growing consumer problem. HighMAT dramatically improves the digital media experience on consumer electronic devices by delivering a simple, standardized approach that allows consumers who have created personal collections of digital music, photography and video on their PC to:

>> Create a HighMAT CD or DVD which can be easily played back on consumer electronics devices such as CD and DVD players, and car stereos.

>> Move digital media files (using recordable media such as CD-R and CD-RW) between the PC and various playback devices such as CD and DVD players.

A new standard for creating personal media on consumer electronic devices, HighMAT enable easier and more seamless interoperability between Windows PCs and devices designed for your living room, or the car.

HIGH M·A·T
HighMAT is a new technology which has been co-developed and is supported by Microsoft Corporation and Matsushita Electric Industrial Co., Ltd. (Panasonic). HighMAT stands for High-Performance Media Access Technology. Look for the HighMAT logo on electronics devices - there are three levels of playback support for consumer electronics devices.
HighMAT Official Website

HighMAT Audio
Products which display this logo are able to play back HighMAT audio content only (WMA, MP3)

HighMAT Audio and Image
Products which display this logo are able to play back HighMAT audio content (WMA, MP3) and still pictures (JPEG) only

HighMAT Audio, Image and Video
Products which display this logo are able to play back all three types of HighMAT content: Audio (WMA, MP3), still pictures (JPEG) and video (WMV, MPEG-4※)
※MPEG-4: support is optional

8.3.2. Why take advantage of HighMAT?

A Problem Defined:Today, when consumers create their own digital audio, video or photo collections on CD-R or other physical formats, there are numerous, inconsistent ways that devices read the data. For the consumer, the playback experience can be confusing:

- Many consumer electronics devices do not support playlists or advanced playback options such as the ability to access content by date or genre.
- The user interface for accessing the media and any associated information (including playlists, folders, music metadata and more) may vary between different devices.
- Large collections of music, videos or photos may take several minutes for a CD or DVD player to read.
- Discs may be unplayable because the compressed media format is not supported by the playback device or the disc layout is incompatible.

A Solution Created: HighMAT delivers a better digital media access experience by creating a standard approach for PCs to structure digital media on various physical formats and for playback devices to read the data.

8.3.3. Benefits of HighMAT?

1 **Creating a HighMAT CD makes it easier to navigate different types of media you want to burn onto a CD (Photos, Music).**

Conventional	HighMAT
Even though DVD player is CD-R/RW compatible, the inconsistent ways that various DVD players can read the music or photos files often leads to a confusing and inconsistant playback experince.	HighMAT compatible products play content back with consistent interface. This includes products which are JPEG compatible products without HighMAT support.
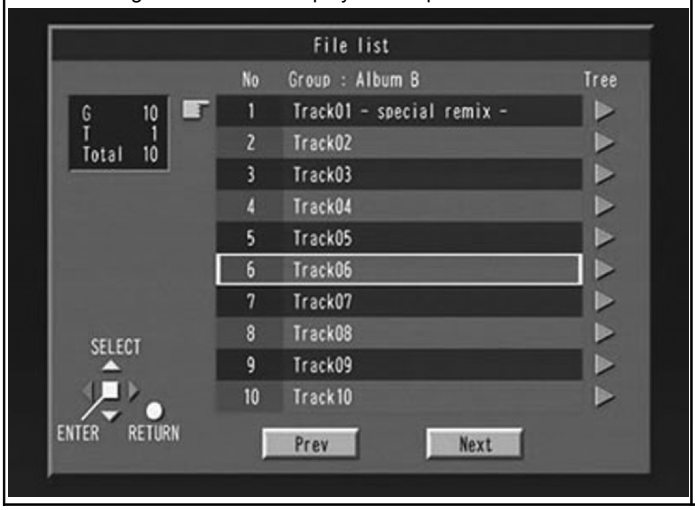	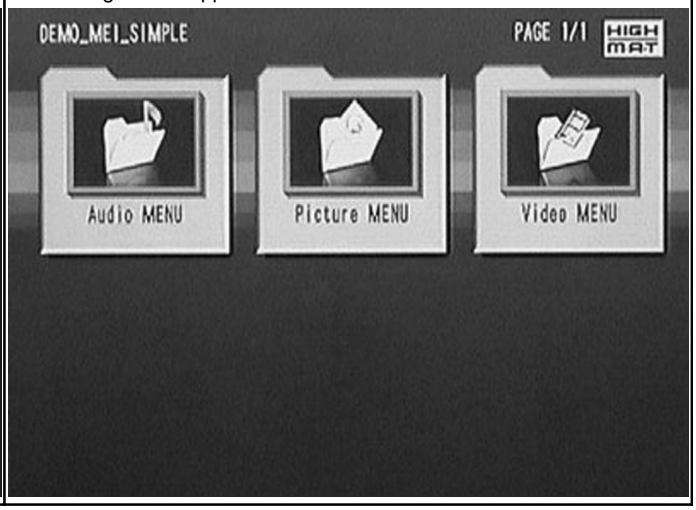

2 **Eliminates compatibility issues and delivers better more consistent access to more music information like artist, song name, genre and photo information (metadata) as well as provide faster access to large amounts of music and photo files burned on CDs.**

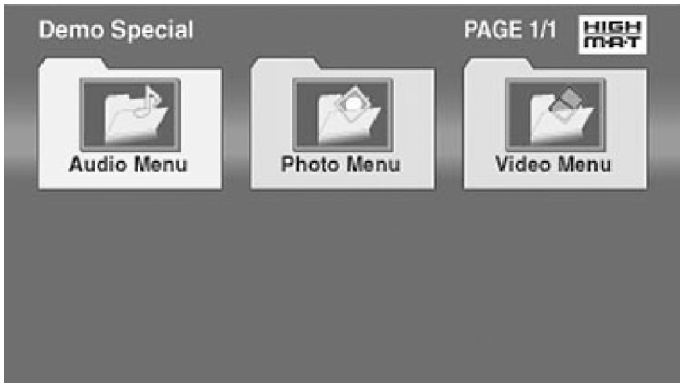

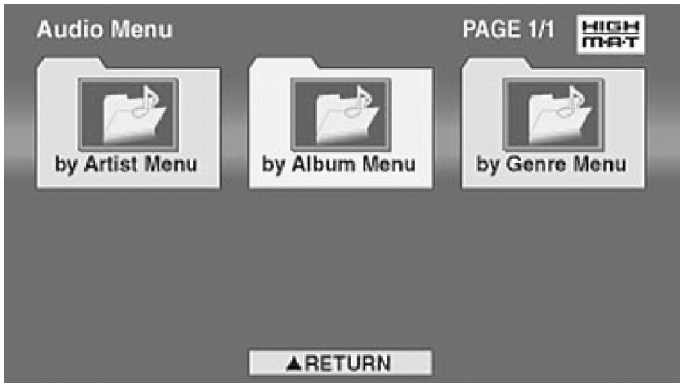

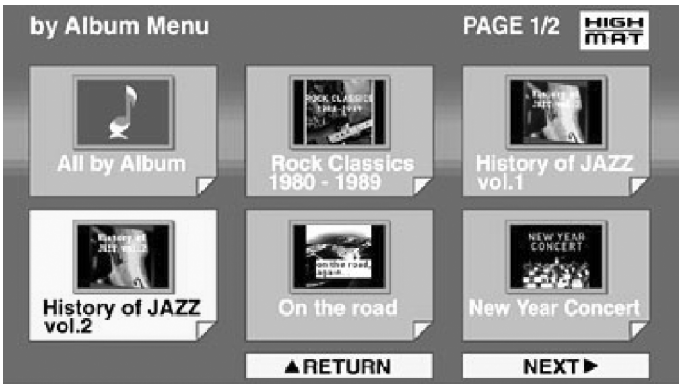

Easy navigation to access disc contents

3 HighMAT CDs can also work on other players.

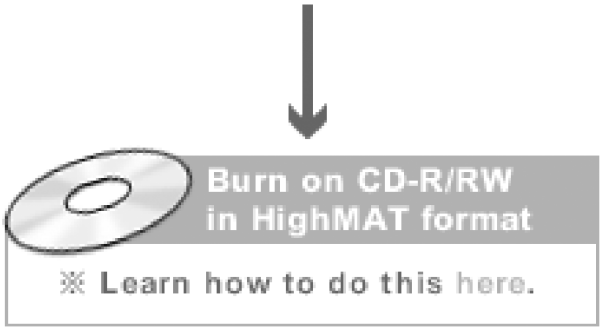

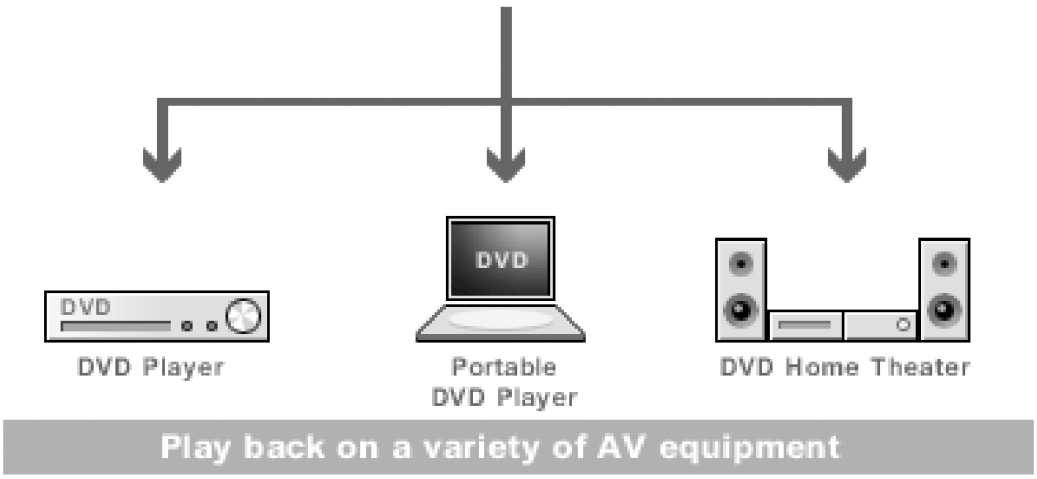

Play back on a variety of AV equipment

HighMAT is now available for CD Burning and in Leading DVD Players
HighMAT is a new technology that is now available in leading software and consumer electronic devices to dramatically improve the digital media experience when you create homemade CDs
HighMAT delivers a simple, standardized way for PC software and consumer electronics devices to talk to each other and work better together.

When you create your homemade CDs with software that supports HighMAT CD burning, and then play them back on a DVD player that supports HighMAT, you get better, easier navigation. You get folders you can access with a single click of your DVD player´s remote control. You can view important information about your music like full song names, artist titles, album names and genre. And you can get faster startup on your home entertainment device.

To enjoy the benefits of HighMAT, all you need is software that supports HighMAT for CD burning of music or photos, as well as a home entertainment device like a DVD player that supports HighMAT for playback. Always look for the HighMAT logo on your software or home entertainment device to ensure it supports the HighMAT experience.

9 Accessories

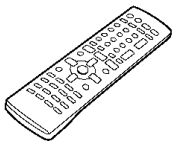

Remote control

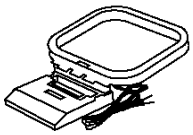

AM loop antenna



FM indoor antenna



Video Cable

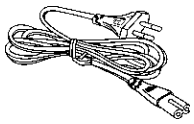

AC cord



System cable

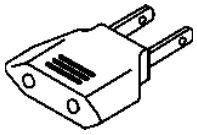

AC plug adapter



Speaker label

10 Handling Precautions for Optical Pickup Unit

The laser diode in the optical pickup unit may break down due to static electricity of clothes or human body. Special care must be taken avoid to electrostatic breakdown when servicing and handling the laser diode.

10.1. Cautions to Be Taken in Handling the Optical Pickup Unit

The laser diode in the optical pickup unit may be damaged due to electrostatic discharge generating from clothes or human body. Special care must be taken avoid to electrostatic discharge damage when servicing the laser diode.

1. Do not give a considerable shock to the optical pickup unit as it has an extremely high-precise structure.
2. To prevent the laser diode from the electrostatic discharge damage, the flexible cable of the optical pickup unit removed from the PCB should be short-circuited with a short pin or a clip.
3. The flexible cable may be cut off if an excessive force is applied to it. Use caution when handling the flexible cable.
4. The antistatic FPC is connected to the new optical pickup unit. After replacing the optical pickup unit and connecting the flexible cable, cut off the antistatic FPC.

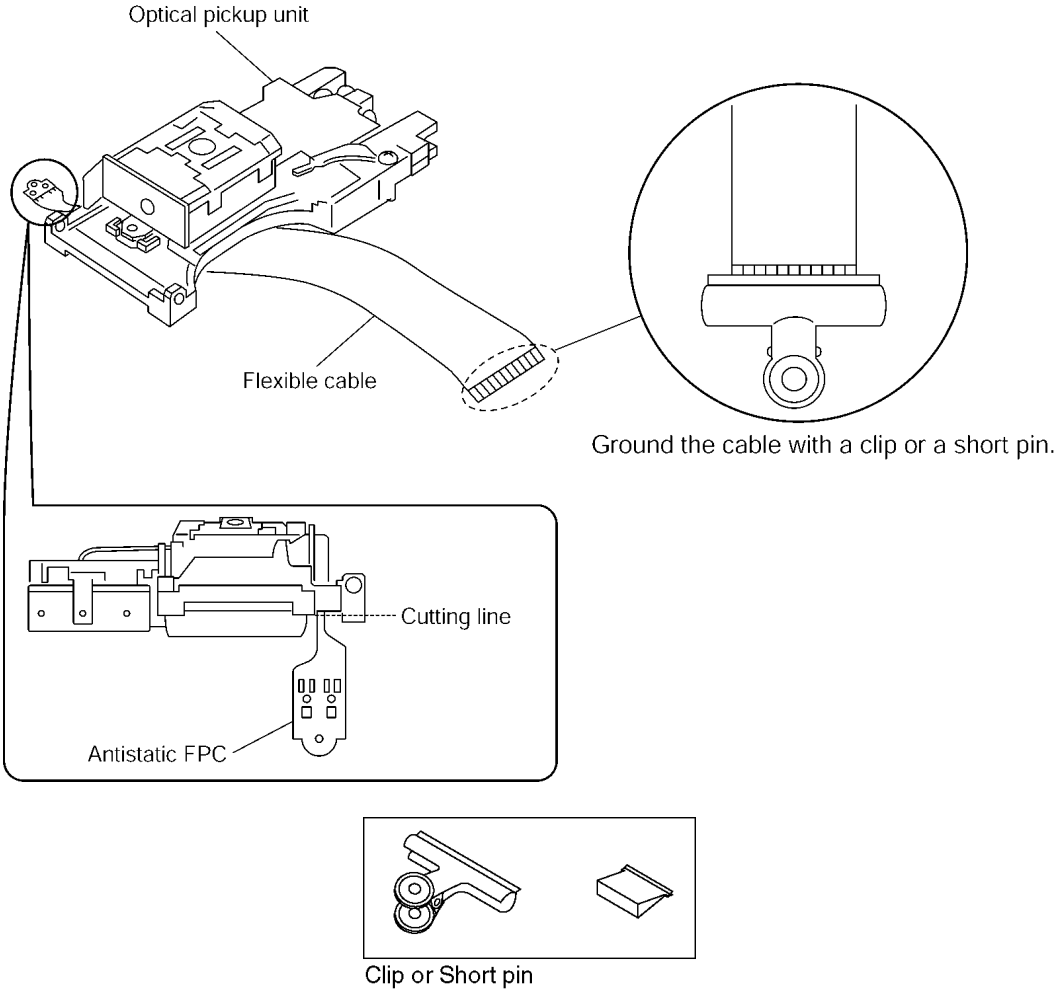

10.2. Grounding for electrostatic breakdown prevention

Some devices such as the DVD player use the optical pickup (laser diode) and the optical pickup will be damaged by static electricity in the working environment. Proceed servicing works under the working environment where grounding works is completed.

10.2.1. Worktable grounding

1. Put a conductive material (sheet) or iron sheet on the area where the optical pickup is placed, and ground the sheet.

10.2.2. Human body grounding

1. Use the anti-static wrist strap to discharge the static electricity form your body.

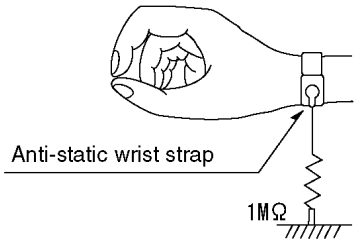
Anti-static wrist strap
1MΩ

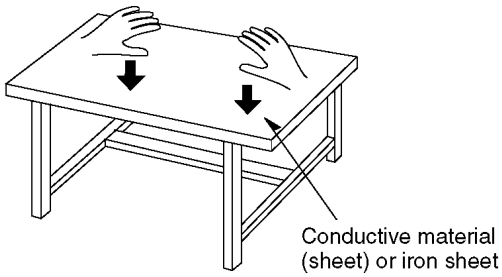
Conductive material
(sheet) or iron sheet

11 Disassembly and Main Component Replacement Procedure

“ATTENTION SERVICER”

Some chassis components may have sharp edges.

Be careful when disassembling and servicing.

1. **This section describes procedures for checking the operation of the major printed circuit boards and replacing the main components.**
2. **For assembly after operation checks or replacement, reverse the respective procedures.**

   Special reassembly procedures are described only when required.
3. **Select items from the following index when checks or replacement are required.**

- Disassembling the Top Cabinet
- Disassembling the Front Panel
- Disassembling the Tray Assembly
- Disassembling the Mechanism Base Block
- Disassembling the Main P.C.B
- Removal of the Tray Base Guide (L) and Tray Base Guide (R)
- Removal of the Rotary Tray
- Removal of the Open Lock Gear
- Removal of the Close Lock Gear
- Removal of the Tray Motor P.C.B.and Sensor P.C.B.
- Removal of the Traverse Unit
- Removal of the Pulley Gear
- Removal of the Loading Motor P.C.B.
- Removal of the Drive Gear (A) & (B)
- Disassembly the Fixed Plate, Magnet and Clamper
- Removal of the Cam Gear & Support Piece
- Removal of the Slide Plate (L) & (R) and Changer Lever
- Assembly of Tray Base

11.1. Disassembly Procedure

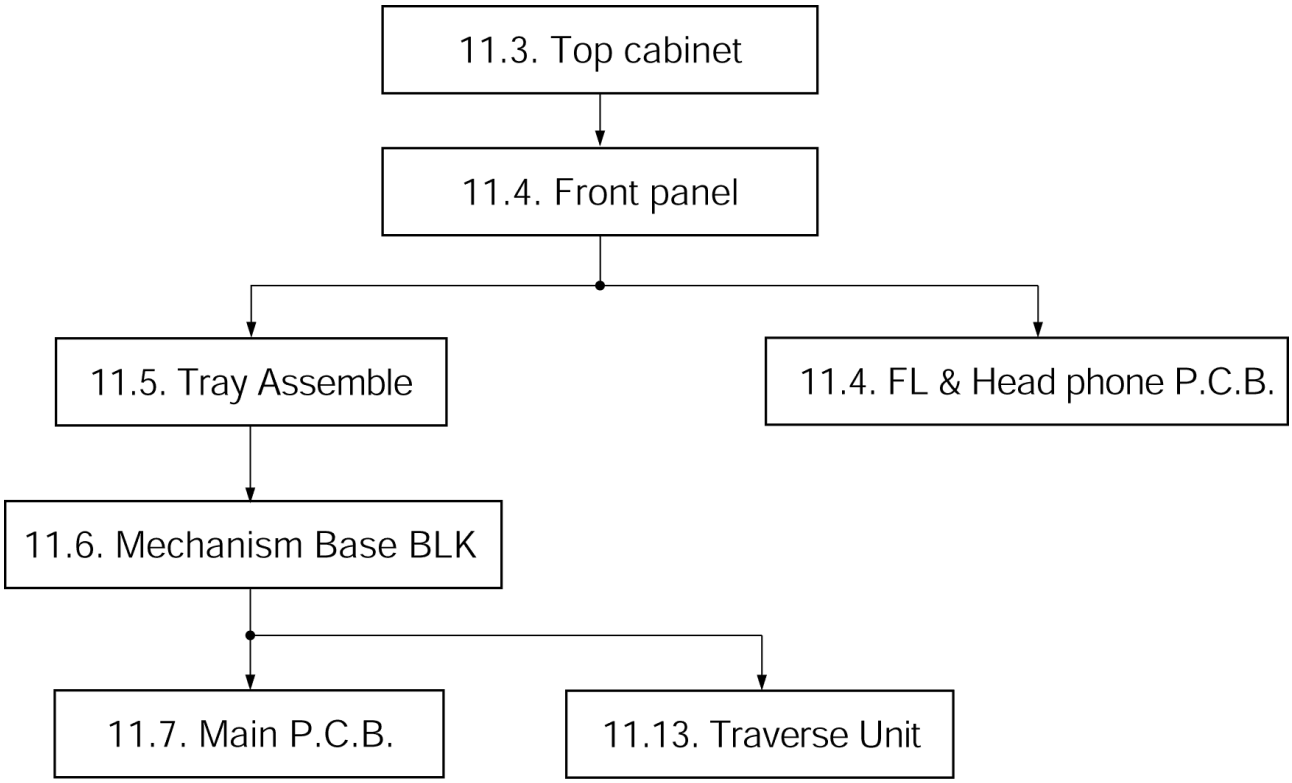

11.2. Main Components and P.C.B. Locations

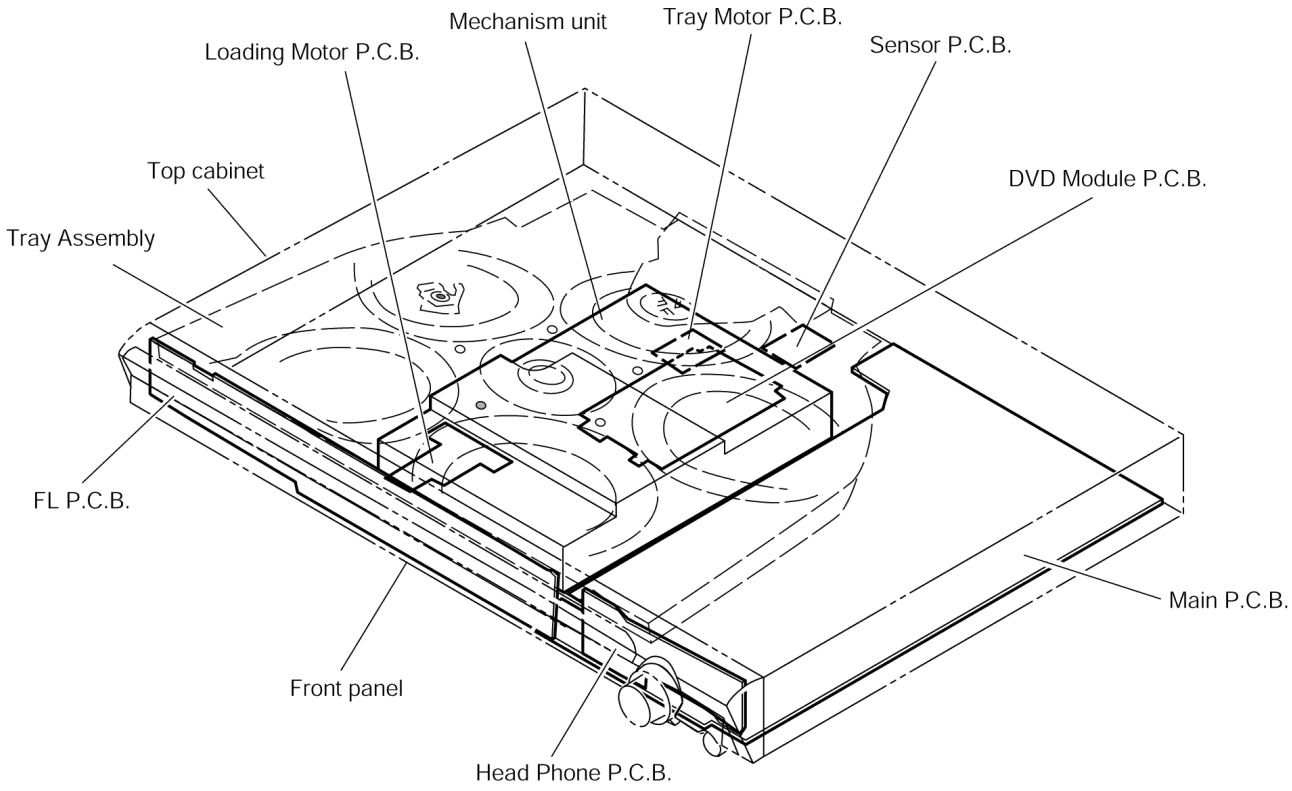

11.3. Disassembling the Top Cabinet

Step 1 Remove 7 screws.

Step 2 Remove the top cabinet in the direction of arrow.

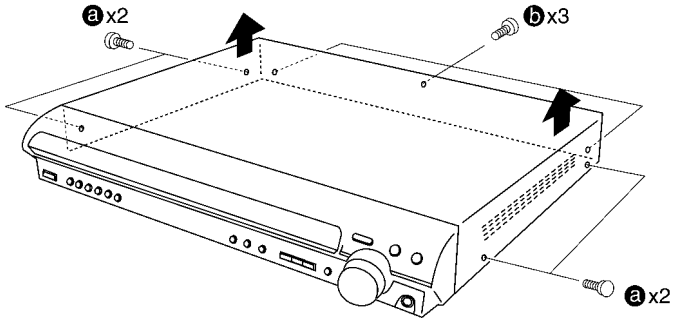

11.4. Disassembling the Front Panel

・Follow the (Step 1) - (Step 2) of Item 11.3.

Step 1 Keep the close lock gear pressed in clockwise, move the tray assembly in the direction of the arrow.

Step 2 Unclock the claws at the bottom of the top tray.

Step 3 Remove the lid assembly in the direction of arrow.

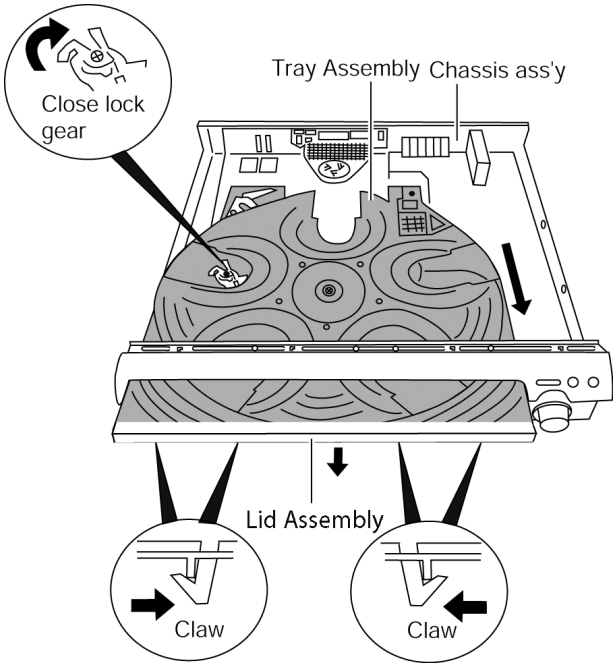

Step 4 Pull out the FFC from connectors (CN2008 & CN2009).

Step 5 Unclock the claws of the front panel in the directions.

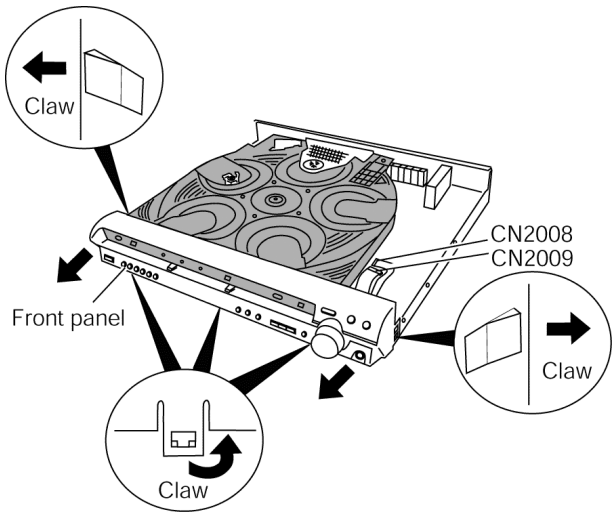

Step 6 Remove the front panel in the direction of arrow.

Step 7 Remove panel angle.

Step 8 Remove 8 screws.

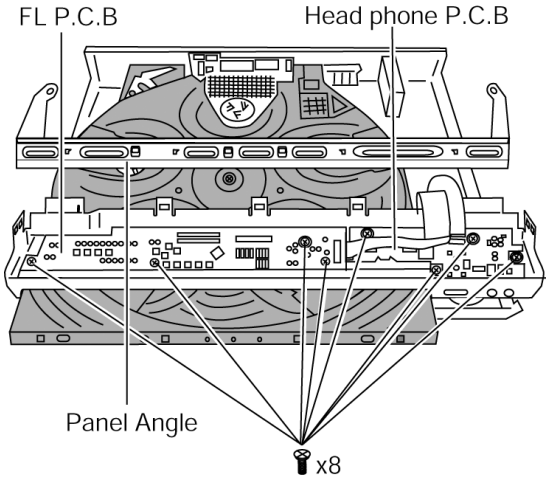

11.5. Disassembling the Tray Assembly

・Follow the (Step 1) - (Step 2) of Item 11.3.

・Follow the (Step 1) - (Step 6) of Item 11.4.

Step 1 Pull out the FFC from connector. (CN2010)

Step 2 Hold gear, push and release the 2 claws in the direction of arrow.

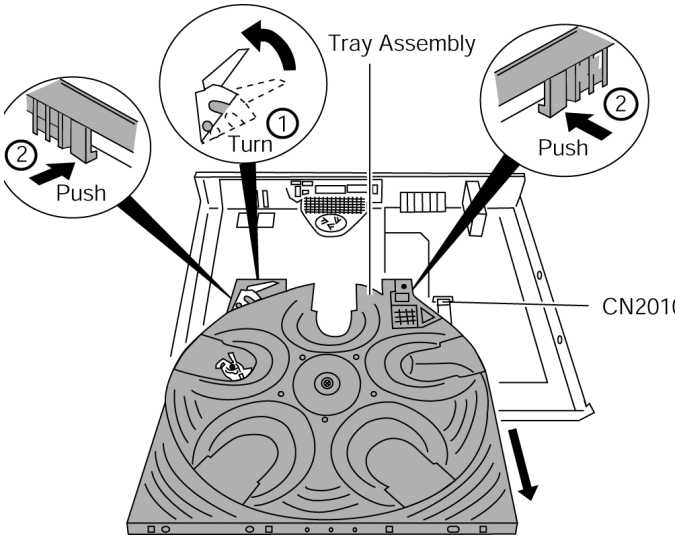

11.6. Disassembling the Mechanism Base Block

・Follow the (Step 1) - (Step 2) of Item 11.3.

・Follow the (Step 1) - (Step 6) of Item 11.4.

・Follow the (Step 1) - (Step 2) of Item 11.5.

Step 1 Remove 4 screws and unlock the lock.

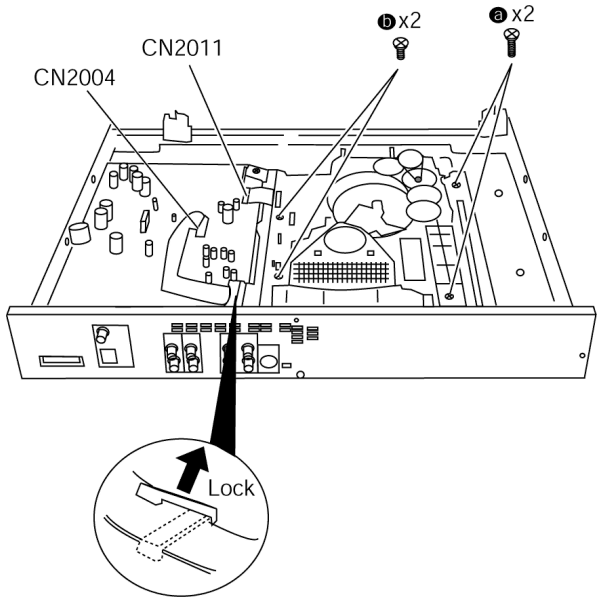

Step 2 Detach FFC cable at connectors (CN2004,CN2011) .

Step 3 Remove mechanism base block .

11.7. Disassembling the Main P.C.Board

・Follow the Item 11.6.

Step 1 Unlock the claw and remove 9 screws.

Step 2 Remove the main P.C.B.

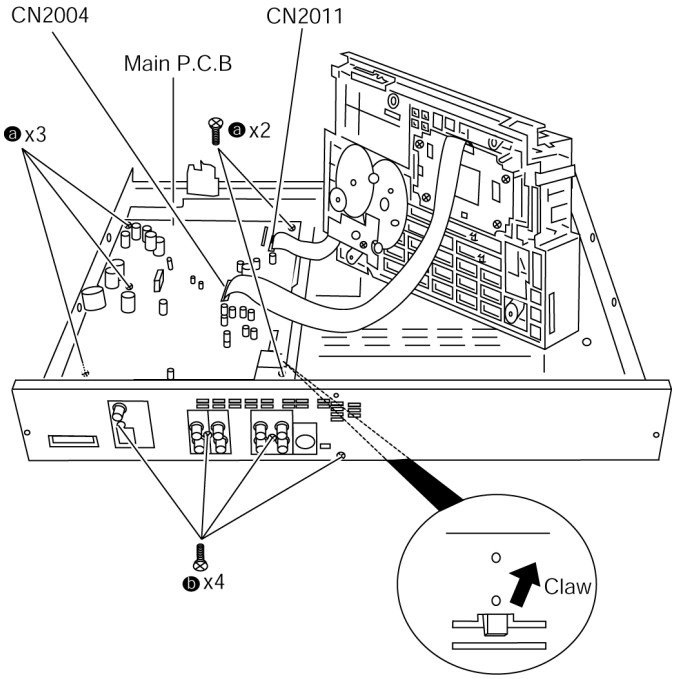

11.8. Removal of the Tray Base Guide (L) and Tray Base Guide (R)

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

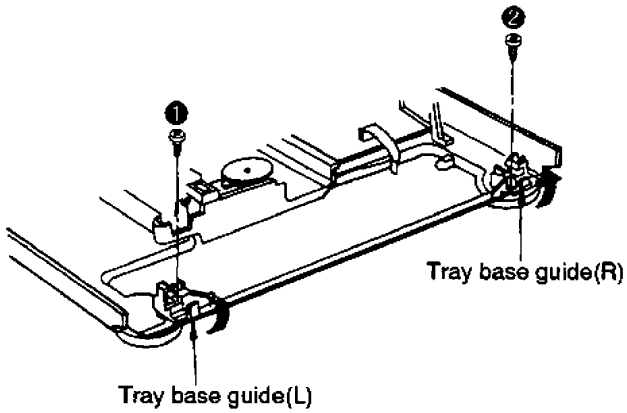

Step 1 Remove the 2 screws.

Step 2 Remove the tray base guide (L) and tray guide (R) in the direction of arrow.

11.9. Removal of the Rotary Tray

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

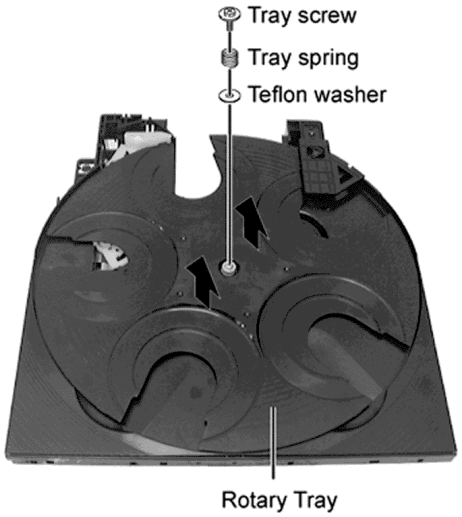

Step 1 Remove tray screw, tray spring and teflon washer.

Step 2 Remove rotary tray.

11.10. Removal of the Open Lock Gear

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

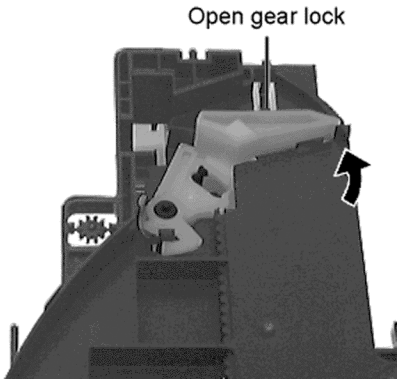

Step 1 Rotate open lock gear in the direction of arrow. (Anti-clockwise)

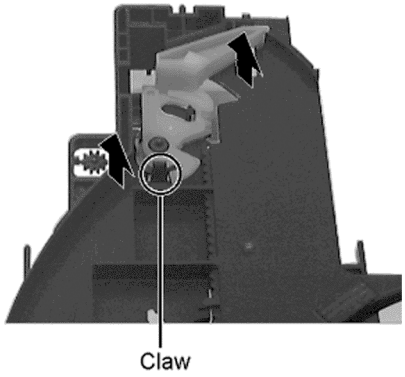

Step 2 Release claw of open lock gear, remove open lock gear in the direction of arrow.

11.11. Removal of the Close Lock Gear

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

Step 1 Remove 1 screw.

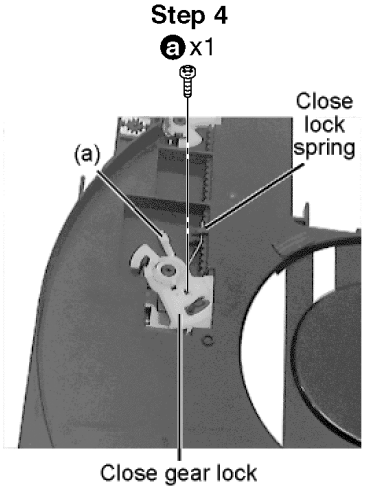

Step 2 Hook close lock spring to claw (a).

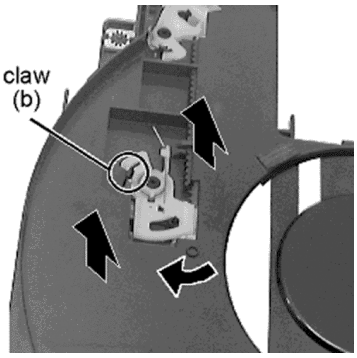

Step 3 Rotate close lock gear to direction of arrow, press claw (b) and pull out close lock gear.

11.12. Removal of the Tray Motor P.C.B. and Sensor P.C.B.

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

Step 1 Remove 2 screws.

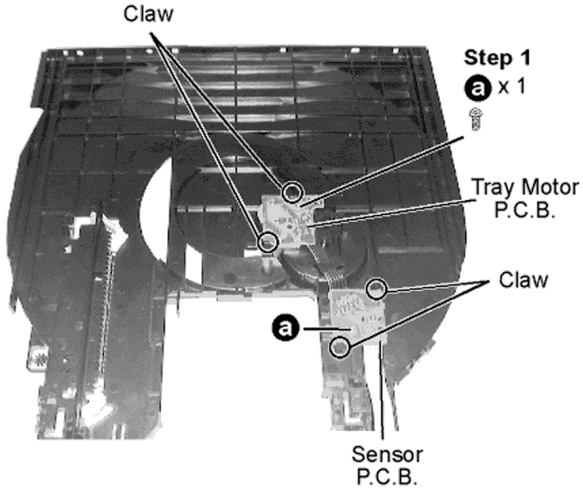

Step 2 Release 4 claws at Tray Motor P.C.B. and Sensor P.C.B.

11.13. Removal of the Traverse Unit

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.

Step 1 Rotate cam gear anti-clockwise. (Align at position (A) as marking on gear with arrow)

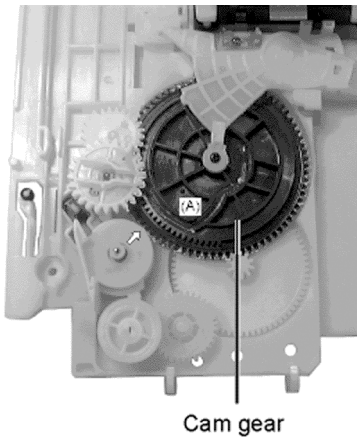

Step 2 Flip the base mecha unit in vertical position.

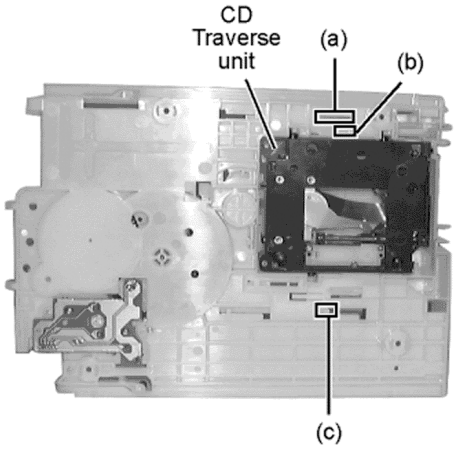

Step 3 Press upward (a), push backward (b) and press to left (c) to release CD traverse unit.

11.14. Removal of the Pulley Gear

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.

Step 1 Remove of the loading belt.

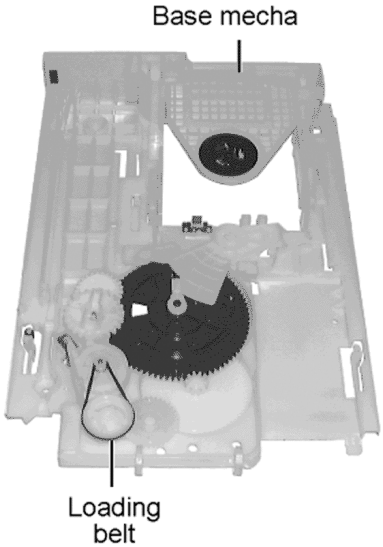

Step 2 Flip the base mecha.

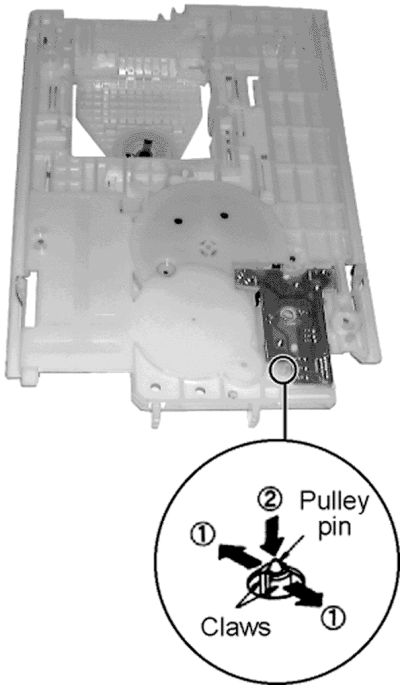

Step 3 Release the 2 claws in the direction of arrow (1), and then push the pulley pin in the direction of arrow (2).

11.15. Removal of the Loading Motor P.C.B.

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.

Step 1 Remove 2 screws.

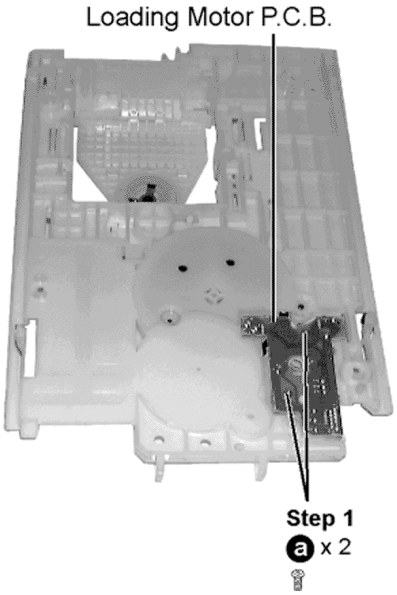

Step 2 Remove Loading Motor P.C.B.

11.16. Removal of the Drive Gear (A) & (B)

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Setp 3) of Item 11.6.

Step 1 Release the claw in the direction of arrow (1), and then push drive gear shaft up.

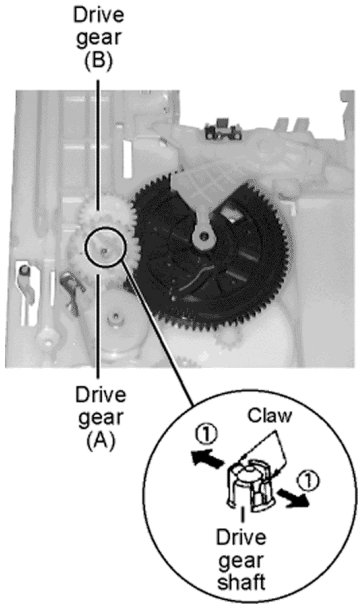

Step 2 Remove Drive Gear (A) and Drive Gear (B).

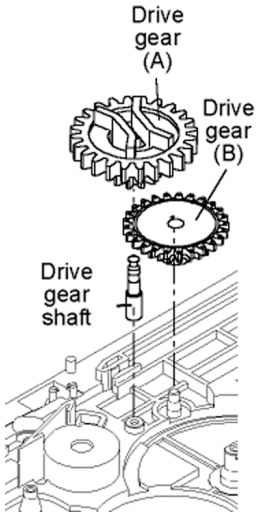

11.17. Disassembling the Fixed Plate, Magnet and Clamper

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.

Step 1 Release 3 claws in the direction of arrow.

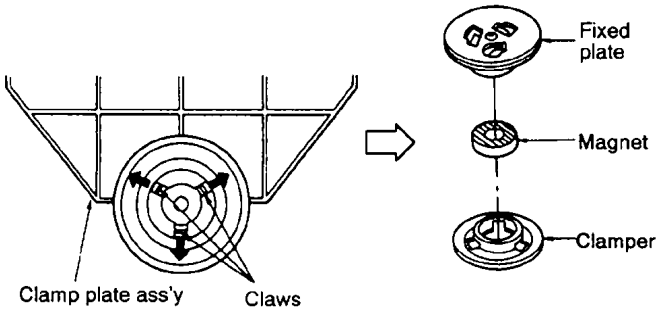

11.18. Removal of the Cam Gear & Support Piece

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.

Step 1 Rotate (A) in cam gear anti-clockwise.

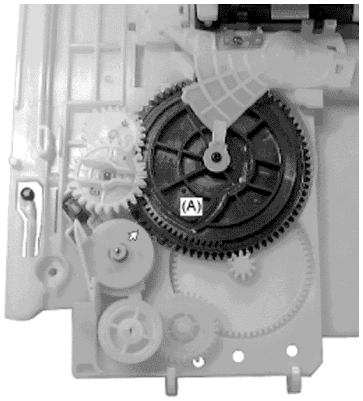

Step 2 Remove 1 screw and support piece.

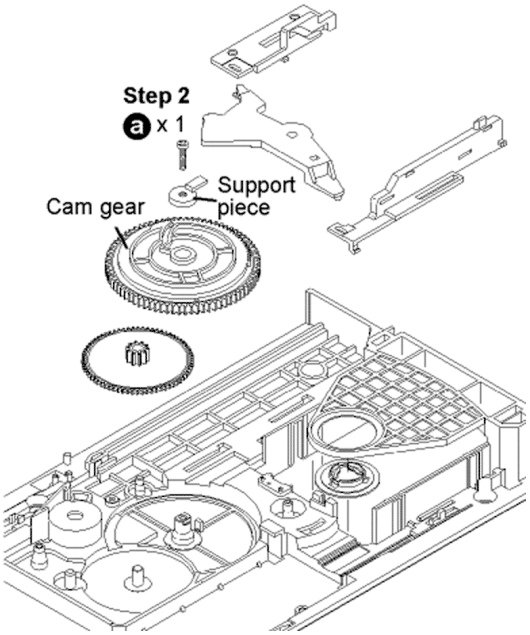

11.19. Removal of the Slide Plate (L) & (R) and Change Lever

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.

Step 1 Press the claw and push the Slide Plate (L) up.

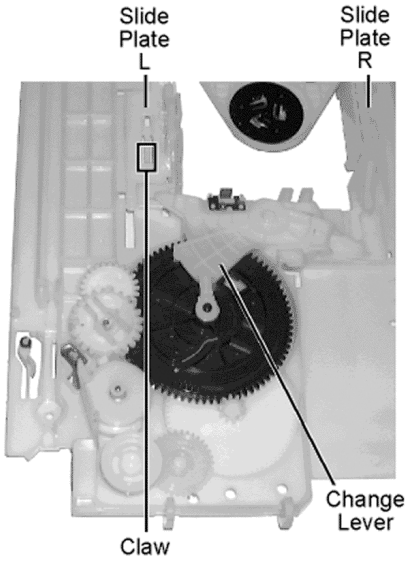

Step 2 Remove slide plate (L) & (R) and change lever as arrow shown.

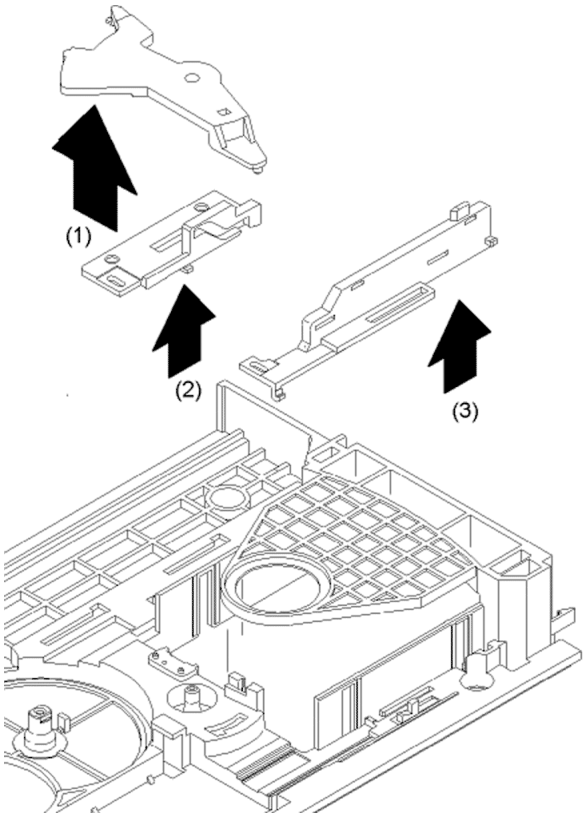

11.20. Assembly of Tray Base

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

Step 1 Rotate cam gear anti-clockwise. Align at position (C) as marking on gear with arrow.

Step 2 Make sure drive gear (A) at vertical position.

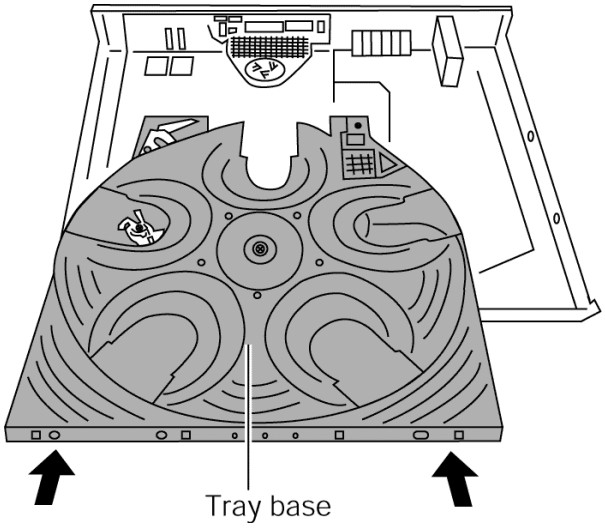

Step 3 Push tray base to the direction of arrow shown.

12 Service Position

Prepare service tools before proccess service position.

Service Tools	
Loading Motor P.C.B - Main P.C.B	REEX0465 (11 pin)

12.1. Checking & Repair Tray Motor P.C.B and Sensor P.C.B

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 6) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.

Step 1 Upset tray assembly.

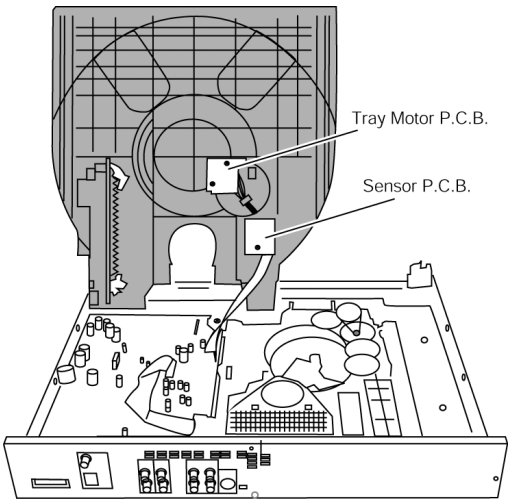

12.2. Checking & Repair Main P.C.B

- Follow the (Step 1) - (Step 2) of Item 11.3.
- Follow the (Step 1) - (Step 8) of Item 11.4.
- Follow the (Step 1) - (Step 2) of Item 11.5.
- Follow the (Step 1) - (Step 3) of Item 11.6.
- Follow the (Step 1) - (Step 2) of Item 11.7.

Step 1 Change cable (REZ1483) to extended cable (REEX0465).

Step 2 Connect all the cables.

Step 3 Position mechanism base block and tray assembly in horizontally.

Step 4 Connect the system cable and switch on the power.

Step 5 Insert CD into tray assembly.

Step 6 Press CD mode button to lock the CD.

Step 7 Turn over mechanism base block, tray assembly and Main P.C.B and position 3 of it in horizontally.

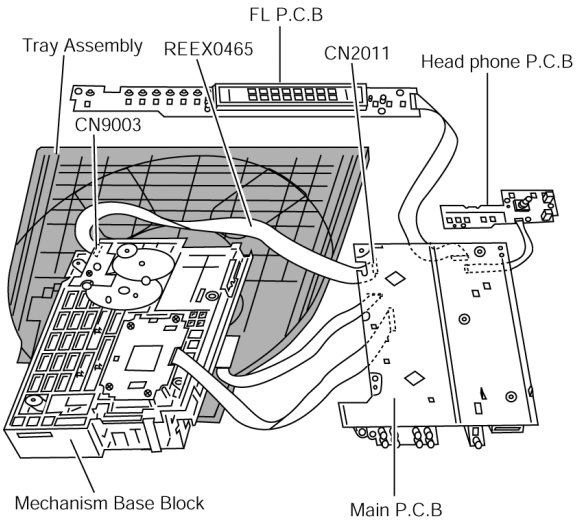

12.3. Checking & Repair DVD Module P.C.B

- Follow the Item 12.2.

Step 1 Remove 4 screws of DVD module P.C.B.

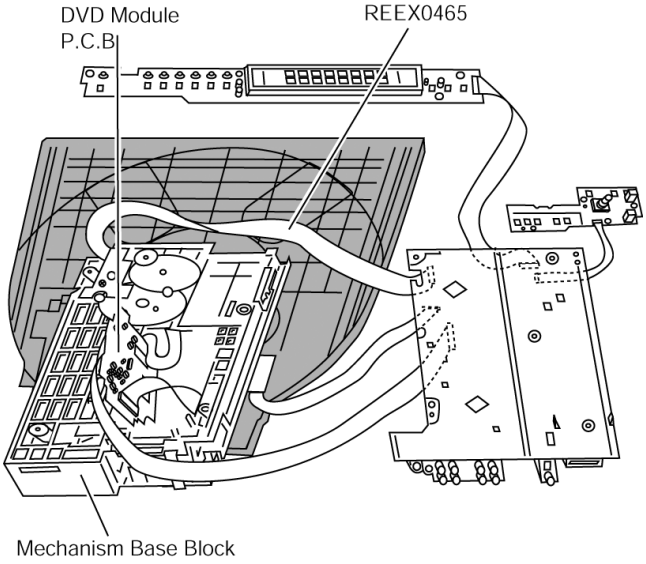

13 Optical Pick-up Self-Diagnosis and Replacement Procedure

13.1. Optical Pickup Breakdown Diagnosis

The optical pickup self-diagnosis function and tilt adjustment check function have been included in this unit. When repairing, use the following procedure for effective Self-diagnosis and tilt adjustment.Be sure to use the self-diagnosis function before replacing the optical pickup when "NO DISC" is displayed. As a guideline, you should replace the optical pickup when the value of the laser drive current is more than 55.

Note:

Press the power button to turn on the power, and check the value within three minutes before the unit warms up. (Otherwise, the result will be incorrect.)

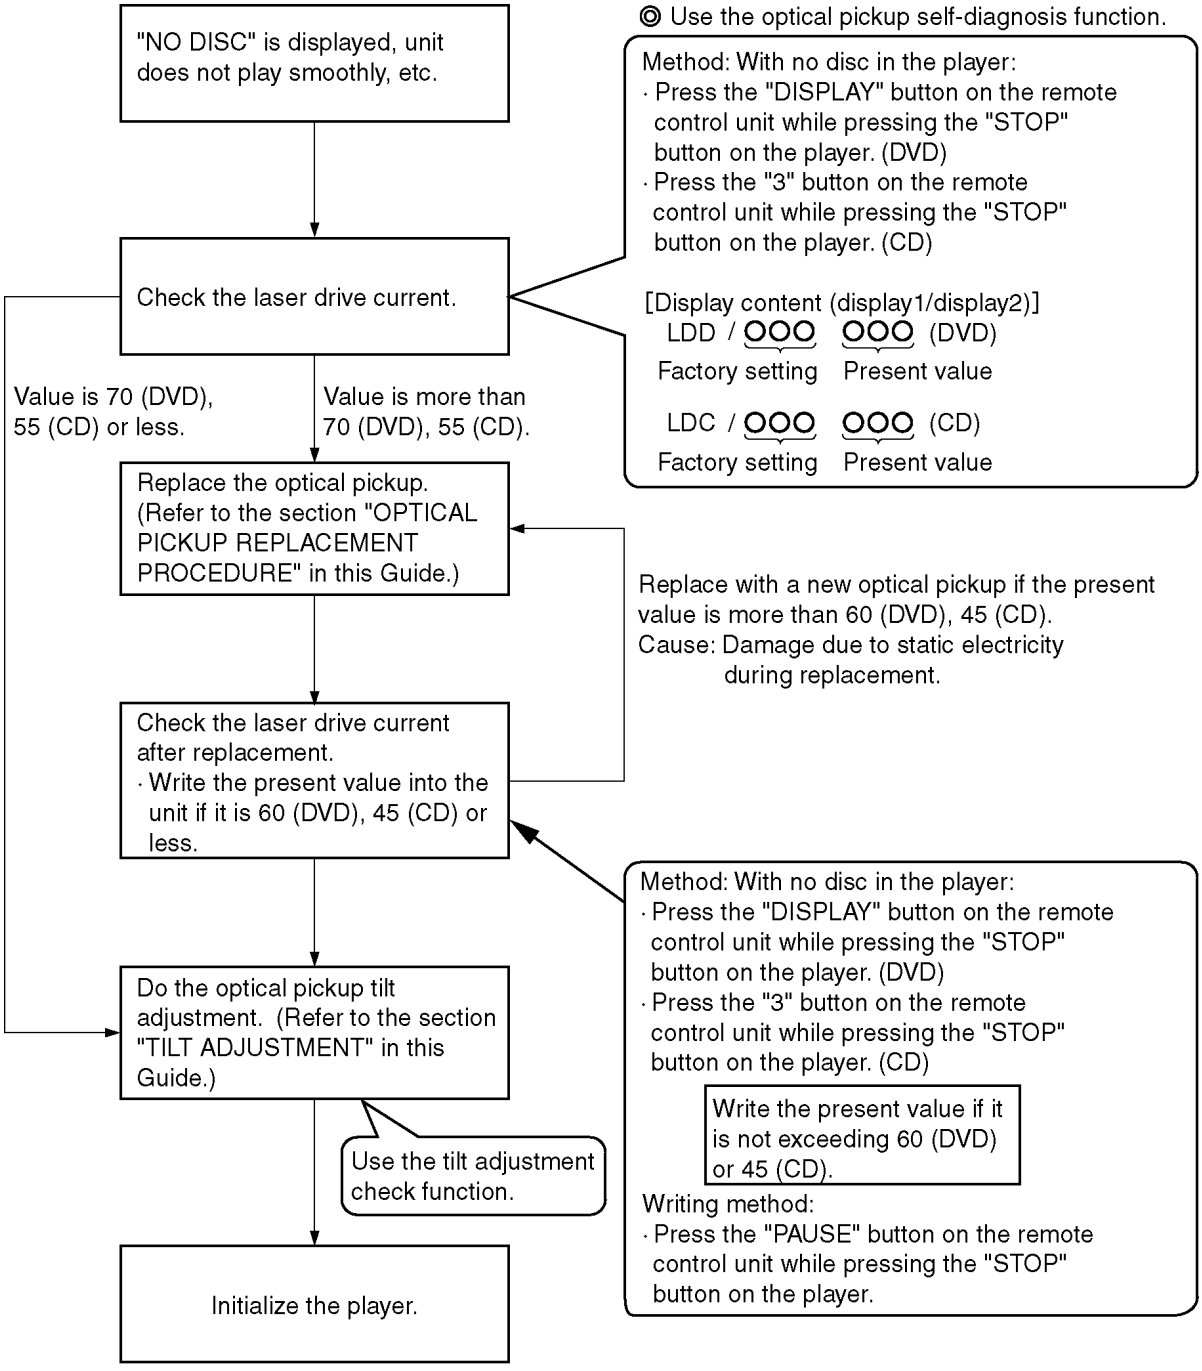
"NO DISC" is displayed, unit does not play smoothly, etc.
Check the laser drive current.
Value is 70 (DVD), 55 (CD) or less.
Value is more than 70 (DVD), 55 (CD).
Replace the optical pickup. (Refer to the section "OPTICAL PICKUP REPLACEMENT PROCEDURE" in this Guide.)
Check the laser drive current after replacement.
· Write the present value into the unit if it is 60 (DVD), 45 (CD) or less.
Do the optical pickup tilt adjustment. (Refer to the section "TILT ADJUSTMENT" in this Guide.)
Use the tilt adjustment check function.
Initialize the player.
◎ Use the optical pickup self-diagnosis function.
Method: With no disc in the player:
· Press the "DISPLAY" button on the remote control unit while pressing the "STOP" button on the player. (DVD)
· Press the "3" button on the remote control unit while pressing the "STOP" button on the player. (CD)
[Display content (display1/display2)]
LDD / OOO OOO (DVD)
Factory setting Present value
LDC / OOO OOO (CD)
Factory setting Present value
Replace with a new optical pickup if the present value is more than 60 (DVD), 45 (CD).
Cause: Damage due to static electricity during replacement.
Method: With no disc in the player:
· Press the "DISPLAY" button on the remote control unit while pressing the "STOP" button on the player. (DVD)
· Press the "3" button on the remote control unit while pressing the "STOP" button on the player. (CD)
Write the present value if it is not exceeding 60 (DVD) or 45 (CD).
Writing method:
· Press the "PAUSE" button on the remote control unit while pressing the "STOP" button on the player.

13.2. Service Mode Table 1

The service modes can be activated by pressing various button combination on the player and remote control unit.

Player buttons	Remote control unit buttons	Application	Note
STOP	0	Error code display	(Refer to the item, “13.3. DVD Self Diagnostic Function-Error Code”).
	5	Tilt adjustment	Refer to the item “16.4. Optical adjustment”).
	6	Area number and broadcasting system check	
	7	Built-in program version check	
	DISPLAY	DVD laser drive current check	Refer to the item “13.1. Optical Pickup Breakdown Diagnosis”.
	3	CD laser drive current check	
	PAUSE	Writing of laser drive current value after replacement of optical pickup (Do use this function only when optical pickup is replaced.)	
	≧10	Initialization of the player (factory setting is restored.) Used after replacement of micro-computer and its peripherals and printed circuit board.	

13.3. DVD Self Diagnostic Function-Error Code

Error Code	Error Content	Additional error explanation
	U, H error	
U11	Focus error	
H01	Tray loading error	
H02	Spindle servo error	(Spindle servo, DSC (IC8251) SP motor, CLV servo error)
H03	Traverse servo error	(Traverse motor, IC8251)
H04	Tracking servo error	
H05	Seek error	
H06	Power error	Cannot switch off the power because of the panel and system computer communication error
H07	Spindle motor drive error	Spindle motor
	DSC related	
F500	DSC error	DSC (IC8251) stops in the occurrence of servo error (startup, focus error, etc.)
F501	DSC not Ready error	DSC-system computer communication error (Communication failure caused by idling of DSC)
F502	DSC Time out error	Similar as F500
F503	DSC communication Failure	Communication error (result error occurred although communication command was sent)
F504	Error adjusting DSC data slice offset	
F505	DSC Attention error	Similar as F500
F506	Invalid media	Disc is flipped over, TOC unreadable, incompatible disc media
	ODC related	
F600	Access failure to management information caused by demodulation error	Operation stopped because navigation data is not accessible caused by the demodulation defect
F601	Indeterminate sector ID requested	Operation stopped caused by the request to access abnormal ID data
F602	Access failure to LEAD-IN caused by demodulation error	LEAD IN data unreadable
F603	Access failure to KEYDET caused by demodulation error	Access failure to CSS data of disc
F610	ODC abnormality	No permission for command execution
F611	6626 QCODE don’t read Error	Access failure to seek address in CD series
F612	No CRC OK for a specific time	Access failure to ID data in DVD series
F620	Laser safeguard: high temperature condition	
F621	Laser safeguard: circuit failure condition	
F630	No reply to KEY DET enquiry	(for internal use only)
F631	CPPM KEY DET is not available till the FILE terminal	(CPPM file system is unreadable caused by scratches)
F632	CPPM KEY DET is not available	Been revoked or falsified
	Disc code	
F103	Illegal highlight Position	Big possibility of disc specification violation during highlight display
	HIC Error	
F4FF	Force initialize failure (time out)	
	Micro computer error	
F700	MBX overflow	When replying message to disc manager
F701	Message command does not end	Next message is sent before replying to disc manager
F702	Message command changes	Message is changed before it is sent as a reply to disc manager
F880	Task number is not appropriate	Message coming from a non-existing task

Error Code	Error Content	Additional error explanation
F890	Sending message when message is being sent to AV task	Sending message to AV task
F891	Message couldn't be sent to AV task	Begin sending message to AV task
F893	FROM falsification	
F894	EEPROM abnormality	
F895	Language area abnormality	Firm version agreement check for factory preset setting failure prevention
F896	No existence model	Firm version agreement check for factory preset setting failure prevention
F897	Initialize is not completed	Initialize completion check for factory preset setting failure prevention
F898	Disagreement of hardware and software	Unsuitable combination of AV DECORDER, SDRAM and FLASH ROM (firmware)
F8A0	Message command is not appropriate	Begin sending message to AV task

Note:

An error code will be canceled if a power supply is turned OFF.

*1: CPPM is the copy guard function beforehand written in the disk for protection of copyrights.

13.4. Service mode table 2

Pressing various button combinations on the player and remote control unit can activate the service modes.

Item	Player mode and button combination	Function	Display	Cancellation method
Jitter check	In STOP (no disc) mode, press STOP button on the player, and "5" button on the remote control unit.	Jitter check Jitter rate is measured and displayed. Measurement is repeatedly done in the cycle of one second. Read error counter starts from zero upon mode setting. When target block data failed to be read out, the counter advances by one increment. When the failure is caused by minor error, it may be corrected when retried to enable successful reading. In this case, the counter advances by one. When the error persists even after retry, the counter may jump by two or more.	J _xxx/yyy_zz (display1/display2) Focus drive value Read error counter Jitter rate Jitter check mode Jitter rate is shown in decimal notation to one place of decimal. Focus drive value is shown in hexadecimal notation.	Press STOP or OPEN button.
Error code check	In STOP (no disc) mode, press STOP button on the player, and "0" button on the remote control unit. * With pointing of cursor up and down on display	Error code check The latest error code stored in EEPROM is displayed.	Error code (play_err) is expressed in the following convention. Error code = 0 x DAXX is expressed: → DVDnn UXX Error code = 0 x DBXX is expressed: → DVDnn HXX Error code = 0 x DXXX is expressed: → DVDnn FXXX Error code = 0 x 0000 is expressed: → DVDnn F--- * "xx" denotes the error code.	Cancelled automatically 5 seconds later.
Initial setting of laser drive current	In STOP (no disc) mode, press STOP button on the player, and PAUSE button on the remote control unit.	Initial setting of laser drive currentInitial current value for each of DVD laser and CD laser is separately saved in EEPROM.	LDO_/034_028 (display1/display2) CD laser current measurement DVD laser current measurement Laser current measurement mode The value denotes the current in decimal notation. The above example shows the initial current is 34mA and 28mA for DVD laser and CD laser respectively when the laser is switched on.	Cancelled automatically 5 seconds later.
DVD laser drive current measurement	In STOP (no disc) mode, press STOP button on the player, and DISPLAY button on the remote control unit.	DVD laser drive current measurement ·DVD laser drive current is measured and the result is displayed together with the initial value stored in EEPROM. After the measurement, DVD laser emission is kept on. It is turned off when POWER key is switched off. (It is also turned off when POWER button on the player is switched off.)	LDD_/034_032 (display1/display2) Measured current Initial current stored in EEPROM DVD laser current measurement mode The value denotes the current in decimal notation. The above example shows the initial current is 34mA and the measured value is 32mA.	Cancelled automatically 5 seconds later.
ADSC internal RAM data check	In STOP (no disc) mode, press STOP button on the player, and "1" button on the remote control unit.	ADSC internal RAM data check ·ADSC internal RAM data is read out and displayed.	OFA_6901 RAM data for specified address Address The value is shown in hexadecimal notation. The above example shows the data in ADSC address OFAh is 6901h.	Press STOP or PLAY button.
CD laser drive current measurement	In STOP (no disc) mode, press STOP button on the player, and "3" button on the remote control unit.	CD laser drive current measurement CD laser drive current is measured and the result is displayed together with the initial value stored in EEPROM. After the measurement, CD laser emission is kept on. It is turned off when POWER key is switched off. (It is also turned off when POWER button on the player is switched off.)	LDC_/028_026 (display1/display2) Measured current Initial current stored in EEPROM CD laser current measurement mode The value denotes the current in decimal notation. The above example shows the initial current is 28mA and the measured value is 26mA.	Cancelled automatically 5 seconds later.

Item	Player mode and button combination	Function	Display	Cancellation method
Version display	In STOP (no disc) mode, press STOP button on the player, and "7" button on the remote control unit.	Version display	srrr/xxyzzz (display1/display2) System controller release number System controller model number System controller generation Panel controller release number Panel controller model number	Cancelled automatically 5 seconds later.
Initialization	In STOP (no disc) mode, press STOP button on the player , and ≧10 button on the remote control unit.	Initialization User settings are cancelled and player is initialized to factory setting.	--INIT--	———
Area	In STOP (no disc) mode, press STOP button on the player, and "6" button on the remote control unit.	Area number and broadcasting system check	w__xy__zzz Panel controller jumper information N: NTSC / 6: PAL60 N: noPAL / P: PAL Region No.	Cancelled automatically 5 seconds later.
Region and syscon version display	In STOP (no disc) mode, press STOP button on the player, and "8" button on the remote control unit.	Region and syscon display	w_xxyzzz System controller version Destination System controller generation Region	Cancelled automatically 5 seconds later.
Communication error display	In STOP (no disc) mode, press STOP button on the player, and "MENU" button on the remote control unit.	Displays frequency of communication errors between system control IC and mechanism control IC during DVD module.	ER_02_30	Cancelled automatically 5 seconds later.

Item	Player mode and button combination	Function	Display	Cancellation method
Timer 1 check	In STOP (no disc) mode, press STOP button on the player, and "▲" button on the remote control unit.	Timer 1 check Laser operation timer Operation time is measured separately for DVD laser and CD laser.	T1_1234/5678 (display1/display2) Shown to the left is DVD laser time, and to the right CD laser time. Time is shown in 4 digits of decimal notation in a unit of 10 hours. "0000" will follow "9999".	Cancelled automatically 5 seconds later.
Timer 1 reset	While displaying Timer 1 data, press STOP button on the "▼" button on the remote control unit.	Timer 1 reset Laser operation timer Operation time of both DVD laser and CD laser is reset all at once.	T1_0000/0000 (display1/display2)	Cancelled automatically 5 seconds later.
Timer 2 check	In STOP (no disc) mode, press STOP button on the player, and " ▶ " button on the remote control unit.	Timer 2 check Spindle motor operation timer	T2_12345 Time is shown in 5 digits of decimal notation in a unit of 10 hours. "00000" will follow "99999".	Cancelled automatically 5 seconds later.
Timer 2 reset	While displaying Timer 2 data, press STOP button on the player and " ◀ " button on the remote control unit.	Timer 2 reset Spindle motor operation timer	T2_00000	Cancelled automatically 5 seconds later.

13.5. Sales demonstration lock function

This function prevents discs from being lost when the unit is used for sales demonstrations by disabling the disc eject function. "LOCKED" is displayed on the unit, and ordinary operation is disabled.

13.5.1. Setting

· Prohibiting removal of disc

1. Select the DVD/CD function.
2. Press and hold down the ■ button on the player and the power button on the remote controller unit for at least three seconds. (The message, "___LOCKED_" appears when the function is activated.)

Note:

OPEN/CLOSE ⏏ , DISC CHECK and DISC CHANGE buttons are invalid and the player displays "___LOCKED_" while the lock function mode is entered.

· Prohibiting operation of selector and disk

1. Select the DVD/CD function.
2. Press and hold down the ► button on the player and the power button on the remote controller unit for at least three seconds. (The message, "___LOCKED_" appears when the function is activated.)

Note:

The following buttons are invalid and the player displays "___LOCKED_" while the lock function mode is entered.

Player	⏏ , ■ , ⏸ , SELECTOR, ⏭ , ⏮ , VOLUME KNOB, DISC CHECK, DISC CHANGE, DISC1-DISC5
Remote controller unit	SLEEP, REPEAT, 0~9, ≧10 , RETURN, TOP MENU, ■ , ⏸ , ⏮ , ⏭ , ◀◀ , ▶▶ , POSITION MEMORY, TUNER/BAND, D.MIX, CH SELECT/ TEST, SET UP/ MUTING, DISPLAY, GROUP, TV, VCR/ AUX, QUICK REPLAY, SUBTITLE, FL DISPLAY, CH & VOLUME

13.5.2. Cancellation

The lock can be cancelled by the same procedure as used in setting. ("UNLOCK" is displayed on cancellation. Disconnecting the power cable from power outlet does not cancel the lock.)

13.6. Handling After Completing Repairs

Use the following procedure after completing repairs.

13.6.1. Method

Confirm that the power is turned on:

1. Press the "OPEN/CLOSE" button to close the tray.
2. Press the "POWER" button to turn off the power.
3. Disconnect the power plug from the outlet.

13.6.2. Precautions

Do not disconnect the power plug from the outlet with the tray still open, then close the tray manually.

14 Self-Diagnosis Function

14.1. Automatic Displayed Error Codes

14.1.1. Automatic Display Function

For a power unit error, the code is automatically displayed.

F61: Automatically displayed on the LCD of the player.

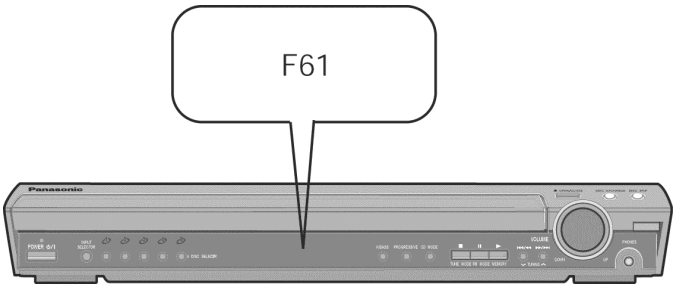

14.1.2. Re-Display

· **For F61 Display**

– When the code, F61 is displayed, the power is automatically turned off.

– The code, F61 is displayed for three seconds, and then the current time appears.

– To retrieve the code, turn on the power button so that the code F61 appears, however, is switched to time display after three seconds, and the power is automatically turned off.

14.1.3. Description of Error Code

14.1.3.1. F61

· **State, Condition**

When the power is turned on, the unit is automatically turned off. The power does not turn on.

· **Cause, Troubleshooting**

Power circuit system failure and/or direct current flown to speaker terminal
Identify the cause and replace with new parts.

14.2. Memorized Error Codes

14.2.1. Activating Self-Diagnosis Function and Displaying Method

1. Turn on the power.
2. Select DVD/CD function. With no DVD/CD inserted in the player, press and hold down the F_SKIP ►►I button simultaneously for at least two seconds, and press the “CD MODE” button for at least two seconds in order to display “T_____”.
3. Press the ■ button. If a memorized error is detected, the result of self diagnosis is displayed. (Ex.: T H15)(See table below)
   If several errors are detected, press the ■ button to display each.

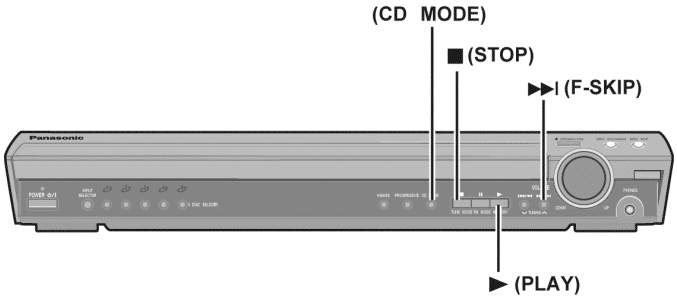

14.2.2. Re-Display

· Press the power button to turn off the power, and then turn on the power.

· The details of self diagnosis are stored in the unit memory. To retrieve them, follow the procedure described the above, “Activating Self-Diagnosis Function and Displaying Method”.

14.2.3. Deleting Details of Self Diagnosis

· After repair, press and hold down the ■ button for at least five seconds, “_ CLEAR __” appears for a second and then “T_____” appears. (Deleting the details of self diagnosis)

· After repairing errors, be sure to delete the details of self diagnosis.

Error Code	State, Condition	Cause, Troubleshooting
H15	The disc tray cannot be opened: it closes spontaneously.	Disc tray open/close detection switch (S9001) failure. (Check and replace)
H16	The disc tray cannot be closed: it opens spontaneously.	

15 Service Precautions

15.1. Recovery after the DVD player is repaired

・When FLASH ROM IC or DVD module P.C.B. is replaced, carry out the recovery processing to optimize the drive.

Playback the recovery disk to process the recovery automatically.

・Recovery disc (Product number: RFKZD03R005)

・Performing recovery

1. Load the recovery disc RFKZD03R005 on to the player and run it.
2. Recovery is performed automatically. When it is finished, a message appears on the screen.
3. Remove the recovery disc.
4. Turn off the power.

Note:

This unit requires no initialization process carried out after the traditional DVD players were repaired.

When the recovery measures are taken, the customer setting will return to the factory setting as same as the procedure described in item of "Initialization" in 13.4. is carried out. Write down the contents of the setting before recovery processing, and reset the player.

15.2. Firmware version-up of the DVD player

・The firmware of the DVD player may be renewed to improve the quality including operability and playability to the substandard discs.processing to optimize the drive.

The recovery disc has also firmware version-up.

・After version-up, recovery processing is executed automatically.

・Part number of the recovery disc for version-up will be noticed when it is supplied.

・Updating firmware

1. Load the recovery disc that is supplied to the player and run it.
2. Firmware version of the player is automatically checked. Appropriate message appears whenever necessary.
3. Using remote controller´s cursor key, select whether version updating is to be done or not. (Selection of Yes/No)
4. a. If Yes is selected, version updating is performed.
   b. If No is selected, only recovery is performed.
5. a. When updating is finished, remove the disc according to the message appearing on the screen.
   b. Remove the disc according to the message appearing on the screen.
6. Turn off the power.

Note:

If the AC power supply is shut out during version-up due to a power failure, the version-up is improperly carried out.

In such a case, replace the FLASH ROM IC and carry out the version-up again.

16 Adjustment Procedure

16.1. Service Tools and Equipment

Application	Name	Number
Tilt adjustment	DVD test disc	DVDT-S20 [SPG]
	TORX screw driver (T6)	Available on sales route. (T6) or RFKZ0185 [SPG]
Others	Grease	RFKXPG641 [SPG]
Confirmation	CD test disc	PVCD-K06 or any other commercially available disc
	VCD test disc	PVCD-K06 or any other commercially available disc
	Recovery disc	RFKZD03R005 [SPG]

16.2. Important points in adjustment

16.2.1. Important points in optical adjustment

・Before starting optical adjustment, be sure to take anti-static measures.

・Optical pickup tilt adjustment is needed after replacement of the following components.

1. Optical pickup unit
2. Spindle motor unit
3. Optical pickup peripheral parts (such as rail)

Notes

Adjustment is generally unnecessary after replacing other parts of the traverse unit. However, make adjustment if there is a noticeable degradation in picture quality. Optical adjustments cannot be made inside the optical pickup. Adjustment is generally unnecessary after replacing the traverse unit.

16.2.2. Important points in electrical adjustment

・Follow the adjustment procedures described in this Manual.

16.3. Storing and Handling Test Discs

・Surface precision is vital for DVD test discs. Be sure to store and handle them carefully.

1. Do not place discs directly onto the workbench, etc., after use.
2. Handle discs carefully in order to maintain their flatness. Place them into their case after use and store them vertically. Store discs in a cool place where they are not exposed to direct sunlight or air from air conditioners.
3. Accurate adjustment will not be possible if the disc is warped when placed on a surface made of glass, etc. If this happens, use a new test disc to make optical adjustments.
4. If adjustment is done using a warped disc, the adjustment will be incorrect and some discs will not be playable.

16.4. Optical adjustment

16.4.1. Optical pickup tilt adjustment

Measurement point	Adjustment point	Mode	Disc
	Tangential adjustment screw Tilt adjustment screw	T01 (inner periphery) play T30 (center periphery) T43 (outer periphery) play	DVDT-S20 [SPG]
Measuring equipment		Adjustment value	
None (Main unit display for servicing is used.)		Adjust to the minimum jitter value.	

16.4.1.1. Adjustment procedure

1. While pressing STOP button on the main unit, press "5" on the remote control unit.
2. Confirm that "J_xxx/yyy_zz" (display1/display2) is shown on the front display.

   For your information:

   "yyy" and "zz" shown to the right have nothing to do with the jitter value. "yyy" is the error counter, while "zz" is the focus drive value.

   Note:

   Jitter value appears on the front display.
3. Play test disc T30 (center periphery).
4. Adjust tangential adjustment screw so that the jitter value is minimized.
5. Play test disc T30 (center periphery).
6. Adjust tilt adjustment screw 1 so that the jitter value is minimized.
7. Play test disc T30 (center periphery).
8. Adjust tilt adjustment screw 2 so that the jitter value is minimized.
9. Repeat adjusting tilt adjustment screws 1 and 2 alternately until the jitter value is minimized.

16.4.1.2. Important points

1. Make tangential adjustment first, and then make tilt adjustment.
2. Repeat adjusting two or three times to find the optimum point.
3. Finish the procedure with tilt adjustment.

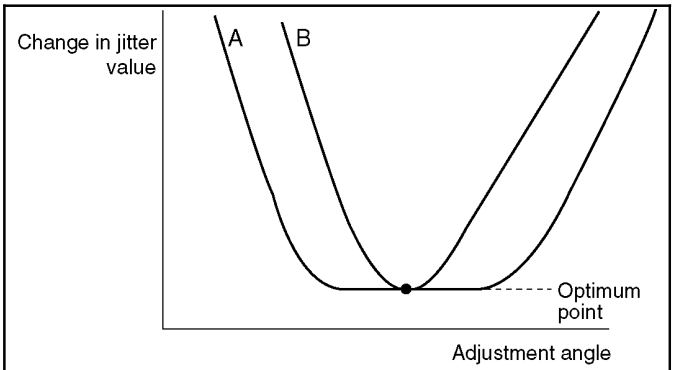

Jitter value depends on the model:

1. If the jitter value changes like B, the optimum point is easy to find.
2. If the jitter value changes like A, set the optimum point near the middle.

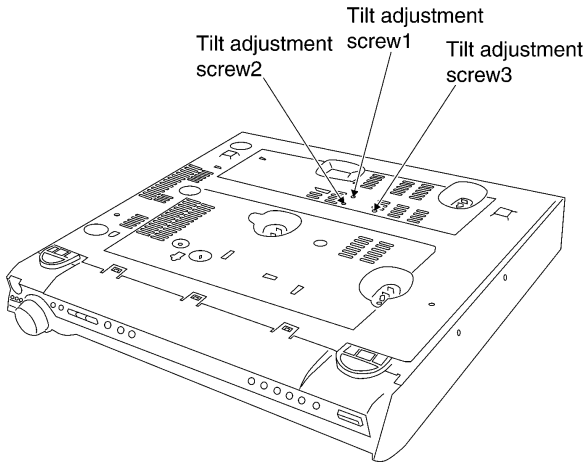

16.4.1.3. Check after adjustment

Play test disc or any other disc to make sure there is no picture degradation in the inner, middle and outer peripheries, and no audio skipping. After adjustment is finished, lock each adjustment screw in position using screw lock.

16.4.1.4. Procedure for screw lock

1. After adjustment, remove top cover, tray, clamper base and traverse unit in this sequence.
2. Lay the traverse unit upside down, and fix adjustment screw with screw lock.
3. After fixing, reassemble traverse unit, clamper base, tray and top cover.

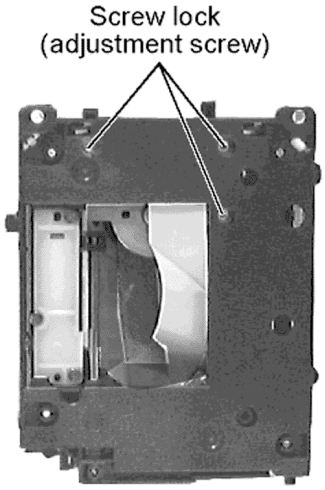

17 Abbreviations

INITIAL/LOGO		ABBREVIATIONS
A	A0~UP	ADDRESS
	ACLK	AUDIO CLOCK
	AD0~UP	ADDRESS BUS
	ADATA	AUDIO PES PACKET DATA
	ALE	ADDRESS LATCH ENABLE
	AMUTE	AUDIO MUTE
	AREQ	AUDIO PES PACKET REQUEST
	ARF	AUDIO RF
	ASI	SERVO AMP INVERTED INPUT
	ASO	SERVO AMP OUTPUT
	ASYNC	AUDIO WORD DISTINCTION SYNC
B	BCK	BIT CLOCK (PCM)
	BCKIN	BIT CLOCK INPUT
	BDO	BLACK DROP OUT
	BLKCK	SUB CODE BLOCK CLOCK
	BOTTOM	CAP. FOR BOTTOM HOLD
	BYP	BYPATH
	BYTCK	BYTE CLOCK
C	CAV	CONSTANT ANGULAR VELOCITY
	CBDO	CAP. BLACK DROP OUT
	CD	COMPACT DISC
	CDSCK	CD SERIAL DATA CLOCK
	CDSRDATA	CD SERIAL DATA
	CDRF	CD RF (EFM) SIGNAL
	CDV	COMPACT DISC-VIDEO
	CHNDATA	CHANNEL DATA
	CKSL	SYSTEM CLOCK SELECT
	CLV	CONSTANT LINEAR VELOCITY
	COFTR	CAP. OFF TRACK
	CPA	CPU ADDRESS
	CPCS	CPU CHIP SELECT
	CPDT	CPU DATA
	CPUADR	CPU ADDRESS LATCH
	CPUADT	CPU ADDRESS DATA BUS
	CPUIRQ	CPU INTERRUPT REQUEST
	CPRD	CPU READ ENABLE
	CPWR	CPU WRITE ENABLE
	CS	CHIP SELECT
	CSYNCIN	COMPOSITE SYNC IN
	CSYNCOUT	COMPOSITE SYNC OUT
D	DACCK	D/A CONVERTER CLOCK
	DEEMP	DEEMPHASIS BIT ON/OFF
	DEMPH	DEEMPHASIS SWITCHING
	DIG0~UP	FL DIGIT OUTPUT
	DIN	DATA INPUT
	DMSRCK	DM SERIAL DATA READ CLOCK
	DMUTE	DIGITAL MUTE CONTROL
	DO	DROP OUT
	DOUT0~UP	DATA OUTPUT
	DRF	DATA SLICE RF (BIAS)
	DRPOUT	DROP OUT SIGNAL
	DREQ	DATA REQUEST
	DRESP	DATA RESPONSE
	DSC	DIGITAL SERVO CONTROLLER
	DSLF	DATA SLICE LOOP FILTER
	DVD	DIGITAL VIDEO DISC

INITIAL/LOGO		ABBREVIATIONS
E	EC	ERROR TORQUE CONTROL
	ECR	ERROR TORQUE CONTROL REFERENCE
	ENCSEL	ENCODER SELECT
	ETMCLK	EXTERNAL M CLOCK (81MHz/40.5MHz)
	ETSCLK	EXTERNAL S CLOCK (54MHz)
F	FBAL	FOCUS BALANCE
	FCLK	FRAME CLOCK
	FE	FOCUS ERROR
	FFI	FOCUS ERROR AMP INVERTED INPUT
	FEO	FOCUS ERROR AMP OUTPUT
	FG	FREQUENCY GENERATOR
	FSC	FREQUENCY SUB CARRIER
	FSCK	FS (384 OVER SAMPLING) CLOCK
G	GND	COMMON GROUNDING (EARTH)
H	HA0~UP	HOST ADDRESS
	HD0~UP	HOST DATA
	HINT	HOST INTERRUPT
	HRXW	HOST READ/WRITE
I	IECOUT	IEC958 FORMAT DATA OUTPUT
	IPFRAG	INTERPOLATION FLAG
	IREF	I (CURRENT) REFERENCE
	ISEL	INTERFACE MODE SELECT
L	LDON	LASER DIODE CONTROL
	LPC	LASER POWER CONTROL
	LRCK	L CH/R CH DISTINCTION CLOCK
M	MA0~UP	MEMORY ADDRESS
	MCK	MEMORY CLOCK
	MCKI	MEMORY CLOCK INPUT
	MCLK	MEMORY SERIAL COMMAND CLOCK
	MDATA	MEMORY SERIAL COMMAND DATA
	MDQ0~UP	MEMORY DATA INPUT/OUTPUT
	MDQM	MEMORY DATA I/O MASK
	MLD	MEMORY SERIAL COMMAND LOAD
	MPEG	MOVING PICTURE EXPERTS GROUP
O	ODC	OPTICAL DISC CONTROLLER
	OFTR	OFF TRACKING
	OSCI	OSCILLATOR INPUT
	OSCO	OSCILLATOR OUTPUT
	OSD	ON SCREEN DISPLAY
P	P1~UP	PORT
	PCD	CD TRACKING PHASE DIFFERENCE
	PCK	PLL CLOCK
	PDVD	DVD TRACKING PHASE DIFFERENCE
	PEAK	CAP. FOR PEAK HOLD
	PLLCLK	CHANNEL PLL CLOCK
	PLLOK	PLL LOCK
	PWMCTL	PWM OUTPUT CONTROL
	PWMDA	PULSE WAVE MOTOR DRIVE A
	PWMOA, B	PULSE WAVE MOTOR OUT A, B

INITIAL/LOGO		ABBREVIATIONS
R	RE	READ ENABLE
	RFENV	RF ENVELOPE
	RFO	RF PHASE DIFFERENCE OUTPUT
	RS	(CD-ROM) REGISTER SELECT
	RSEL	RF POLARITY SELECT
	RST	RESET
	RSV	RESERVE
S	SBI0, 1	SERIAL DATA INPUT
	SBO0	SERIAL DATA OUTPUT
	SBT0, 1	SERIAL CLOCK
	SCK	SERIAL DATA CLOCK
	SCKR	AUDIO SERIAL CLOCK RECEIVER
	SCL	SERIAL CLOCK
	SCLK	SERIAL CLOCK
	SDA	SERIAL DATA
	SEG0~UP	FL SEGMENT OUTPUT
	SELCLK	SELECT CLOCK
	SEN	SERIAL PORT ENABLE
	SIN1, 2	SERIAL DATA IN
	SOUT1, 2	SERIAL DATA OUT
	SPDI	SERIAL PORT DATA INPUT
	SPDO	SERIAL PORT DATA OUTPUT
	SPEN	SERIAL PORT R/W ENABLE
	SPRCLK	SERIAL PORT READ CLOCK
	SPWCLK	SERIAL PORT WRITE CLOCK
	SQCK	SUB CODE Q CLOCK
	SQCX	SUB CODE Q DATA READ CLOCK
	SRDATA	SERIAL DATA
	SRMADR	SRAM ADDRESS BUS
	SRMDT0~7	SRAM DATA BUS 0~7
	SS	START/STOP
	STAT	STATUS
	STCLK	STREAM DATA CLOCK
	STD0~UP	STREAM DATA
	STENABLE	STREAM DATA INPUT ENABLE
	STSEL	STREAM DATA POLARITY SELECT
	STVALID	STREAM DATA VALIDITY
	SUBC	SUB CODE SERIAL
	SBCK	SUB CODE CLOCK
	SUBQ	SUB CODE Q DATA
	SYSCLK	SYSTEM CLOCK
T	TE	TRACKING ERROR
	TIBAL	BALANCE CONTROL
	TID	BALANCE OUTPUT 1
	TIN	BALANCE INPUT
	TIP	BALANCE INPUT
	TIS	BALANCE OUTPUT 2
	TPSN	OP AMP INPUT
	TPSO	OP AMP OUTPUT
	TPSP	OP AMP INVERTED INPUT
	TRCRS	TRACK CROSS SIGNAL
	TRON	TRACKING ON
	TRSON	TRAVERSE SERVO ON

INITIAL/LOGO		ABBREVIATIONS
V	VBLANK	V BLANKING
	VCC	COLLECTOR POWER SUPPLY VOLTAGE
	VCDCONT	VIDEO CD CONTROL (TRACKING BALANCE)
	VDD	DRAIN POWER SUPPLY VOLTAGE
	VFB	VIDEO FEED BACK
	VREF	VOLTAGE REFERENCE
	VSS	SOURCE POWER SUPPLY VOLTAGE
W	WAIT	BUS CYCLE WAIT
	WDCK	WORD CLOCK
	WEH	WRITE ENABLE HIGH
	WSR	WORD SELECT RECEIVER
X	X	X´ TAL
	XALE	X ADDRESS LATCH ENABLE
	XAREQ	X AUDIO DATA REQUEST
	XCDROM	X CD ROM CHIP SELECT
	XCS	X CHIP SELECT
	XCSYNC	X COMPOSITE SYNC
	XDS	X DATA STROBE
	XHSYNCO	X HORIZONTAL SYNC OUTPUT
	XHINT	XH INTERRUPT REQUEST
	XI	X´ TAL OSCILLATOR INPUT
	XINT	X INTERRUPT
	XMW	X MEMORY WRITE ENABLE
	XO	X´ TAL OSCILLATOR OUTPUT
	XRE	X READ ENABLE
	XSRMCE	X SRAM CHIP ENABLE
	XSRMOE	X SRAM OUTPUT ENABLE
	XSRMWE	X SRAM WRITE ENABLE
	XVCS	X V-DEC CHIP SELECT
	XVDS	X V-DEC CONTROL BUS STROBE
	XVSYNCO	X VERTICAL SYNC OUTPUT

18 Voltage Chart

18.1. DVD Module P.C.B.

Ref No.	IC8001																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	3.1	3.0	0	3.1	3.3	3.4	3.0	3.1	0	0	3.1	3.4	2.9	3.1	3.0	0	3.0	3.0	3.4	0
Ref No.	IC8001																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	3.4	-	-	1.5	0.8	1.2	1.0	3.4	0	0.5	1.0	-	-	3.4	0	-	-	2.4	-	-
Ref No.	IC8001																			
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
CD PLAY	-	-	-	1.2	-	-	-	3.4	0	-	-	2.5	0	0	0	-	-	-	-	-
Ref No.	IC8001																			
MODE	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
CD PLAY	-	3.4	0	0	0.1	1.0	1.0	3.0	2.8	3.1	0.1	0.1	3.2	0	1.7	.0	1.7	0.1	3.4	0
Ref No.	IC8001																			
MODE	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
CD PLAY	3.4	0.1	3.4	3.4	0.1	0.1	0	0.1	1.2	0	0	0	0	0.1	0.1	0	0	3.4	0.8	0.1
Ref No.	IC8001																			
MODE	101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120
CD PLAY	2.4	2.1	1.9	0.3	0	1.9	3.4	2.1	2.1	1.9	1.8	1.1	1.1	1.7	1.7	1.7	1.7	3.3	2.0	1.7
Ref No.	IC8001																			
MODE	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140
CD PLAY	1.5	0	0	0.1	0	0	2.3	1.7	2.6	2.6	2.6	2.6	2.6	2.6	2.4	2.4	0	2.4	0	0
Ref No.	IC8001																			
MODE	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160
CD PLAY	0.5	0	0	0	0	1.1	2.2	1.7	2.6	2.6	2.6	2.6	2.6	2.6	2.4	2.4	0	2.4	3.4	0
Ref No.	IC8001																			
MODE	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180
CD PLAY	3.4	0	0	0	0	3.4	3.4	1.7	0	1.7	0.9	1.2	0	0	0	0.9	1.7	3.4	0	3.4
Ref No.	IC8001																			
MODE	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200
CD PLAY	0	3.4	0	0	-	-	-	-	-	3.4	0	1.0	1.7	0	1.5	3.4	1.3	0.5	1.5	1.4
Ref No.	IC8001																			
MODE	201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220
CD PLAY	0	3.4	3.4	1.2	0	1.7	1.4	1.4	3.4	3.4	1.0	1.8	0	-	-	3.4	2	0	1.2	1.6
Ref No.	IC8001																			
MODE	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240
CD PLAY	0.2	0	1.7	0.2	3.4	1.7	0.1	0.9	0	0.1	3.4	1.6	-	2.2	0	1.2	0.1	0.1	3.4	3.2
Ref No.	IC8001																			
MODE	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256				
CD PLAY	1.7	0	1.7	3.3	3.4	3.4	0	3.3	2.6	0	3.6	2.8	0	2.9	3.4	2.9				
Ref No.	IC8051																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	3.4	3.2	3.4	3.1	3.2	0.1	3.2	3.4	3.1	3.0	-	0.1	2.9	3.4	2.7	3.3	3.3	3.3	3.0	2.2
Ref No.	IC8051																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	1.6	0.1	-	-	-	-	3.4	0	-	-	-	-	-	-	-	-	3.4	1.7	2.7	-
Ref No.	IC8051																			
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54						
CD PLAY	0.1	3.0	3.4	3.2	3.1	0	3.0	3.1	3.4	2.8	2.8	0	2.9	0						
Ref No.	IC8111																			
MODE	1	2	3	4	5	6	7	8												
CD PLAY	3.4	0	0.1	-	-	0	0	4.9												
Ref No.	IC8251																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	1.7	1.7	1.7	1.9	1.9	1.8	0	4.9	3.4	0.1	2.6	2.4	2.5	2.5	4.5	4.6	5.1	4.0	0.1	0.6
Ref No.	IC8251																			
MODE	21	22	23	24	25	26	27	28												
CD PLAY	9.6	9.4	1.8	1.7	1.7	1.7	3.4	3.2												
Ref No.	IC8421																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	0	3.4	3.0	3.4	1.7	0.9	1.7	1.7	4.8	0	0.9	0.1	0.1	0	2.4	2.4	4.9	0	2.4	2.4
Ref No.	IC8421																			
MODE	21	22	23	24	25	26	27	28												
CD PLAY	2.4	4.9	-	0	2.5	2.4	2.4	4.8												
Ref No.	IC8601																			
MODE	1	2	3																	
CD PLAY	0	3.2	3.4																	
Ref No.	IC8606																			
MODE	1	2	3	4	5															
CD PLAY	0.7	1.2	0	0	0															
Ref No.	IC8611																			
MODE	1	2	3	4	5	6	7	8												
CD PLAY	0.1	0.1	0.1	0.1	3.4	3.4	0.1	3.4												
Ref No.	IC8651																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	-	-	-	-	-	-	-	-	-	-	-	2.9	3.4	3.4	1.0	-	-	-	-	-
Ref No.	IC8651																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	-	-	-	-	-	2.4	0	1.9	1.0	1.0	1.0	1.0	1.4	1.2	1.5	1.5	3.4	1.4	1.2	1.3
Ref No.	IC8651																			
MODE	41	42	43	44	45	46	47	48												
CD PLAY	1.4	1.4	1.7	1.7	1.9	0	3.4	-												
Ref No.	IC8691										IC8695									
MODE	1	2	3	4	5						1	2	3	4	5					
CD PLAY	3.0	3.0	0.1	4.3	4.9						0	0	0	0	4.9					
Ref No.	Q8550				Q8551				Q8552				Q8560				Q8561			
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	4.9	4.8	4.2		0.1	4.8	0.1		4.8	0	4.8		0.1	0.1	0.7		1.5	3.5	2.1	
Ref No.	Q8562				Q8606				Q8607											
MODE	E	C	B		E	C	B		E	C	B									
CD PLAY	4.2	2.3	3.6		0	0.1	0.7		0	3.2	0.1									
Ref No.	QR8111				QR8112				QR8420				QR8571							
MODE	E	C	B		E	C	B		E	C	B		E	C	B					
CD PLAY	0.1	0.1	1.2		0.1	4.5	0.1		0	4.0	0.1		3.4	3.3	0.1					

18.2. Main P.C.B.

Ref No.	IC2006																				
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16					
CD PLAY	4.8	2.5	2.1	1.5	4.8	1.5	0	2.0	1.9	0	1.9	0	1.5	1.5	1.5	2.0					
STANDBY	0.1	0	0.1	0	0.1	0	0	0.2	0.2	0	0.1	0.1	0.1	0.1	0.1	0					
Ref No.	IC2007																				
MODE	1	2	3	4	5	6	7	8	9												
CD PLAY	0	0.3	0	0.3	9.0	9.6	0	0	0												
STANDBY	0	0.1	0	0.1	1.3	0.1	0	0	0												
Ref No.	IC2008																				
MODE	1	2	3	4	5	6	7	8	9												
CD PLAY	0	0.3	0	0.3	9.0	9.6	0	0	0												
STANDBY	0	0.1	0	0.1	1.4	0.1	0	0	0												
Ref No.	IC2010																				
MODE	1	2	3	4	5	6	7	8													
CD PLAY	0	0	0	-6.7	0	0	0	6.9													
STANDBY	0.4	0.4	0.1	0.1	0.1	0.4	0.4	0.2													
Ref No.	IC2011																				
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
CD PLAY	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
STANDBY	0	0	0	0.2	0.2	0	0	0	0.2	0	0	0	0	0	0	0	0	0	0	0	
Ref No.	IC2011																				
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	
CD PLAY	0	0	0	0	0	0	0	0	0	0	0	0	-6.5	2.0	0	0	0	0	0	0	
STANDBY	0	0	0	0	0	0	0	0.3	0	0	0	0	0.1	0	0	0	0	0	0	0	
Ref No.	IC2011																				
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	
CD PLAY	0	-6.7	6.9	0	0.1	0.1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
STANDBY	0	0.2	0.2	0	0.1	0.1	0	0	0	0	0	0	0	0	0	0	0.2	0.2	0	0	
Ref No.	IC2011																				
MODE	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	
CD PLAY	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
STANDBY	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	
Ref No.	IC2013																				
MODE	1	2	3	4	5	6	7	8													
CD PLAY	0	0	0	-6.7	0	0	0	6.9													
STANDBY	0.3	0.3	0	0.1	0	0.4	0.4	0.2													
Ref No.	IC2014																				
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
CD PLAY	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	6.9	-6.7	0.1	0.1	0	
STANDBY	0	0	0	0	0	0	0	0	0	0	0	0	0	0.2	0.2	0.2	0.1	0.1	0.1	0	
Ref No.	IC2015																				
MODE	1	2	3	4	5	6	7	8													
CD PLAY	0	0	0	-6.7	0	0	0	6.9													
STANDBY	0.3	0.3	0	0.1	0	0	0	0.2													
Ref No.	IC2018																				
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
CD PLAY	0	4.8	1.5	4.8	2.4	4.8	0.2	0	0	4.8	4.6	2.3	2.3	0	0	4.6	0	3.2	4.0	4.4	
STANDBY	0	4.8	1.6	4.8	2.4	4.8	4.7	0	0	4.8	4.7	2.4	2.4	0	0	4.7	0	0	0	2.7	
Ref No.	IC2018																				
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	
CD PLAY	4.6	0	0	0	0	4.7	4.5	4.8	0.1	0.1	2.5	4.6	4.6	4.4	4.5	0.1	4.2	0.1	0.1	0.1	
STANDBY	0	0	0	0	0	4.7	4.7	4.8	4.8	4.8	2.6	4.7	4.7	4.4	0.1	0.1	0.1	0.1	0.1	0.1	
Ref No.	IC2018																				
MODE	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	
CD PLAY	4.7	0.1	4.2	0.1	4.6	4.8	0	0.1	4.1	0.1	0.1	4.2	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	
STANDBY	4.7	0.1	0.1	0.1	0.1	4.8	0	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0.1	0	0	0	0	
Ref No.	IC2018																				
MODE	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	
CD PLAY	3.6	4.7	0.1	4.7	4.7	4.7	4.7	4.6	4.6	4.0	4.6	4.6	4.2	0	4.7	4.7	0.1	0	0	0	
STANDBY	3.2	3.0	4.8	4.8	4.8	4.8	0.1	0	0	0	0	0.6	0	0	4.8	4.8	4.7	0	0	0	
Ref No.	IC2018																				
MODE	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100	
CD PLAY	0	0	4.5	0	0	0	0	0	0	0	3.2	4.4	-	0	0	0	0	0	0	4.8	
STANDBY	0	0	0	0	0	0	0	0	0	0	0	0	00	0	0	0	0	0	0	4.8	
Ref No.	IC2019																				
MODE	1	2	3	4	5	6	7	8													
CD PLAY	0	4.8	0	0	0	0	0	0													
STANDBY	0	4.8	0	0	0	0	0	0													
Ref No.	IC2601																				
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14							
CD PLAY	0	0	0	6.9	0	0	0	0	0	0	-6.7	0	0	0							
STANDBY	0	0	0	0.2	0	0	0	0	0	0	0.1	0	0	0							
Ref No.	IC2602																				
MODE	1	2	3	4	5	6	7	8													
CD PLAY	0	0	0	-6.7	0	0	0	6.9													
STANDBY	0	0	0	0.2	0	0	0	0.2													
Ref No.	IC2801										IC2802										
MODE	1	2	3	4	5						1	2	3								
CD PLAY	16.0	6.1	0	1.0	3.6						6.0	0	5.0								
STANDBY	0	0	0	0	0.1						0.2	0	0.8								
Ref No.	IC2803																				
MODE	1	2	3	4	5	6															
CD PLAY	0.8	3.0	0	1.4	3.9	0															
STANDBY	0	0	0	0	0.1	0															

Ref No.	Q2000				Q2001				Q2002				Q2004				Q2028			
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	0	4.6	0		0	0	4.2		0	0	4.2		0	0.1	4.4		0	0.1	4.0	
STANDBY	0	4.7	0		0	0	4.3		0	0	4.3		0	0.1	0.1		0	0.1	0	
Ref No.	Q2029				Q2102								Q2103							
MODE	E	C	B		1	2	3	4	5	6			E	C	B					
CD PLAY	0	0.1	3.1		0	-4.5	0	0	-4.5	0			1.6	1.6	0					
STANDBY	0	1.8	0		0	0.1	0	0	0.1	0			0	0.1	0					
Ref No.	Q2104								Q2105				Q2200							
MODE	1	2	3	4	5	6			E	C	B		1	2	3	4	5	6		
CD PLAY	0	0.6	0	0	0.6	0			0.1	-4.3	0		0	-4.3	0	0	-4.3	0		
STANDBY	0	0.1	0	0	0.1	0			0.1	0.1	0		0	0.1	0	0	0.1	0		
Ref No.	Q2201				Q2500				Q2600				Q2601							
MODE	E	C	B		E	C	B		E	C	B		1	2	3	4	5	6		
CD PLAY	0.1	-4.6	0		2.0	2.0	0		2.0	2.0	0		0	0.7	0	0	0.7	0		
STANDBY	0	0.1	0		0.1	0.1	0		0.1	0.1	0		0	0.1	0	0	0.1	0		
Ref No.	Q2603				Q2604								Q2605				Q2801			
MODE	E	C	B		1	2	3	4	5	6			E	C	B		E	C	B	
CD PLAY	2.0	2.0	0		0	0.7	0	0	0.7	0			2.0	2.0	0		16.0	-2.9	16.0	
STANDBY	0	0.1	0		0	0.1	0	0	0.1	0			0	0.1	0		0.4	0.1	0.4	
Ref No.	Q2803				Q2804				Q2805				Q2806				Q2807			
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	14.0	9.6	14.6		8.9	14.0	9.5		4.4	5.4	4.9		6.0	5.0	5.4		-6.7	-14.5	-7.3	
STANDBY	1.3	0.2	1.3		0	1.3	0.4		0	0.1	0		0.2	0.1	0		0.1	-0.3	-0.3	
Ref No.	Q2808				Q2809				Q2811				Q2812				Q2813			
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	0	-7.3	0		-27.5	-27.5	-27.5		15.5	9.6	16.0		9.0	15.4	9.5		9.5	5.6	5.0	
STANDBY	0	-0.3	0.1		0	0	0		0.2	0.2	0.4		0	0.2	0.4		2.5	0.2	0.2	
Ref No.	Q2814				Q2818															
MODE	E	C	B		E	C	B													
CD PLAY	7.0	15.9	7.5		0	4.6	-2.9													
STANDBY	0.2	0.4	0.4		0	0.6	0.1													

18.3. FL P.C.B.

Ref No.	IC6901																			
MODE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
CD PLAY	-26.5	-26.5	3.2	0	1.8	1.8	4.3	4.6	4.5	0.2	-26.5	-26.5	-26.5	-24.0	-27.0	-21.0	-21.0	-23.9	-23.9	-23.9
STANDBY	0	0	0	0	1.0	1.0	2.0	0	0	0	-0.2	-0.2	-0.2	-0.2	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1
Ref No.	IC6901																			
MODE	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
CD PLAY	-15.7	-23.9	-23.9	-23.9	-26.5	-23.9	-26.5	-26.5	-23.9	-21.8	-18.4	-26.5	-23.9	-23.9	-23.9	-26.5	-15.6	-18.4	-18.4	-26.5
STANDBY	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	-0.1	0	0	0	0	0	0	0	0	0	0	0
Ref No.	Q6900				Q6901				Q6902				Q6903				Q6904			
MODE	E	C	B		E	C	B		E	C	B		E	C	B		E	C	B	
CD PLAY	0	0.1	4.5		0	8.0	0		0	8.0	0		0	8.0	0		0	8.0	0	
STANDBY	0	1.7	0		0	2.1	0		0	2.0	0		0	2.0	0		0	1.9	0	

18.4. Loading Motor P.C.B., Tray Motor P.C.B., Sensor P.C.B.

Loading Motor P.C.B.

Ref No.	Q9001			
MODE	1	2	3	4
CD PLAY	1.2	4.5	0	0
STANDBY	0.2	4.8	0	0

Tray Motor P.C.B.

Ref No.	Q9101				Q9102			
MODE	1	2	3	4	1	2	3	4
CD PLAY	1.2	0	4.7	0	2.5	1.2	0.1	0
STANDBY	0.1	0	4.8	0	0.4	-0.2	4.8	0

Sensor P.C.B.

Ref No.	Q9103			
MODE	1	2	3	4
CD PLAY	3.7	2.5	0	0.2
STANDBY	0.2	0.4	0	4.7

19 Wave Form Chart

WF No. IC2006-2 (PLAY)



0.8Vp-p(20usec/div)

WF No. IC2006-4 (PLAY)

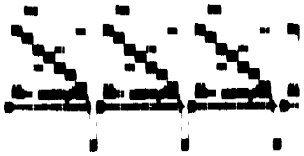

1.1Vp-p(20usec/div)

WF No. IC2006-6 (PLAY)

1.1Vp-p(20usec/div)

WF No. IC2006-8 (PLAY)

0.6Vp-p(20usec/div)

WF No. IC2006-9 (PLAY)

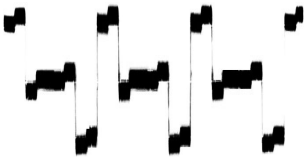

0.6Vp-p(20usec/div)

WF No. IC2006-11 (PLAY)

1.0Vp-p(20usec/div)

WF No. IC2006-12 (PLAY)

1.0Vp-p(20usec/div)

WF No. IC2006-13 (PLAY)

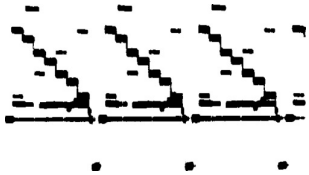

2.1Vp-p(20usec/div)

WF No. IC2006-14 (PLAY)

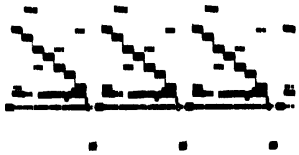

2.1Vp-p(20usec/div)

WF No. IC2006-15 (PLAY)

2.1Vp-p(20usec/div)

WF No. IC2006-16 (PLAY)

1.2Vp-p(20usec/div)

WF No. IC2011-17 (PLAY)

0.03Vp-p(200usec/div)

WF No. IC2011-18 (PLAY)

0.13Vp-p(200usec/div)

WF No. IC2011-28 (PLAY)

0.8Vp-p(5msec/div)

WF No. IC2011-39 (PLAY)

0.1Vp-p(200usec/div)

WF No. IC2013-1 (PLAY)

2.2Vp-p(200usec/div)

WF No. IC2018-12 (PLAY)



4.5Vp-p(100nsec/div)

20 Schematic Diagram Notes

- **This schematic diagram may be modified at any time with the development of new technology.**

Notes:

S6801:	Play and memory switch (► Memory).
S6802:	R. skip, search and Tuning switch (⏮ / ◀◀ / TUNING ∨).
S6803:	F. skip, search and Tuning switch (⏭ / ▶▶ / TUNING ∧).
S6804:	Pause and FM mode switch (⏸ FM MODE).
S6805:	Tray open / close switch (⏏ Open / Close).
S6806:	Disc skip switch (DISC SKIP).
S6807:	Disc exchange switch (DISC EXCHANGE).
S6808:	Stop and TUNE mode switch (■ TUNE MODE).
S6900:	Standby / on switch (POWER ⏻/I).
S6901:	Source select switch (INPUT SELECTOR).
S6902-S6906:	Disc switch (DISC1-DISC5).
S6907:	Harmonic bass switch (H.BASS).
S6909:	Progressive out switch (PROGRESSIVE).
S6910:	CD mode switch [CD MODE].
S9001:	Loading switch.
VR6800:	Volume control.

- Indicated voltage values are the standard values for the unit measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester.
- Important safety notice:

  Components identified by ⚠ mark have special characteristics important for safety.

  Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

  When replacing any of components, be sure to use only manufacturer´s specified parts shown in the parts list.
- The supply part number is described alone in the replacement parts list.
- Voltage and signal line

  : +B Signal line

  : CD-DA signal line

  : Main signal line

  : DVD (Video) signal line

  : DVD (Audio) signal line

  : FM/AM signal line

  : -B Signal line

Caution!

IC and LSI are sensitive to static electricity.

Secondary trouble can be prevented by taking care during repair.

Cover the parts boxes made of plastics with aluminum foil.

Ground the soldering iron.

Put a conductive mat on the work table.

Do not touch the legs of IC or LSI with the fingers directly.

SA-HT730GCP

21 Block Diagram

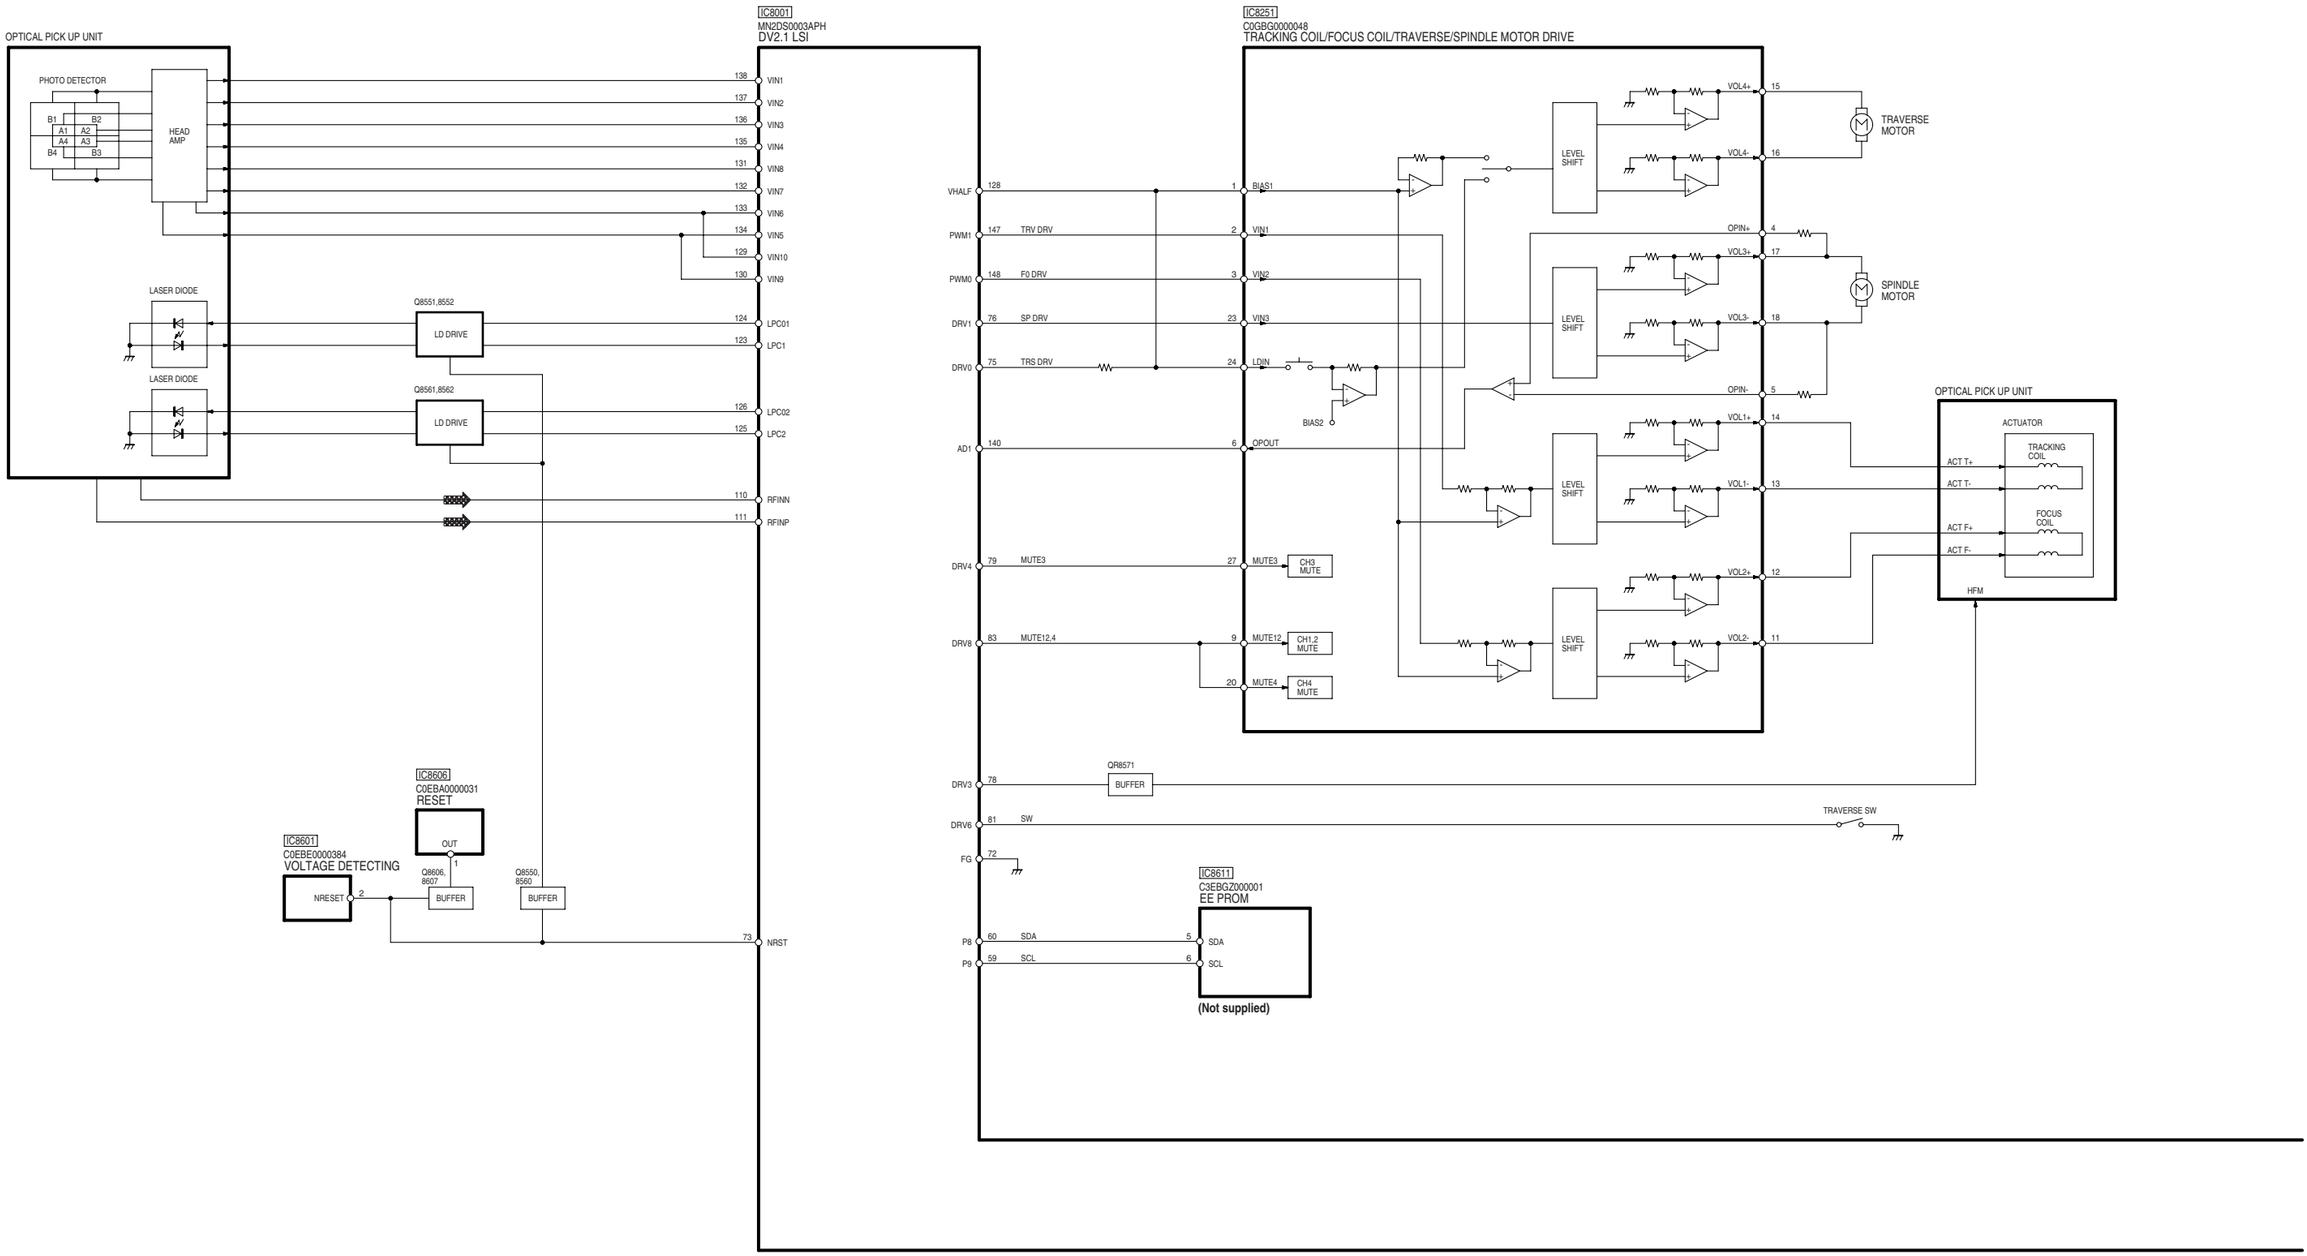

SA-HT730GCP BLOCK DIAGRAM

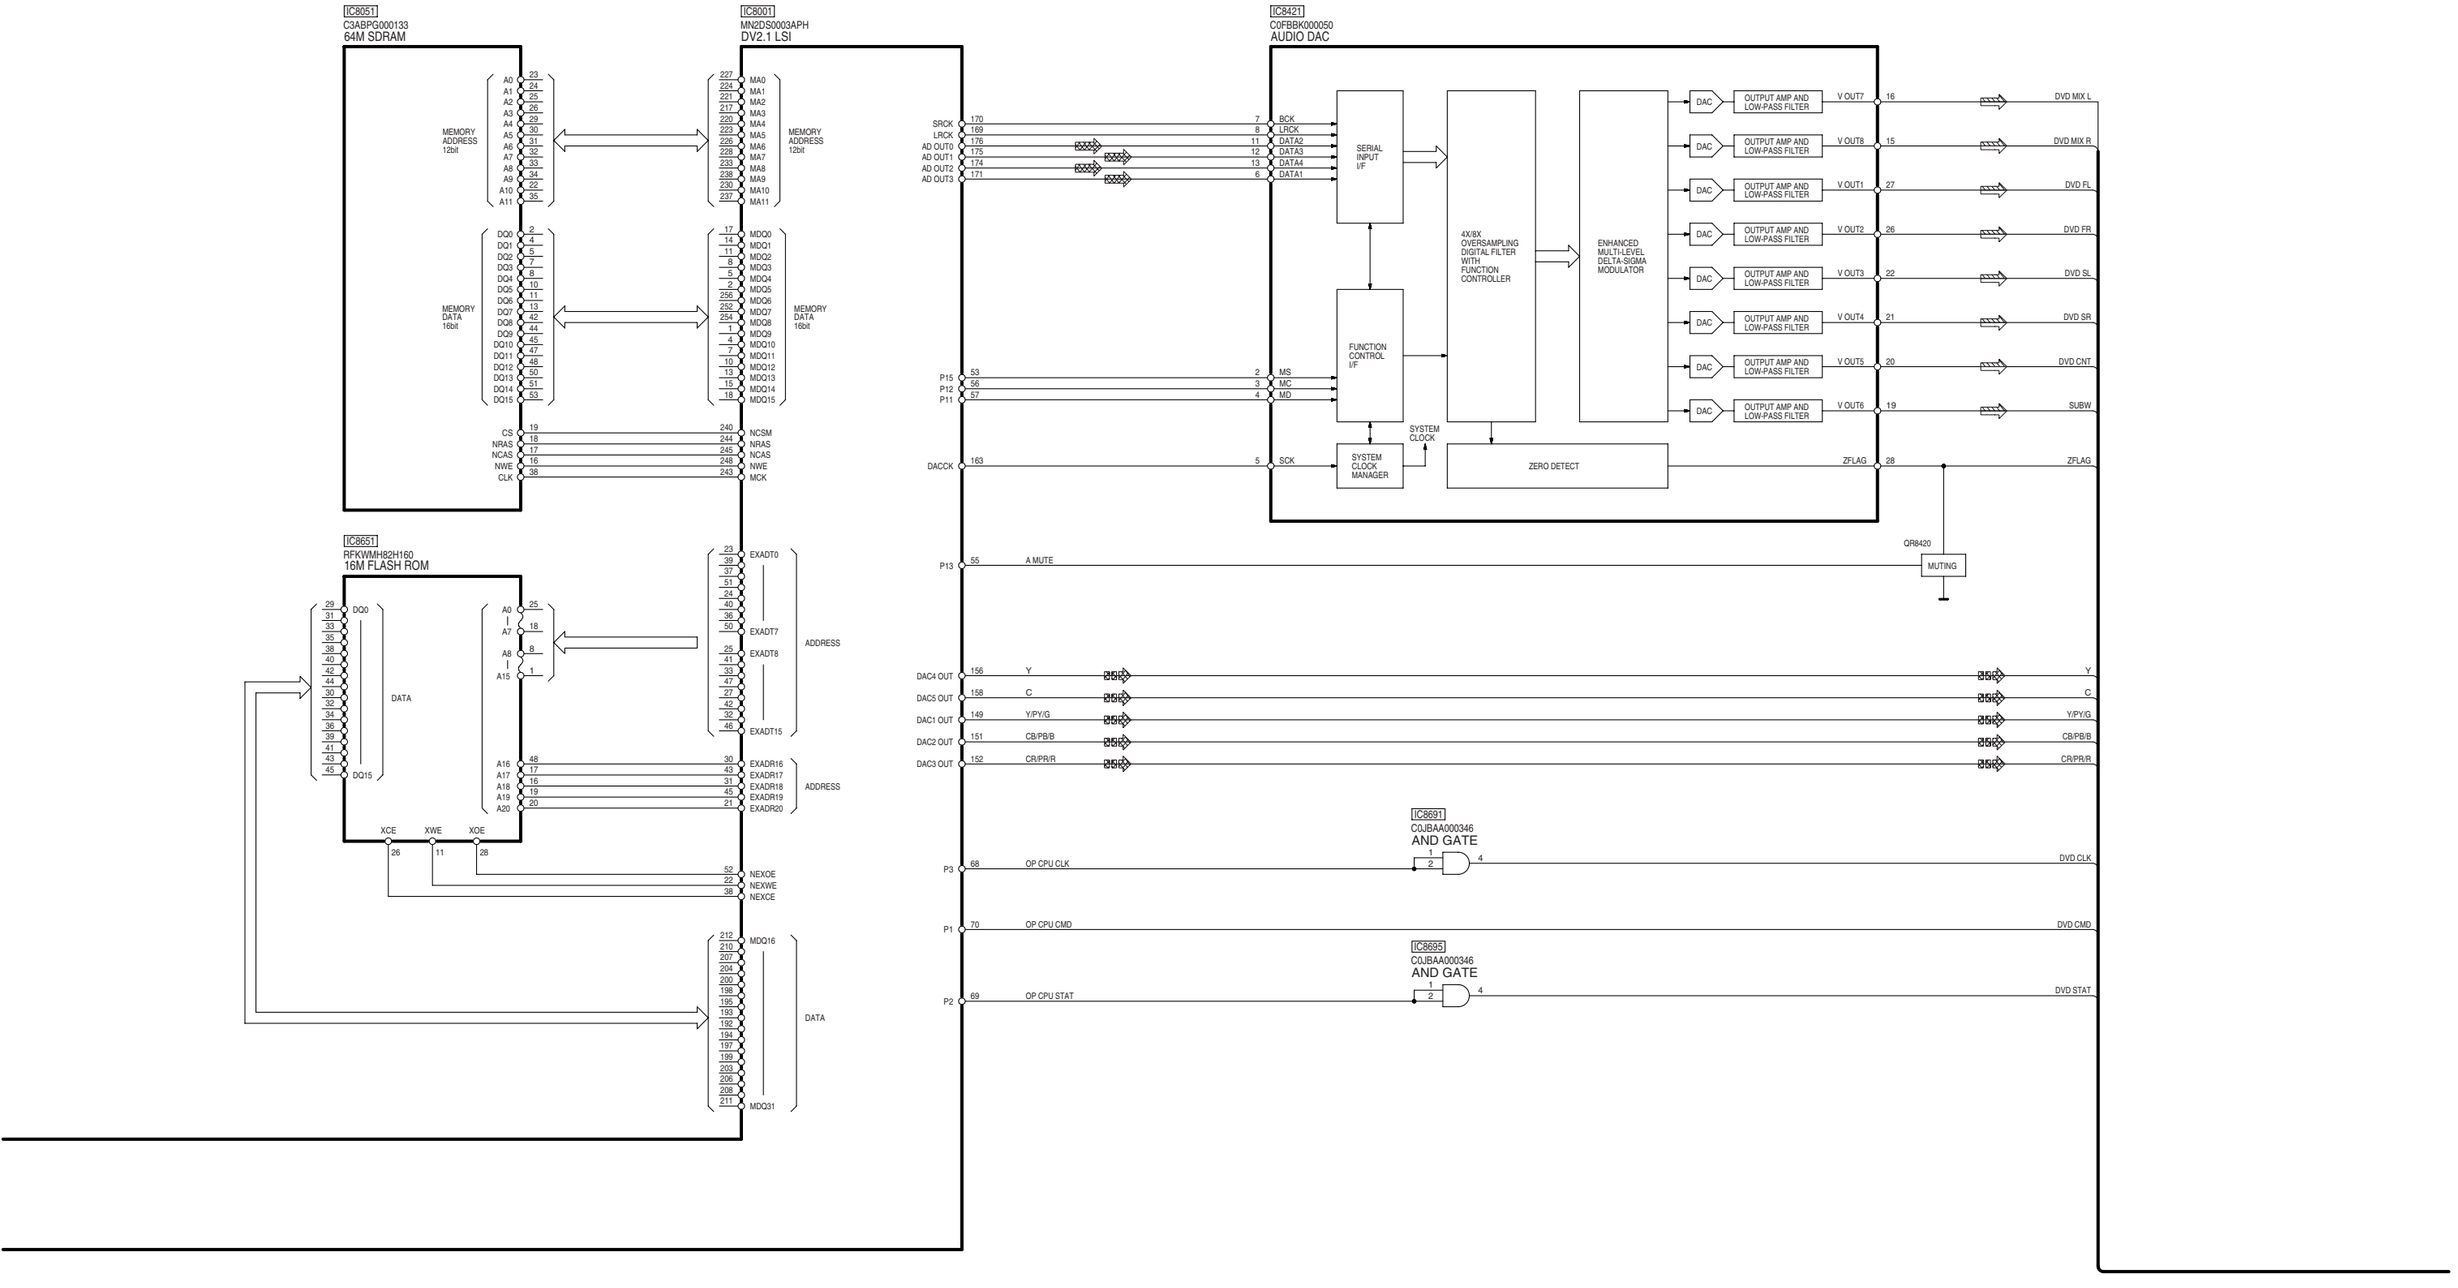

SA-HT730GCP BLOCK DIAGRAM

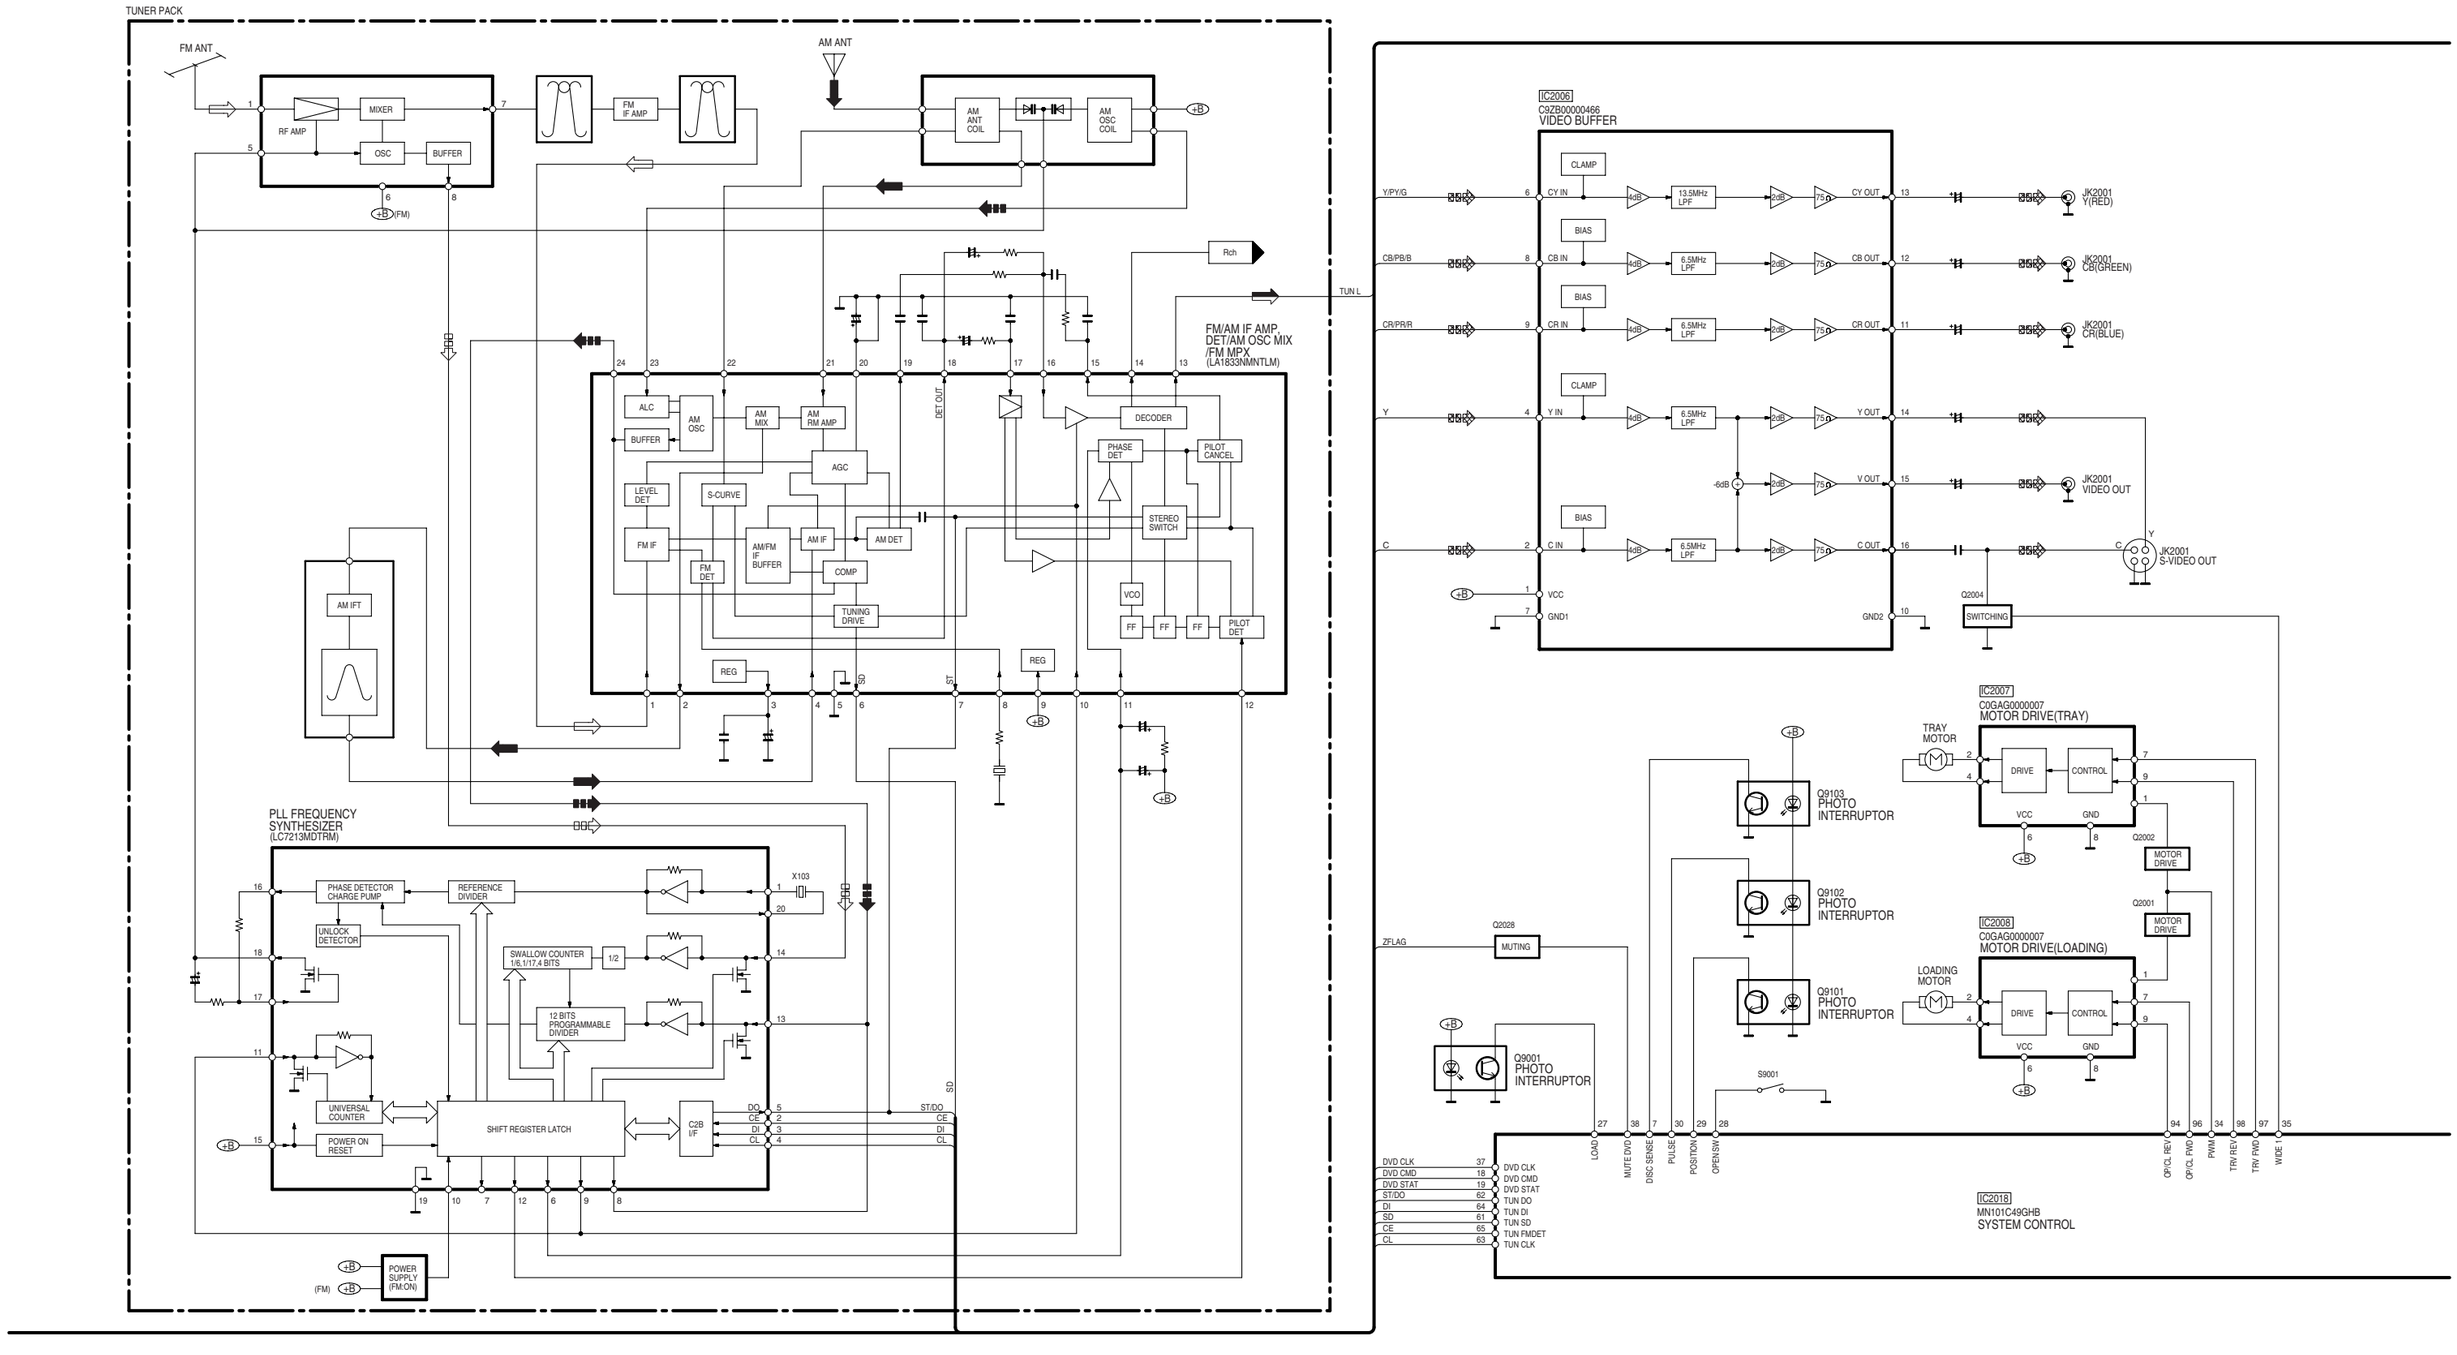

SA-HT730GCP BLOCK DIAGRAM

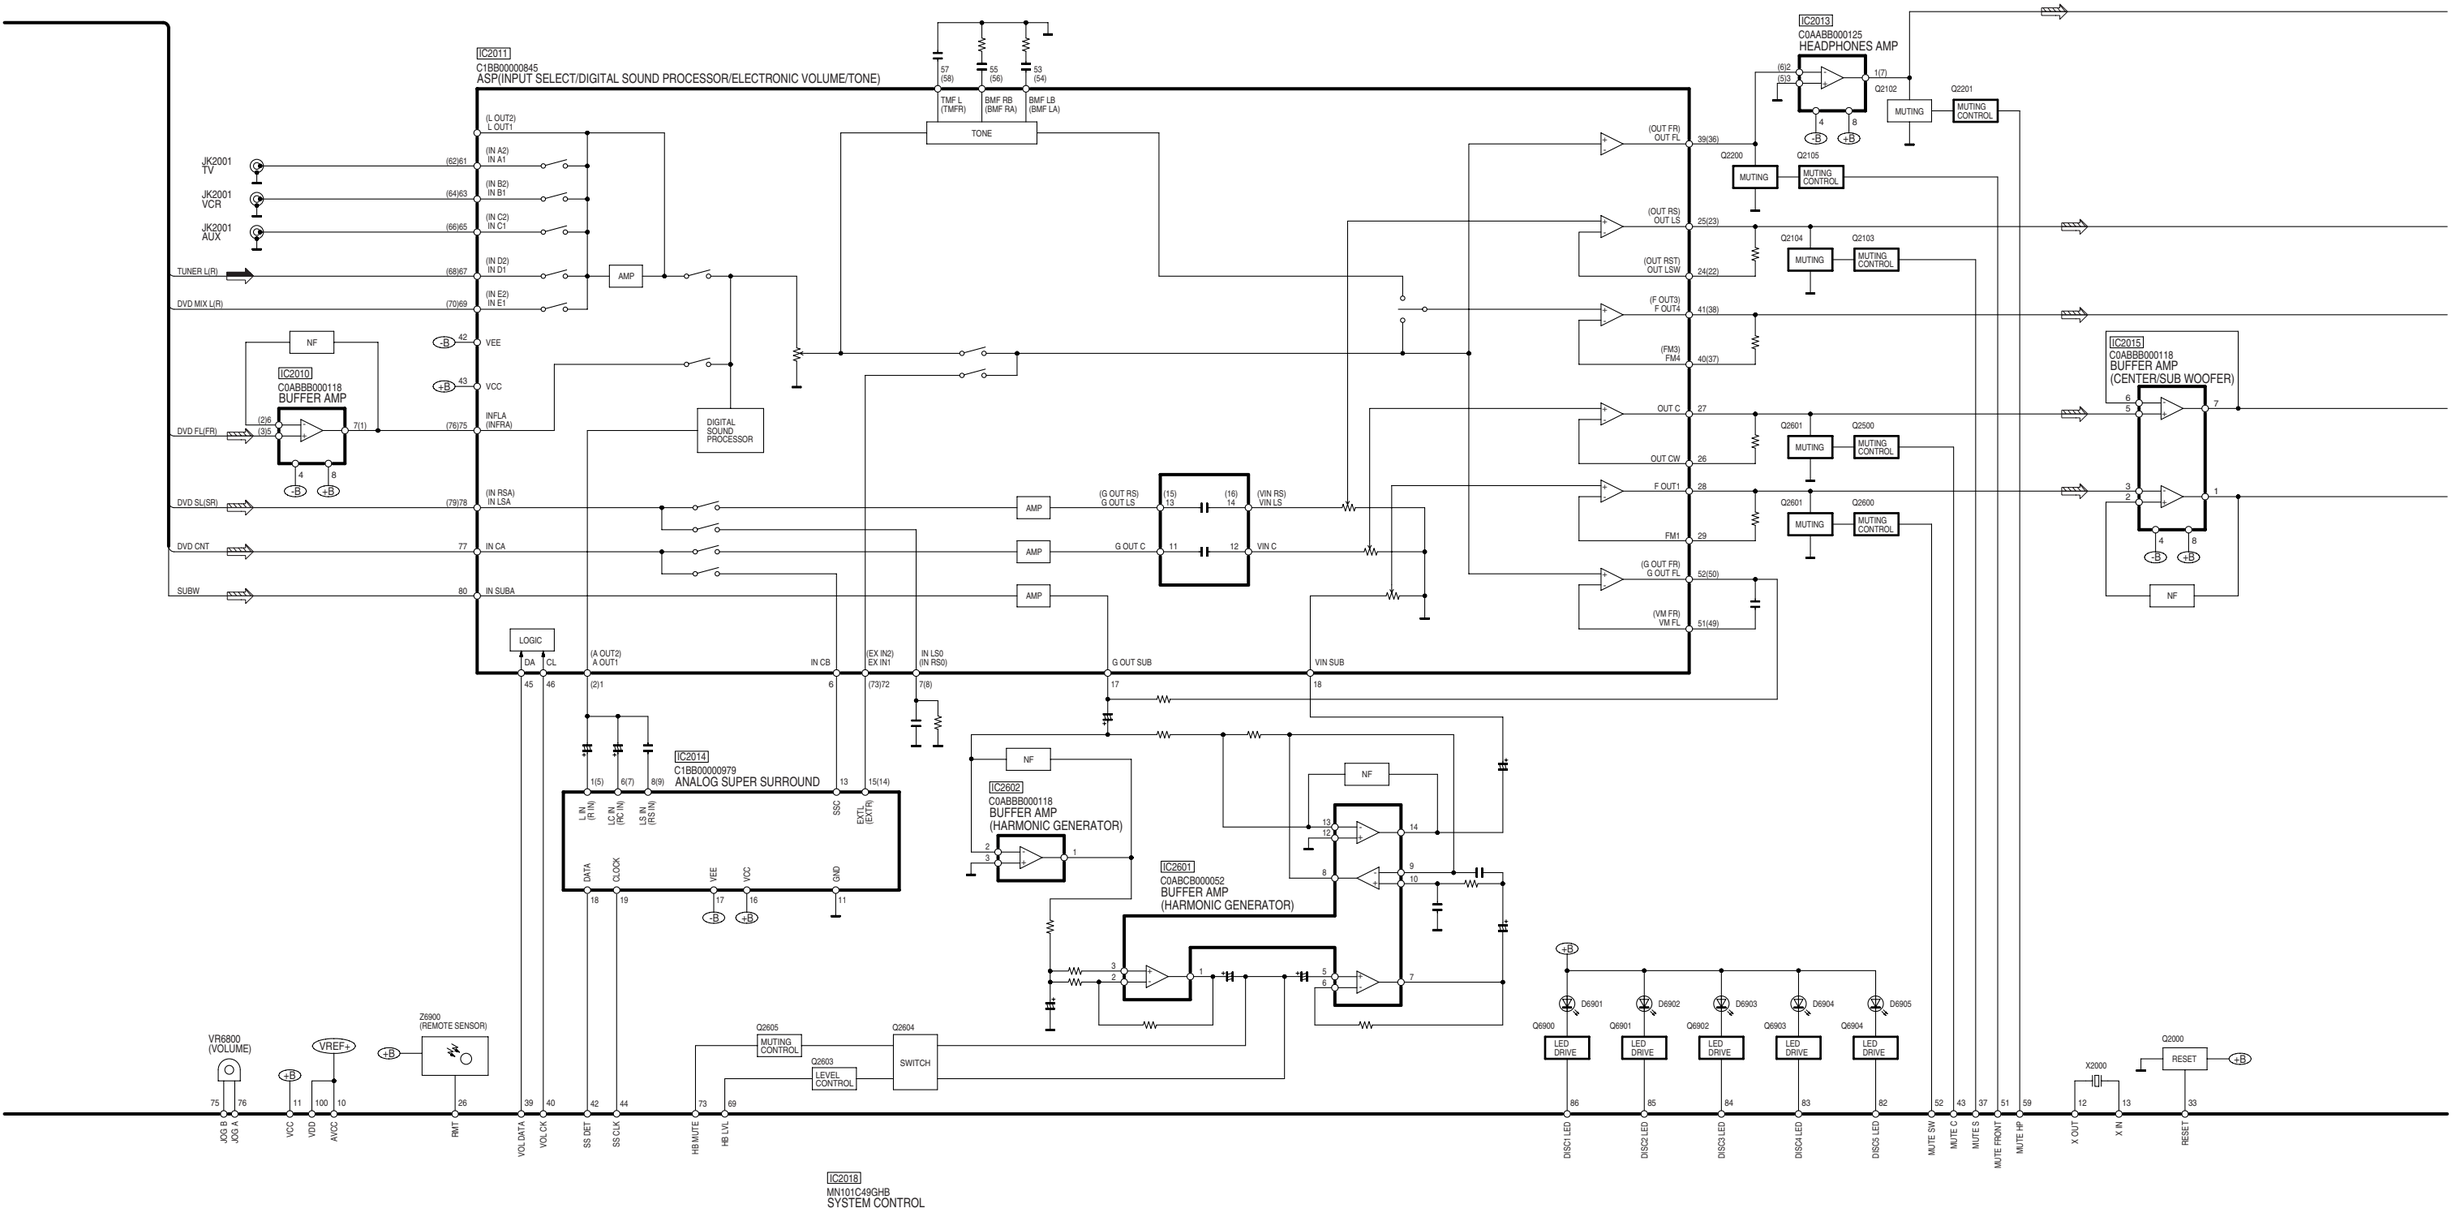

SA-HT730GCP BLOCK DIAGRAM

SIGNAL LINES

: MAIN SIGNAL LINE
: FM SIGNAL LINE
: FM OSC SIGNAL LINE
: AM SIGNAL LINE
: AM OSC SIGNAL LINE
: FM /AM SIGNAL LINE
: DVD AUDIO SIGNAL LINE
: DVD VIDEO SIGNAL LINE
: CD-DA (AUDIO /VIDEO) SIGNAL LINE

( ) Indicates the Pin No. of Right Channel.

NOTE : Signal Lines are applicable to the Left Channel only.

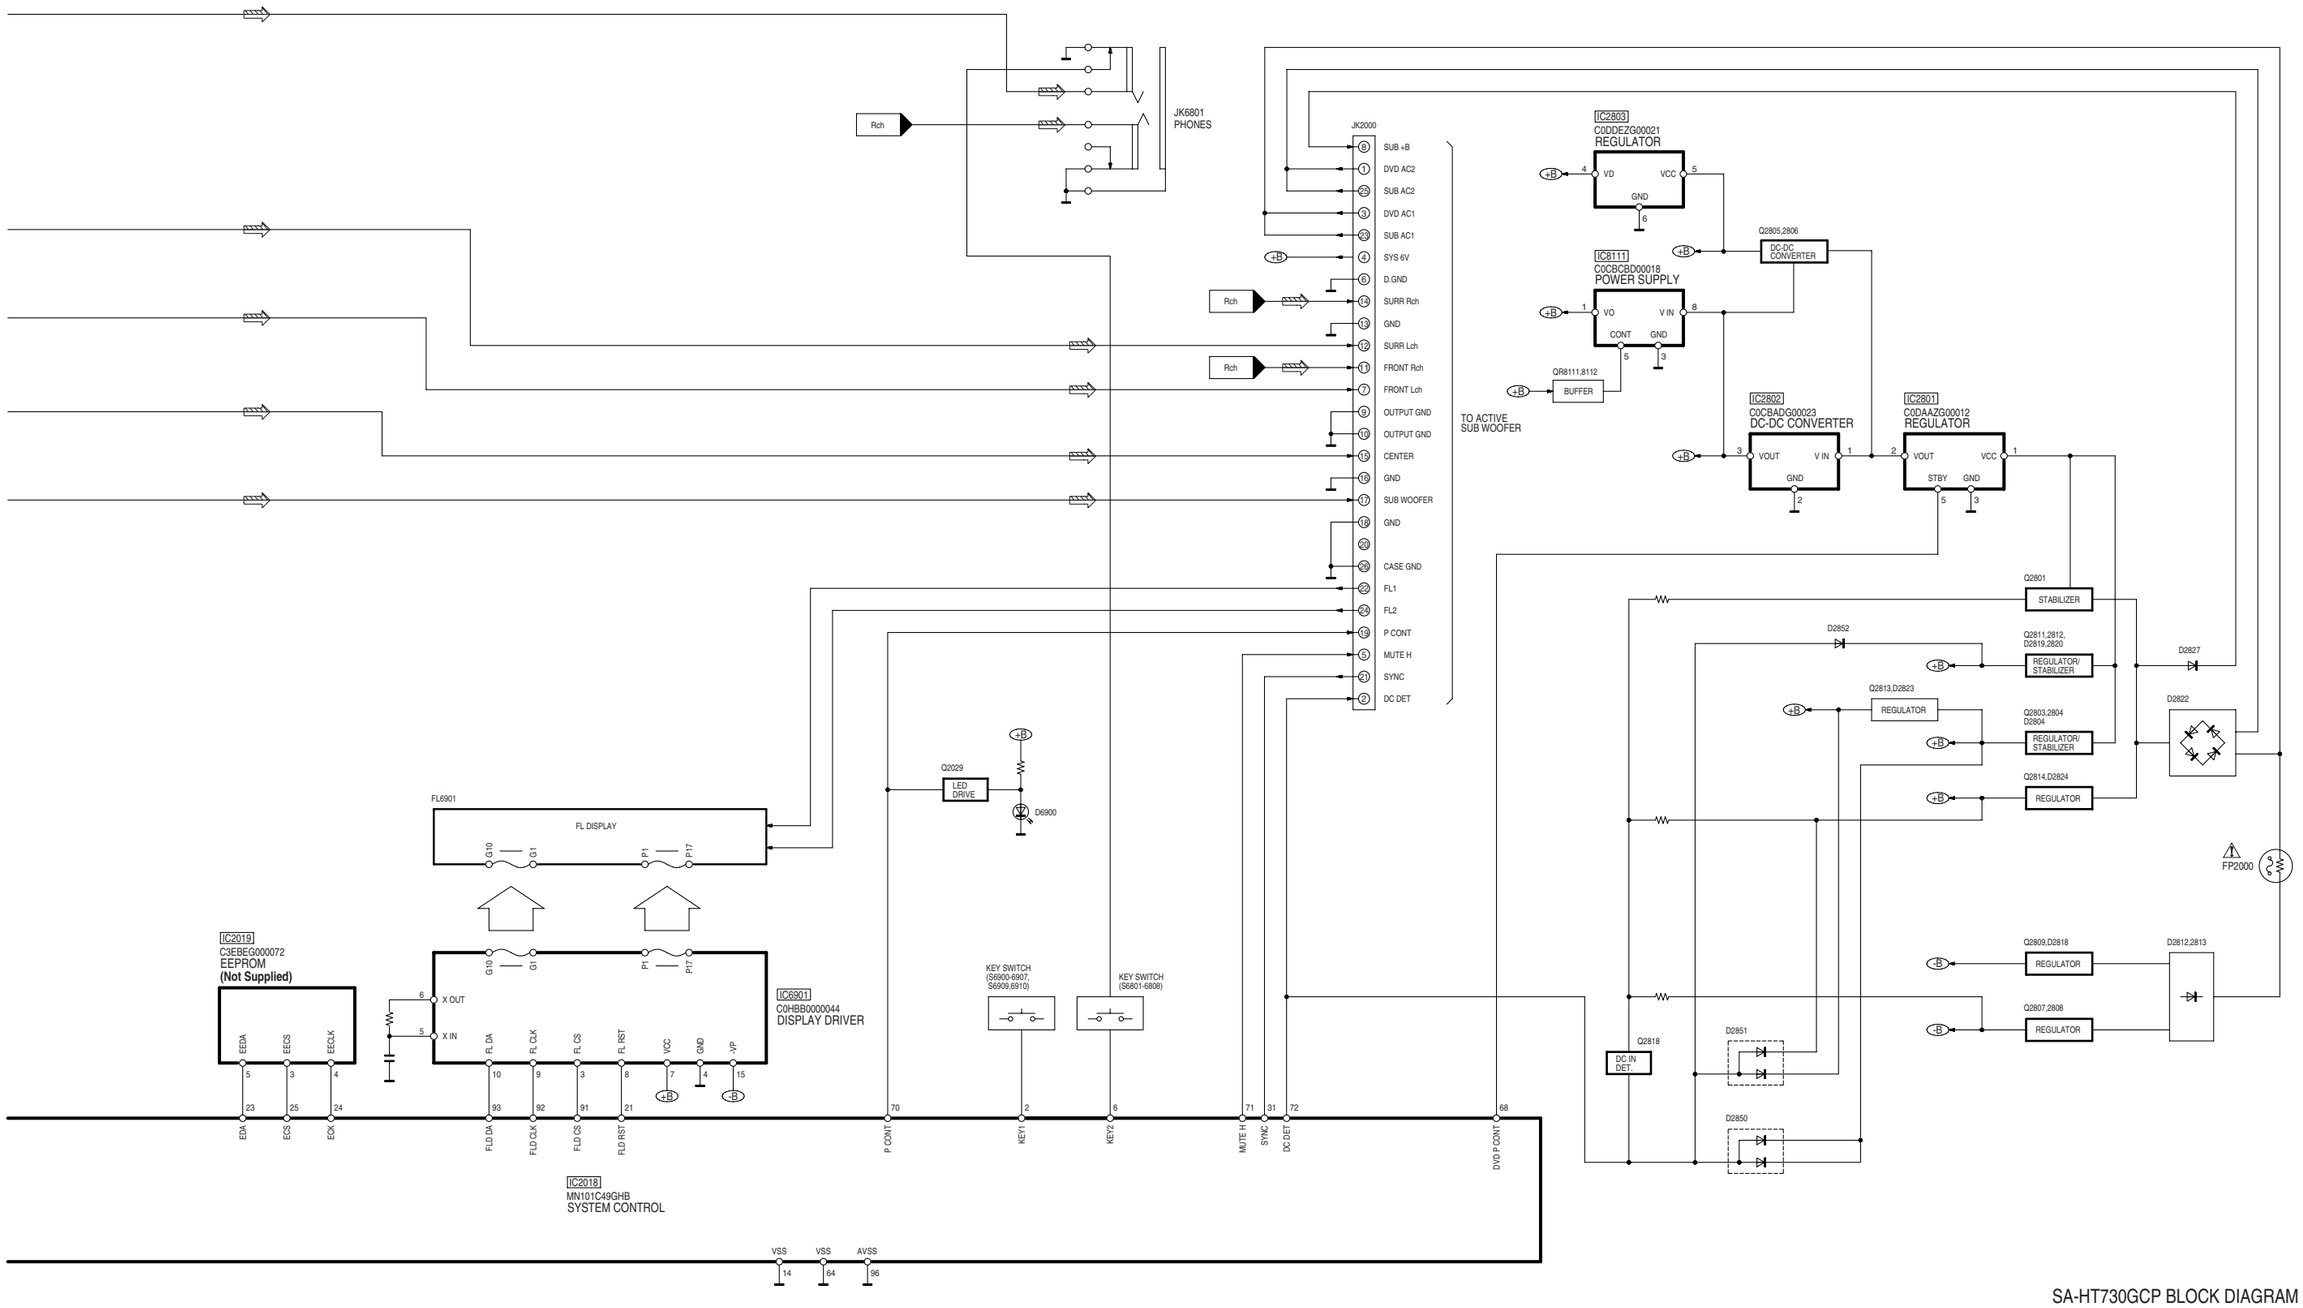

SA-HT730GCP BLOCK DIAGRAM

SA-HT730GCP

22 Schematic Diagram

SCHEMATIC DIAGRAM-1

A DVD MODULE CIRCUIT

:+B SIGNAL LINE　:CD-DA SIGNAL LINE　:MAIN SIGNAL LINE　:DVD(VIDEO) SIGNAL LINE　:DVD(AUDIO) SIGNAL LINE

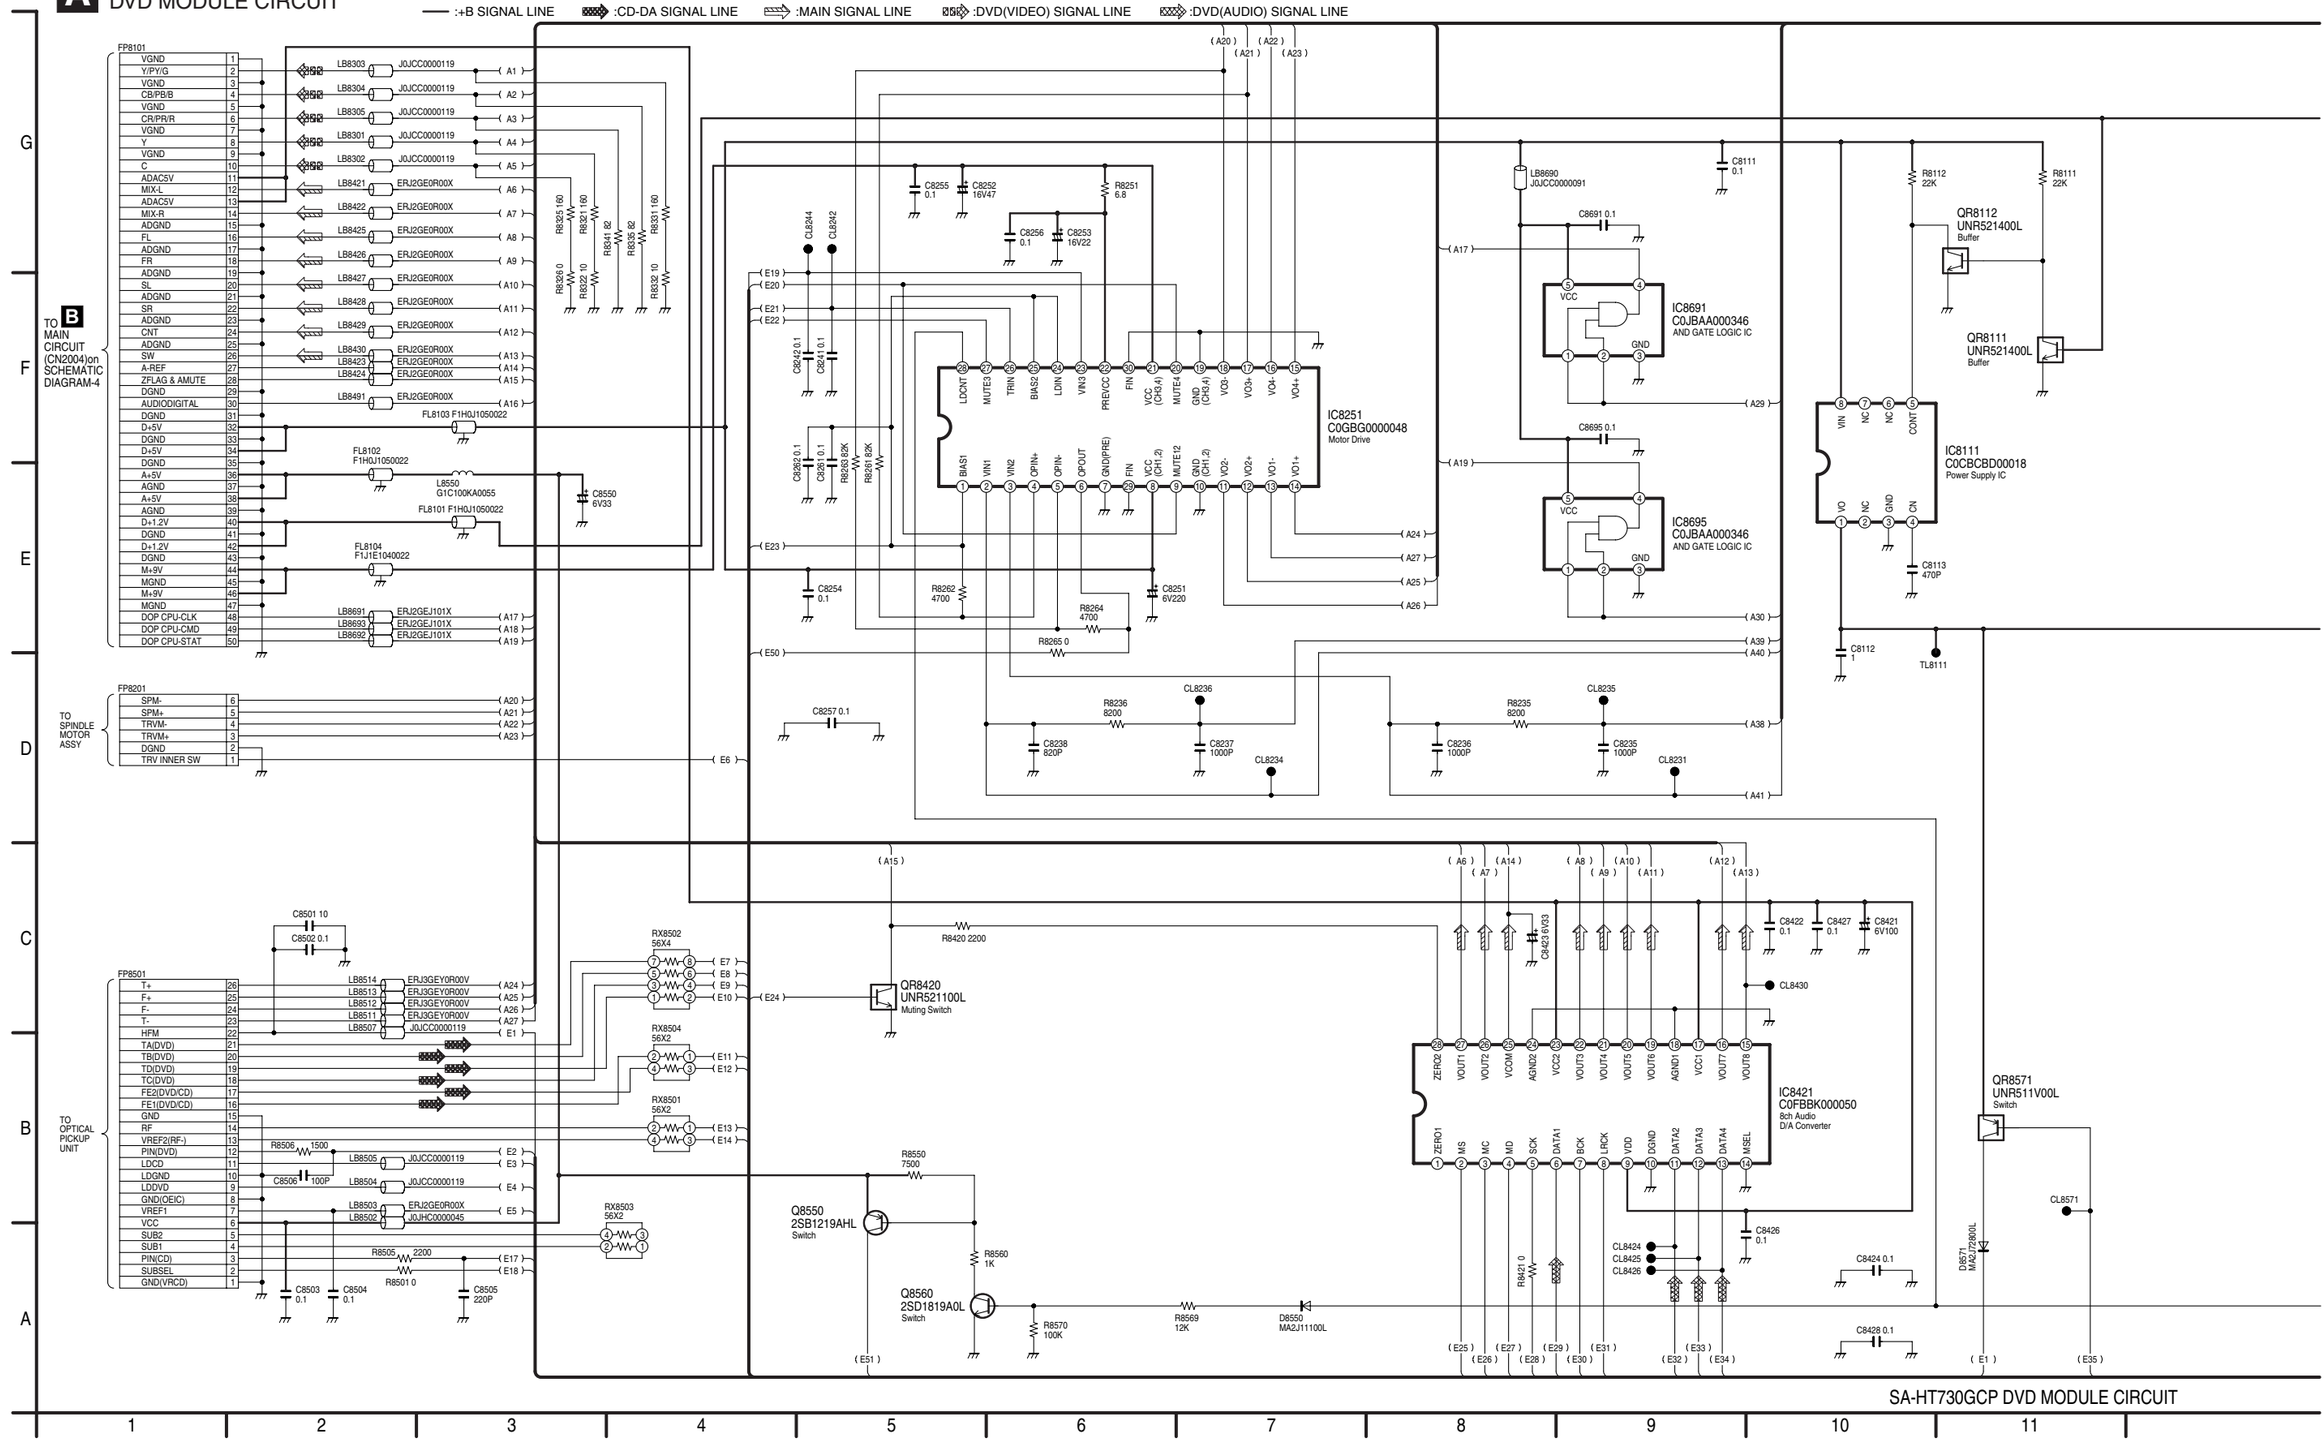

SCHEMATIC DIAGRAM-2

A DVD MODULE CIRCUIT

:+B SIGNAL LINE :CD-DA SIGNAL LINE :DVD(VIDEO) SIGNAL LINE :DVD(AUDIO) SIGNAL LINE

IC8001
MN2DS0003APH
DV2-1 LSI

SA-HT730GCP DVD MODULE CIRCUIT

SCHEMATIC DIAGRAM-3

A DVD MODULE CIRCUIT

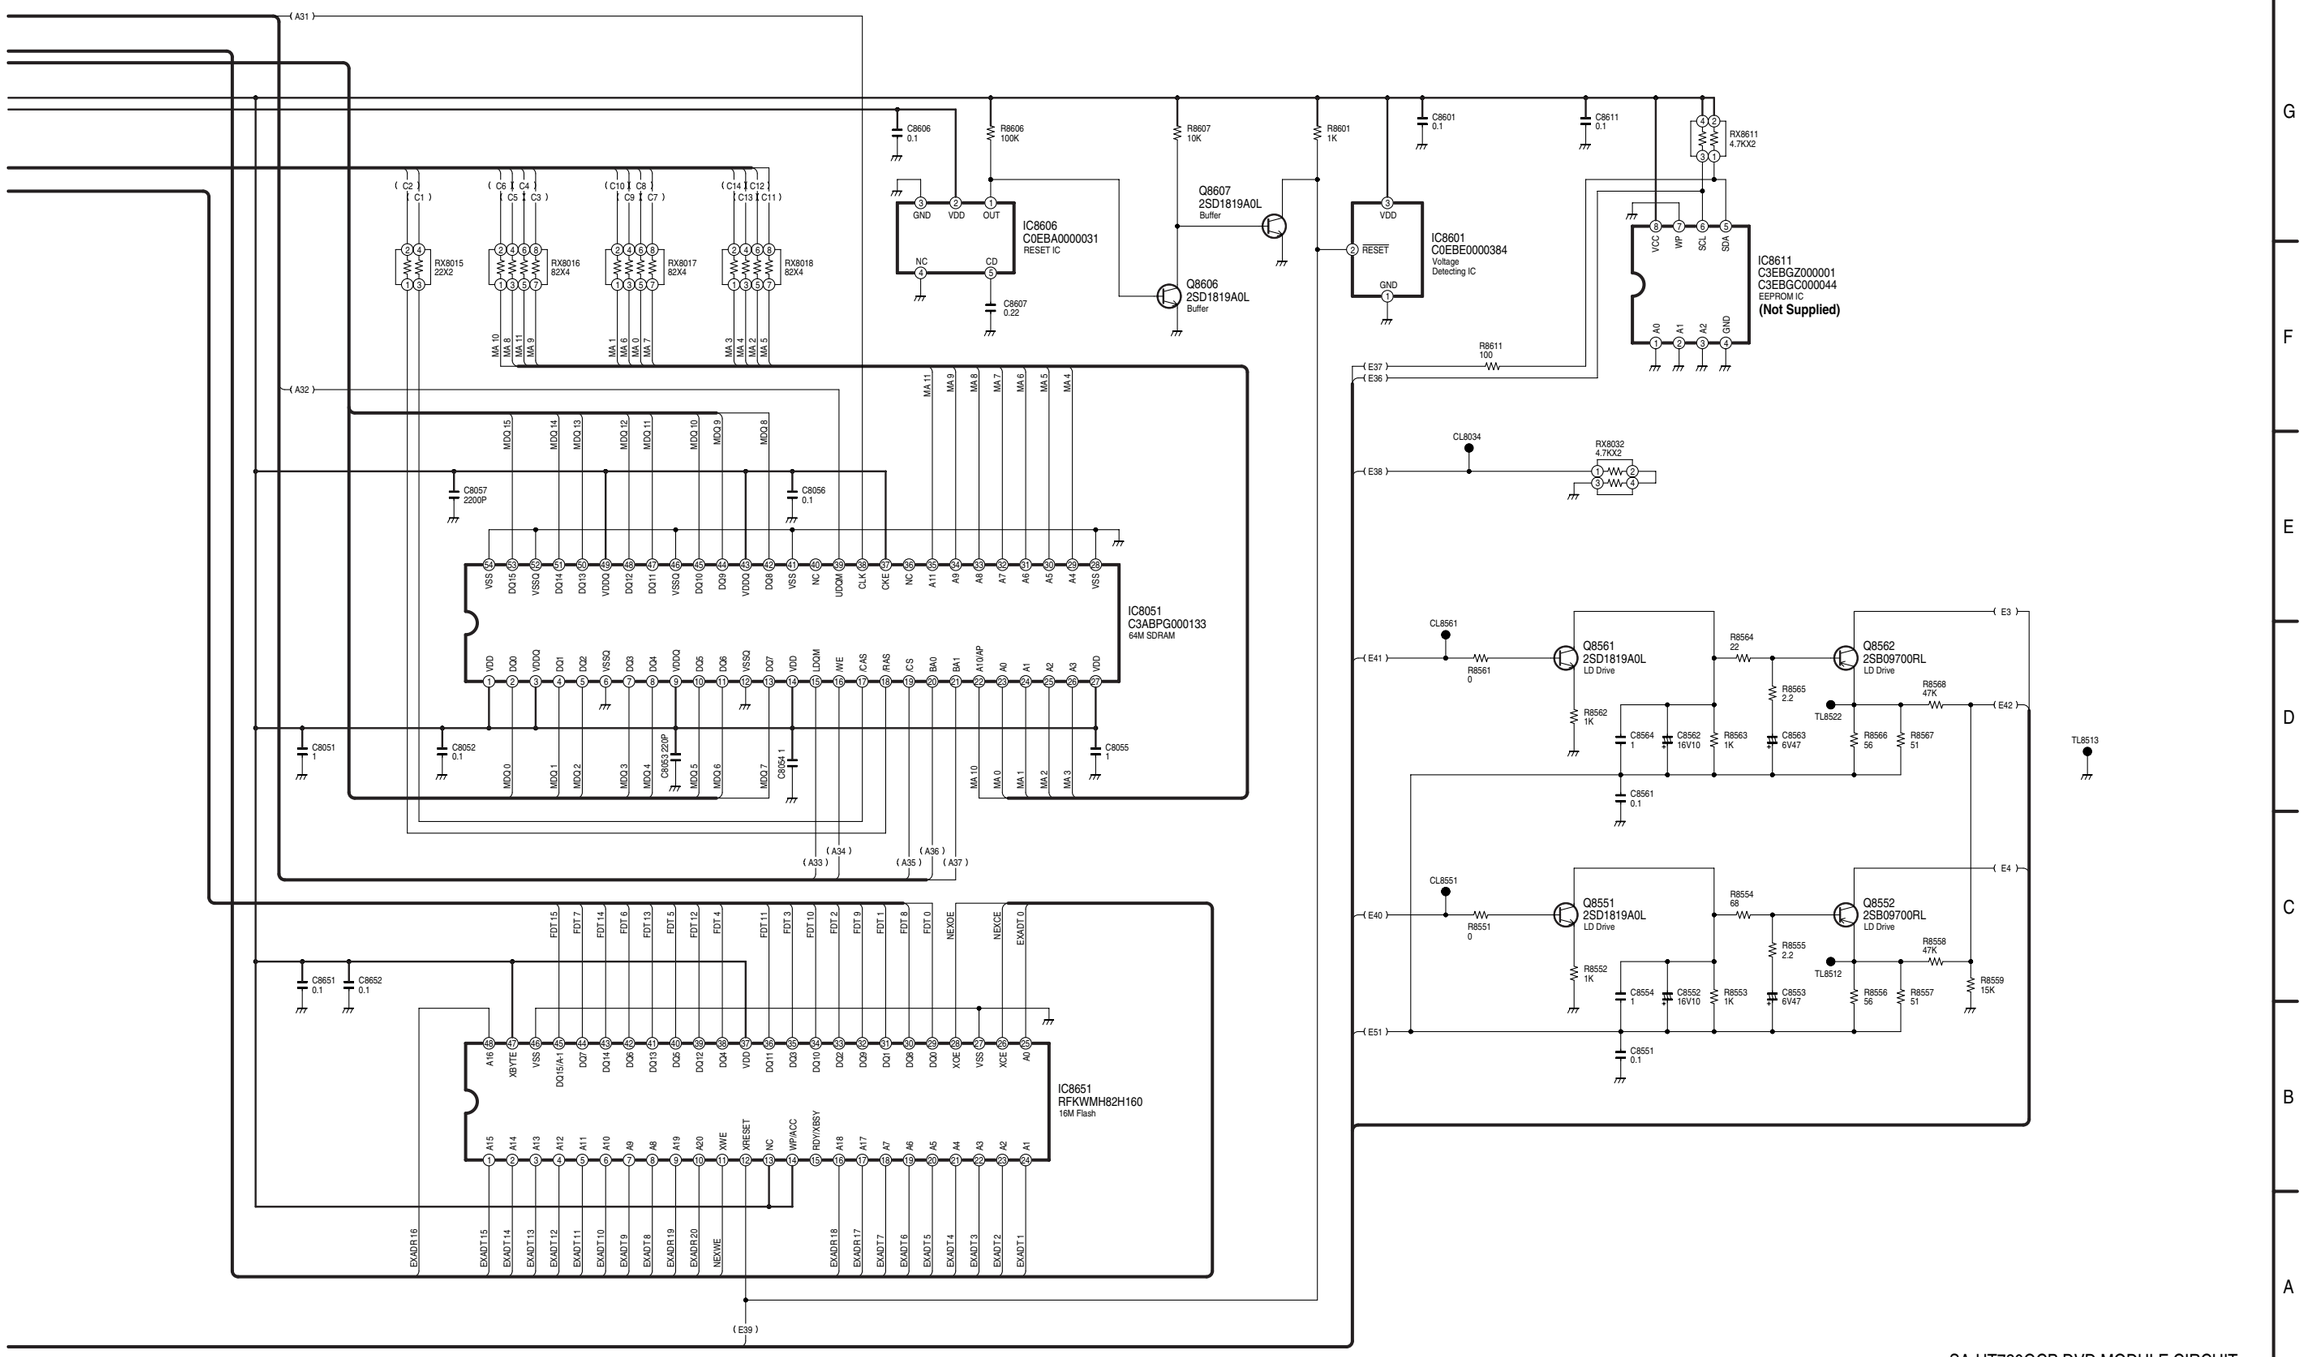

SA-HT730GCP DVD MODULE CIRCUIT

SCHEMATIC DIAGRAM-4

B MAIN CIRCUIT

:+B SIGNAL LINE :-B SIGNAL LINE :MAIN SIGNAL LINE :DVD(VIDEO) SIGNAL LINE :FM/AM SIGNAL LINE

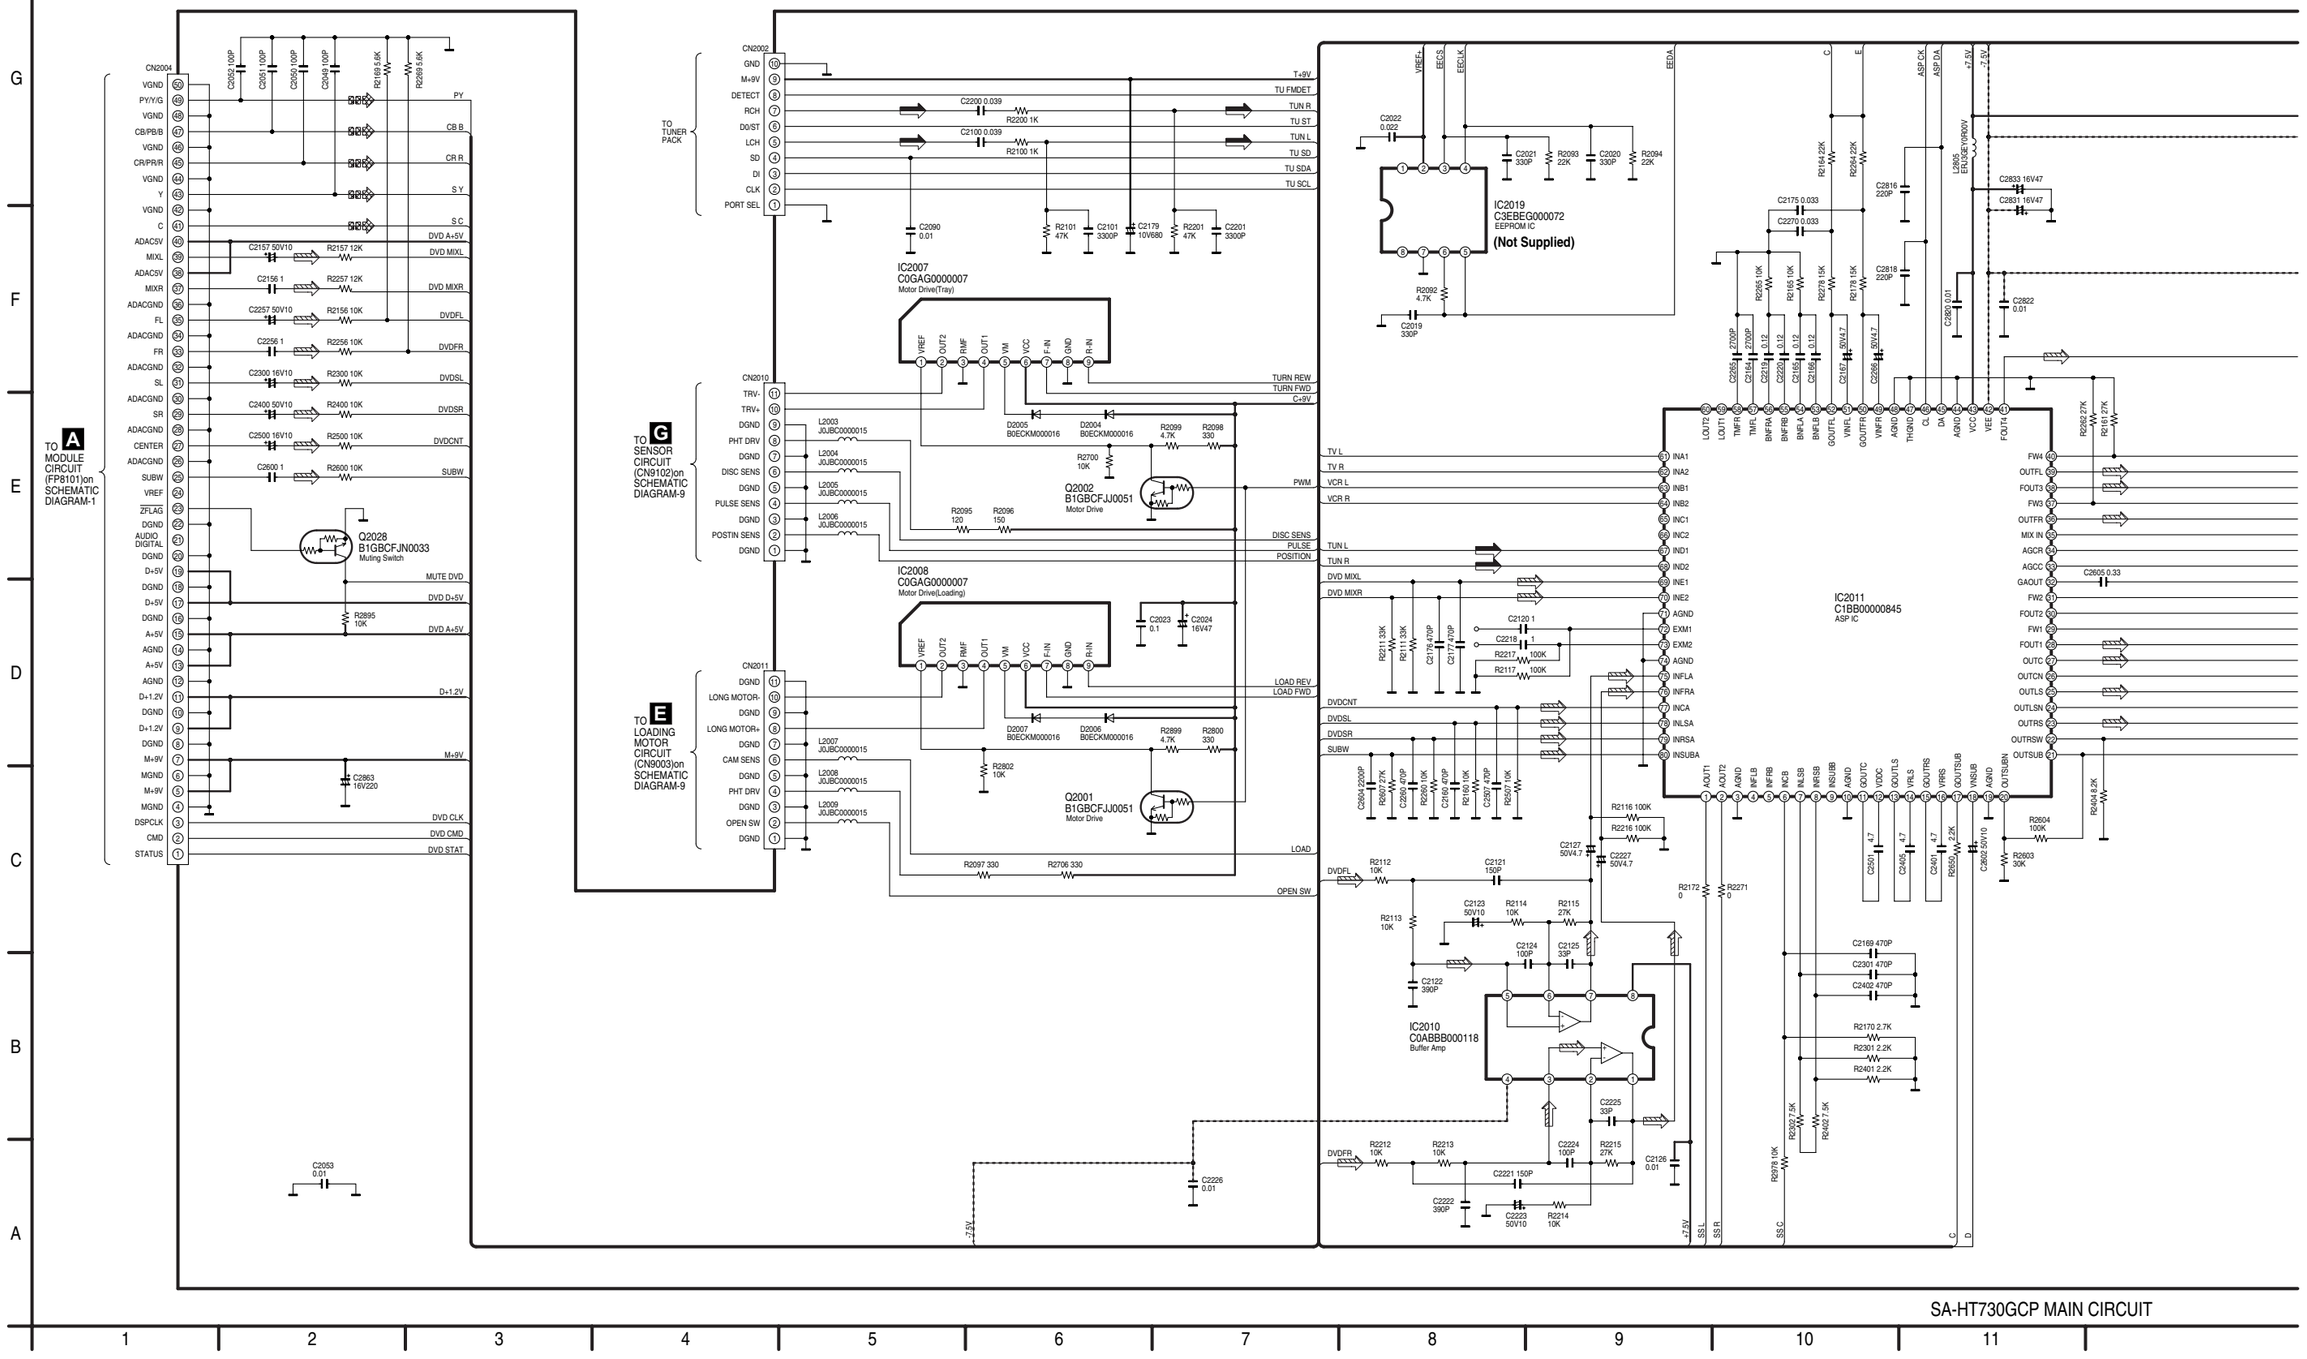
TO A MODULE CIRCUIT (FP8101)on SCHEMATIC DIAGRAM-1
TO G SENSOR CIRCUIT (CN9102)on SCHEMATIC DIAGRAM-9
TO TUNER PACK
TO E LOADING MOTOR CIRCUIT (CN8003)on SCHEMATIC DIAGRAM-9
IC2007 C0GAG0000007 Motor Drive(Tray)
IC2008 C0GAG0000007 Motor Drive(Loading)
IC2019 C3EBEG0000072 EEPROM IC (Not Supplied)
IC2010 C0ABBB000118 Buffer Amp
IC2011 C1BB00000845 ASP IC
Q2028 B1GBCFJN0033 Muting Switch
Q2002 B1GBCFJJ0051 Motor Drive
Q2001 B1GBCFJJ0051 Motor Drive
SA-HT730GCP MAIN CIRCUIT

SCHEMATIC DIAGRAM-5

B MAIN CIRCUIT

:+B SIGNAL LINE :-B SIGNAL LINE :MAIN SIGNAL LINE

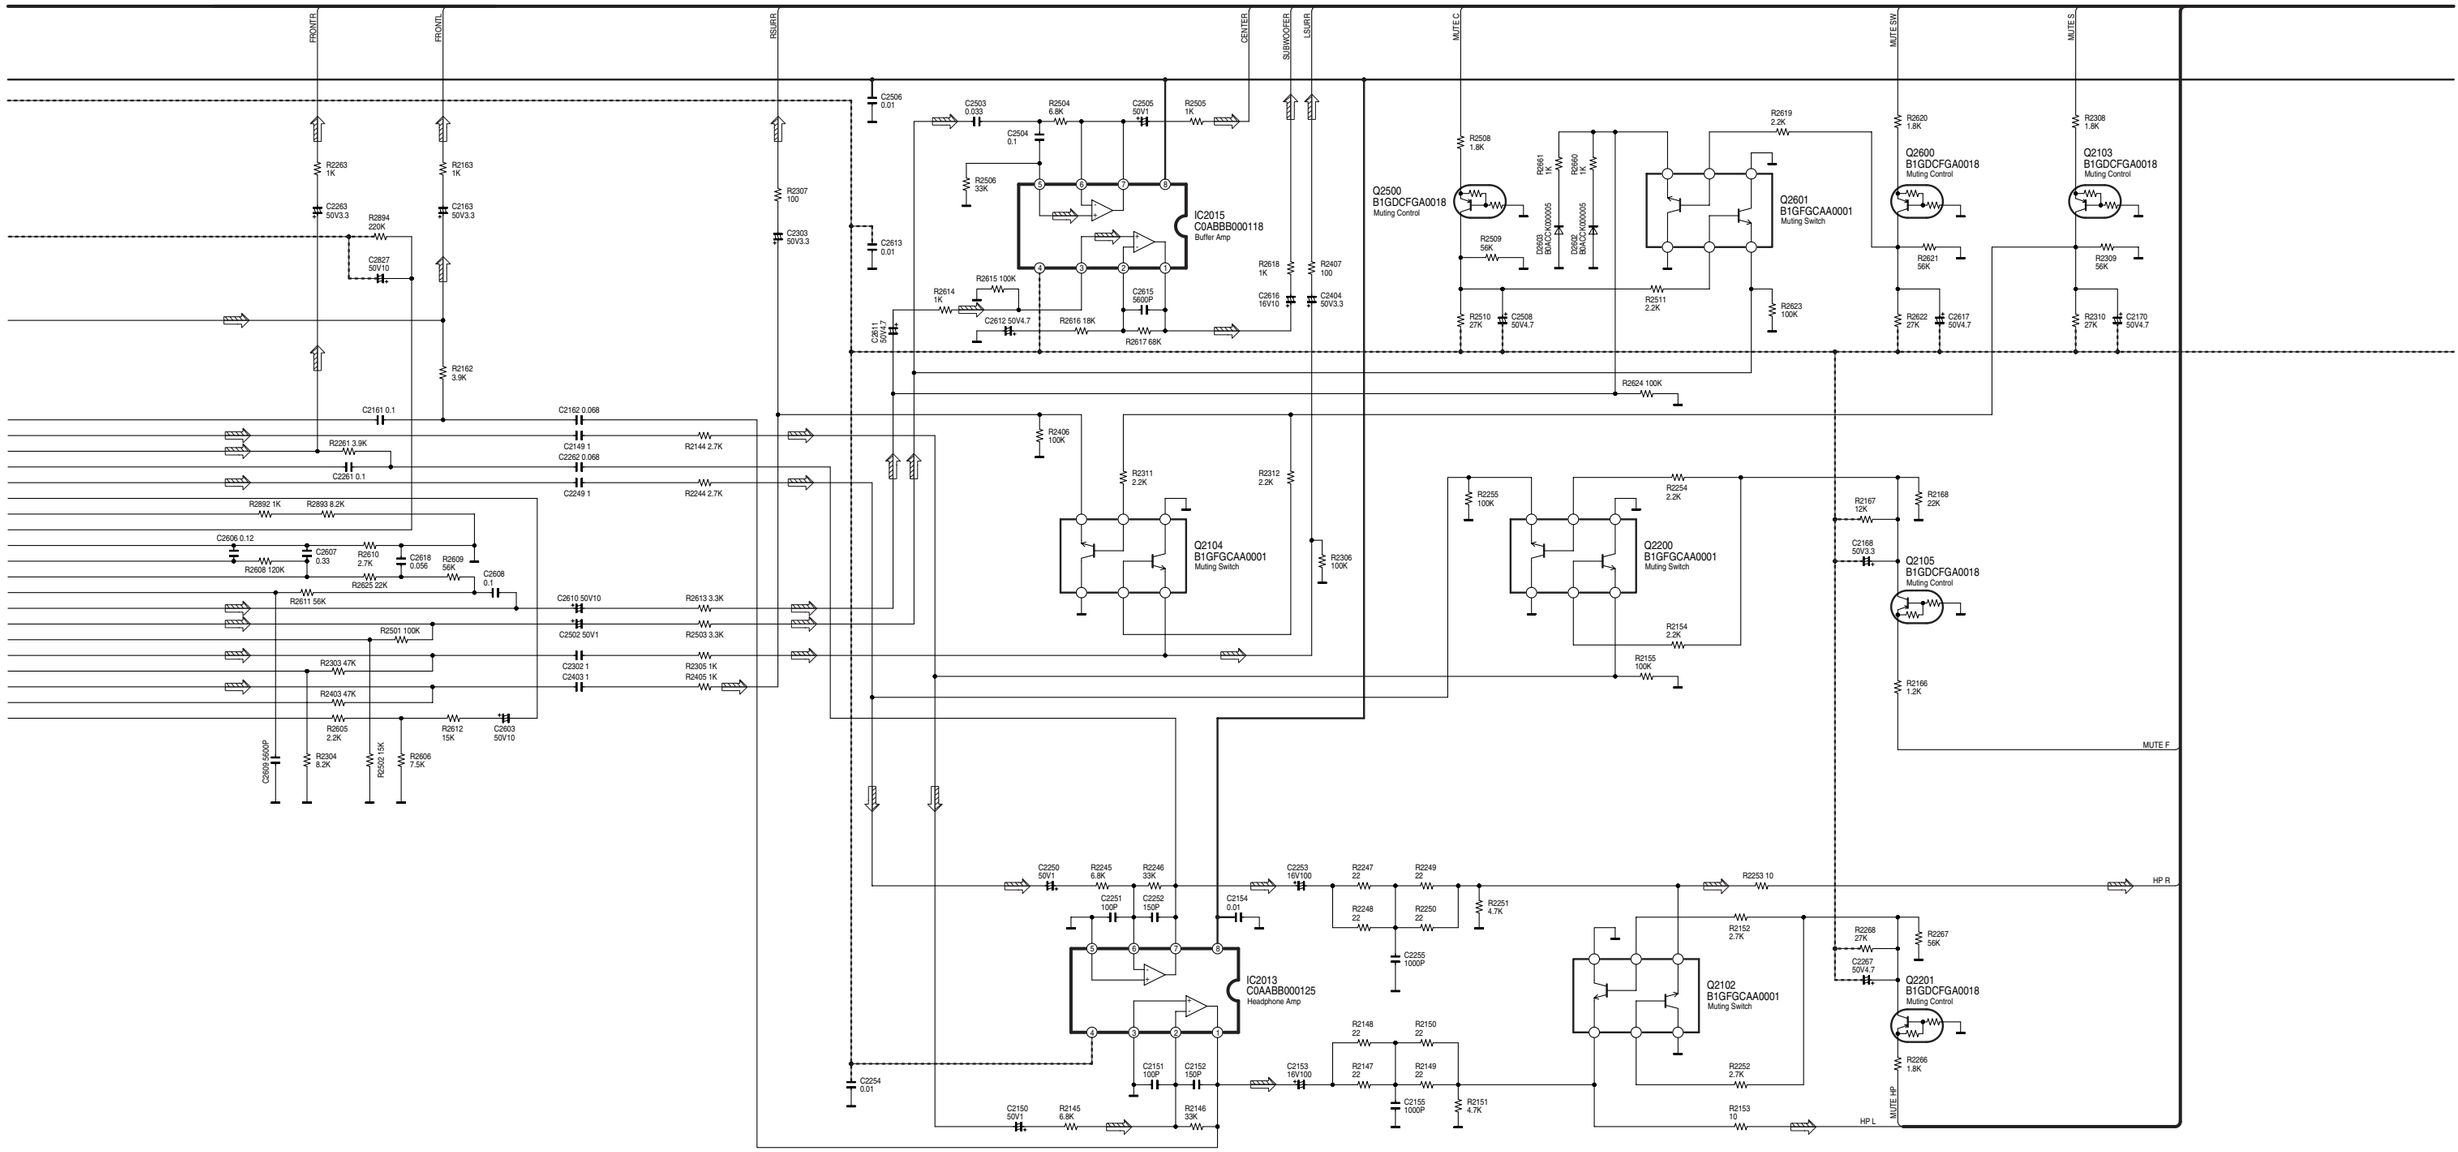

SA-HT730GCP MAIN CIRCUIT

SCHEMATIC DIAGRAM-6

B MAIN CIRCUIT

:+B SIGNAL LINE :-B SIGNAL LINE :DVD(VIDEO) SIGNAL LINE

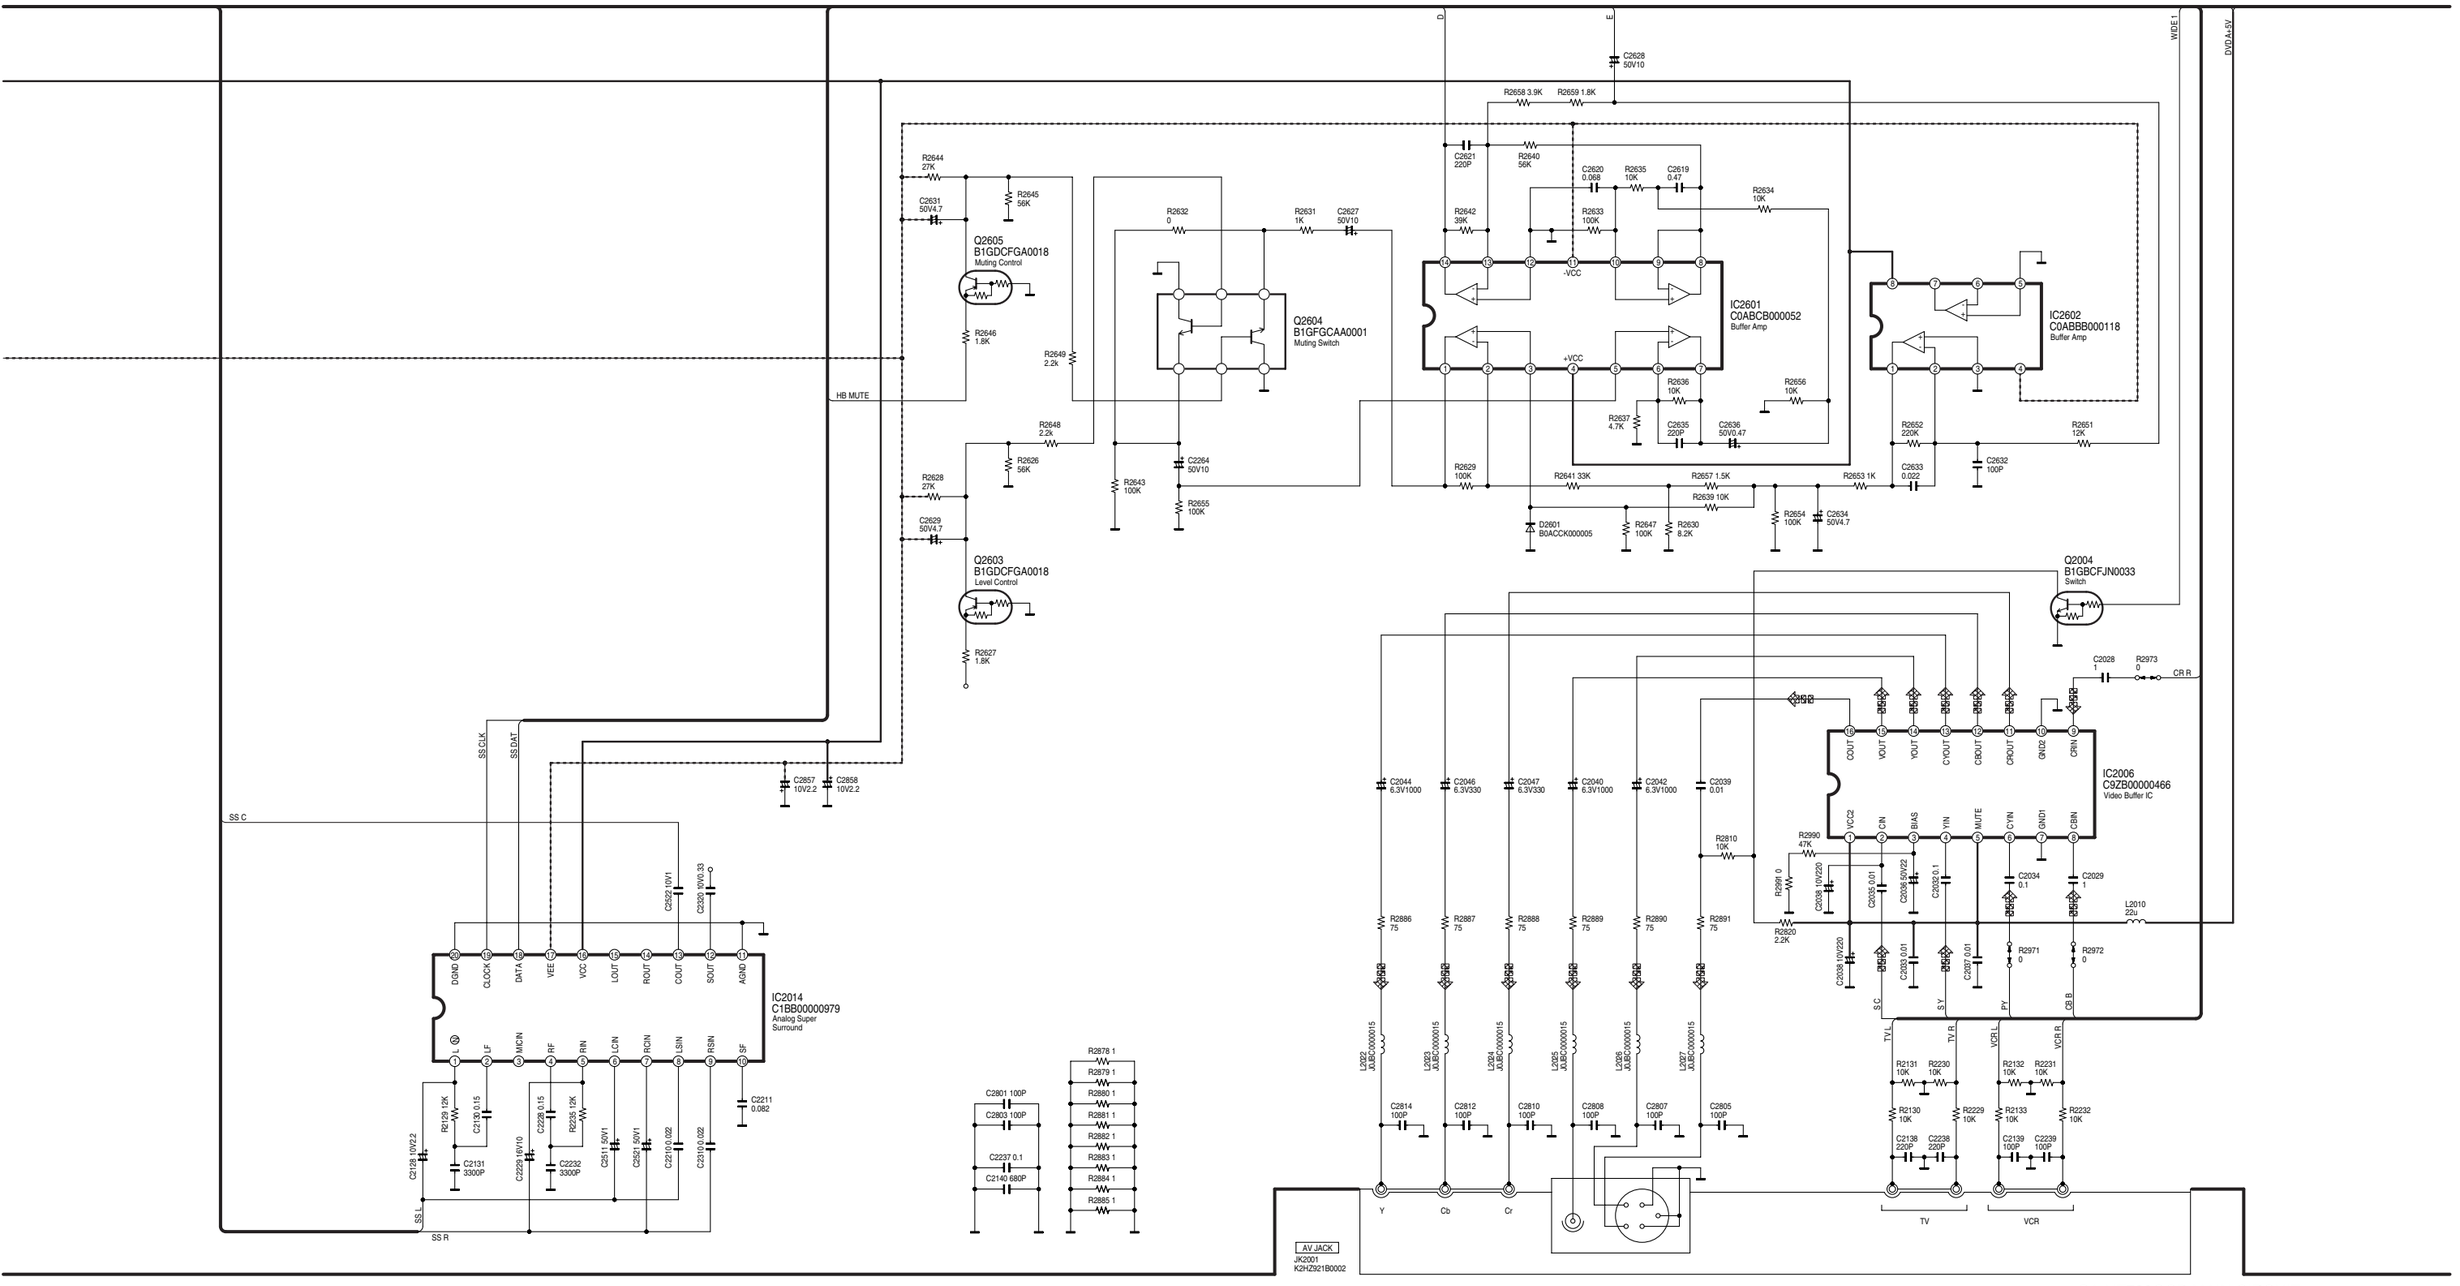

SCHEMATIC DIAGRAM-7

B MAIN CIRCUIT

—— :+B SIGNAL LINE ---- :-B SIGNAL LINE ⇨ :MAIN SIGNAL LINE

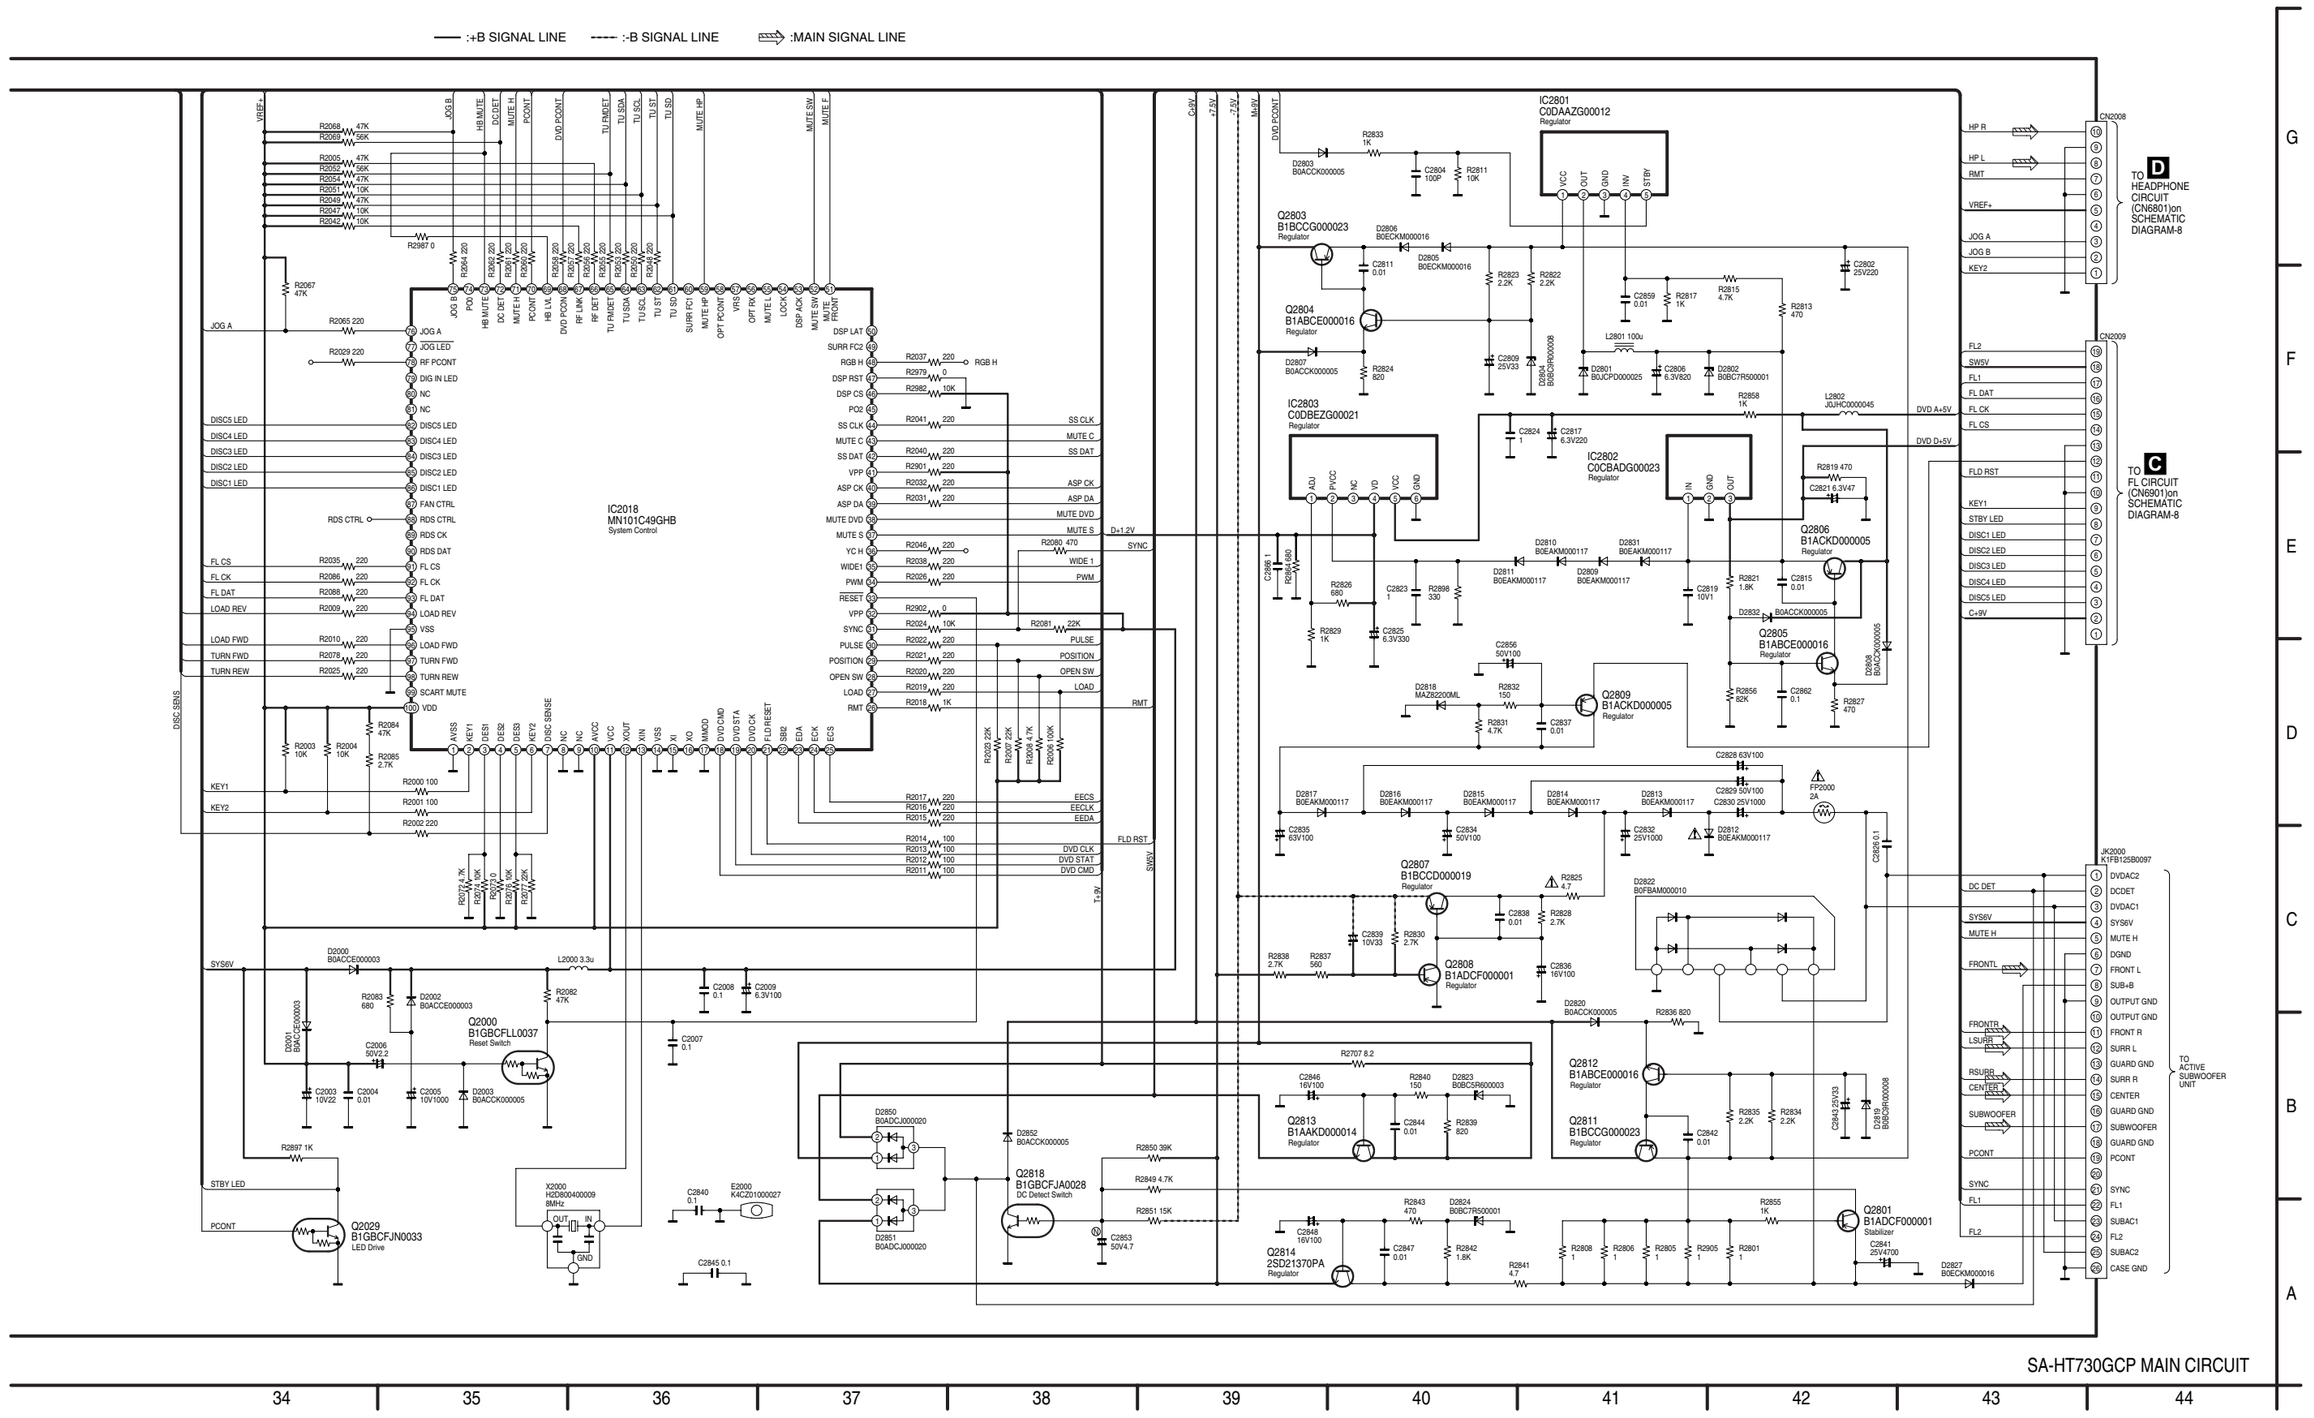

SA-HT730GCP MAIN CIRCUIT

SCHEMATIC DIAGRAM-8

C FL CIRCUIT

:+B SIGNAL LINE :MAIN SIGNAL LINE

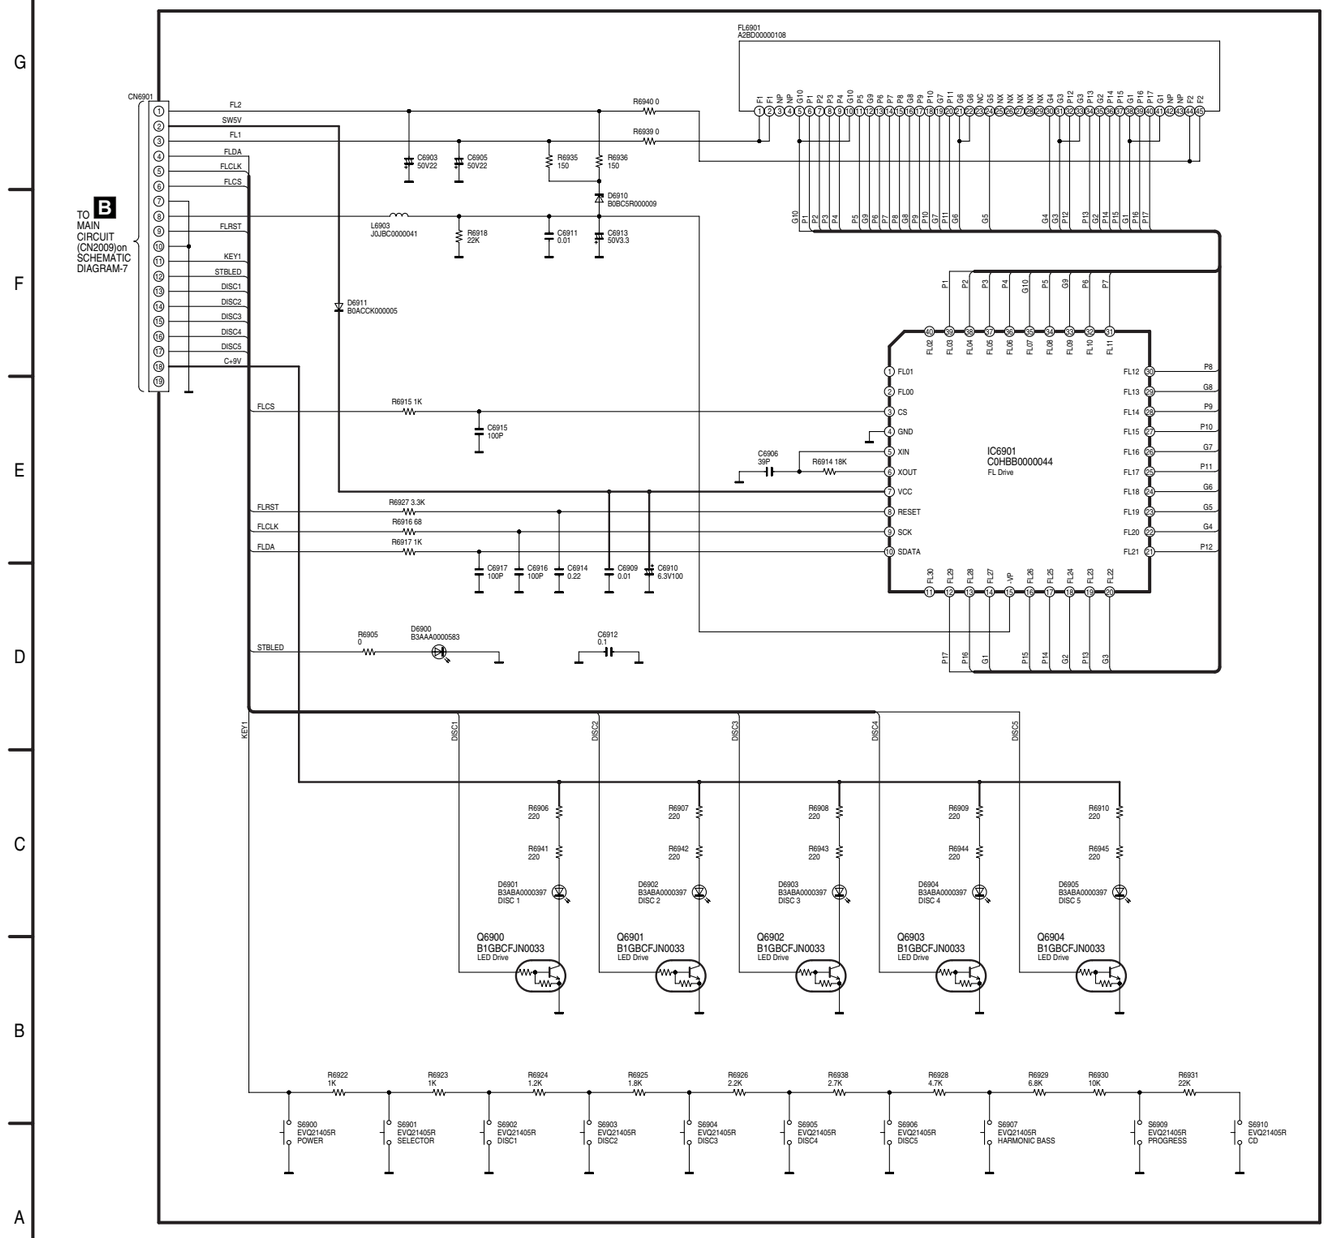

D HEADPHONE CIRCUIT

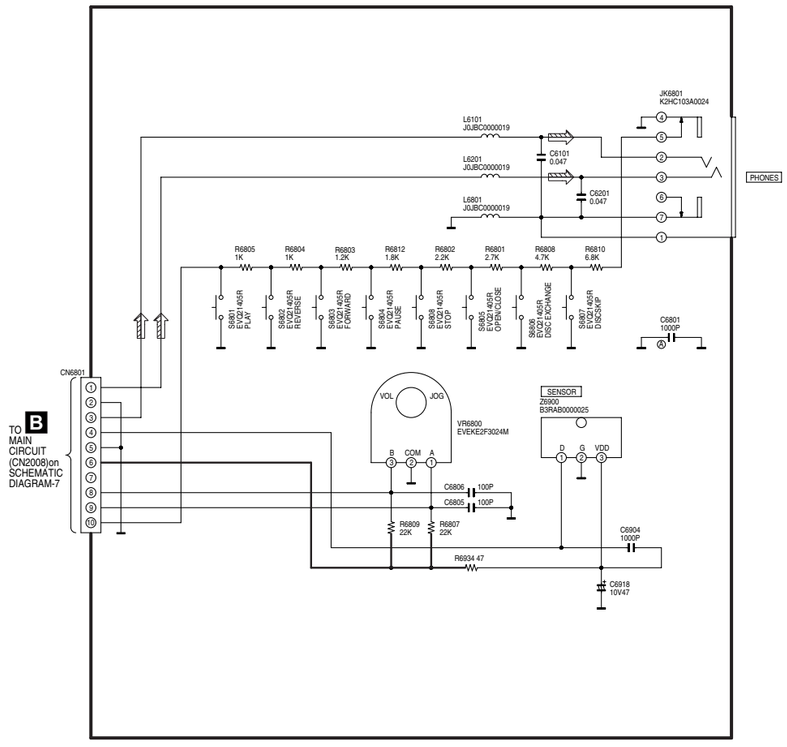

SA-HT730GCP FL/HEADPHONE CIRCUIT

SCHEMATIC DIAGRAM-9

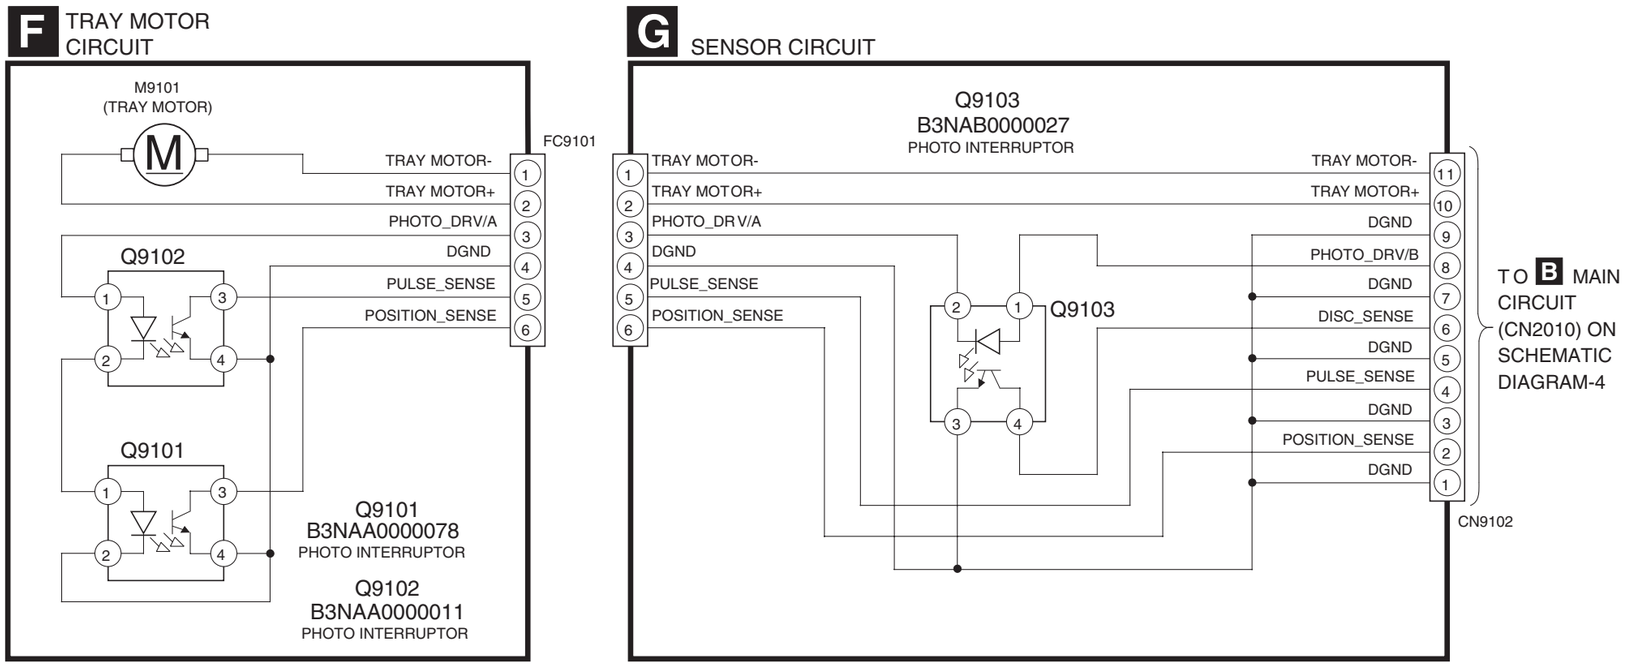

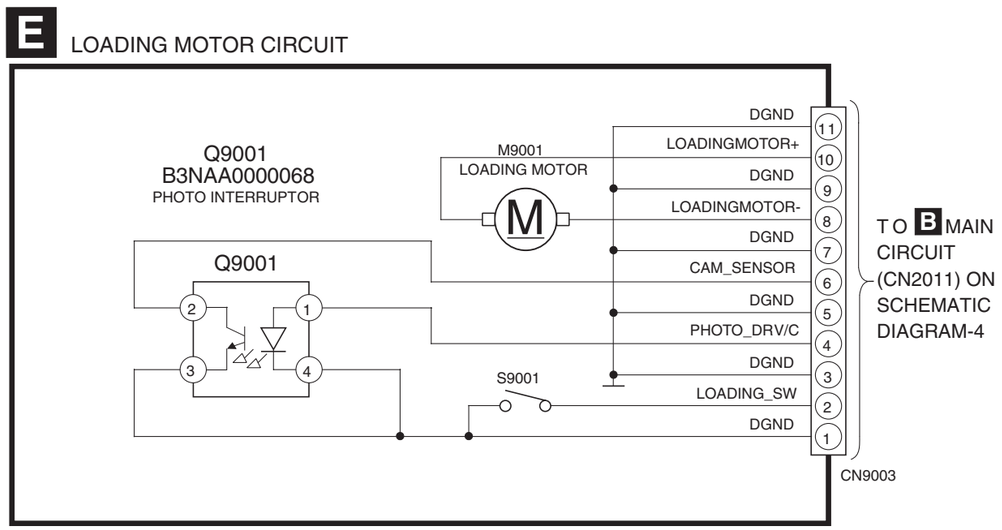

SA-HT730GCP LOADING MOTOR/TRAY MOTOR/SENSOR CIRCUIT

SA-HT730GCP

23 Printed Circuit Board Diagram

A DVD MODULE P.C.B. (REP3867A) (SIDE:A)

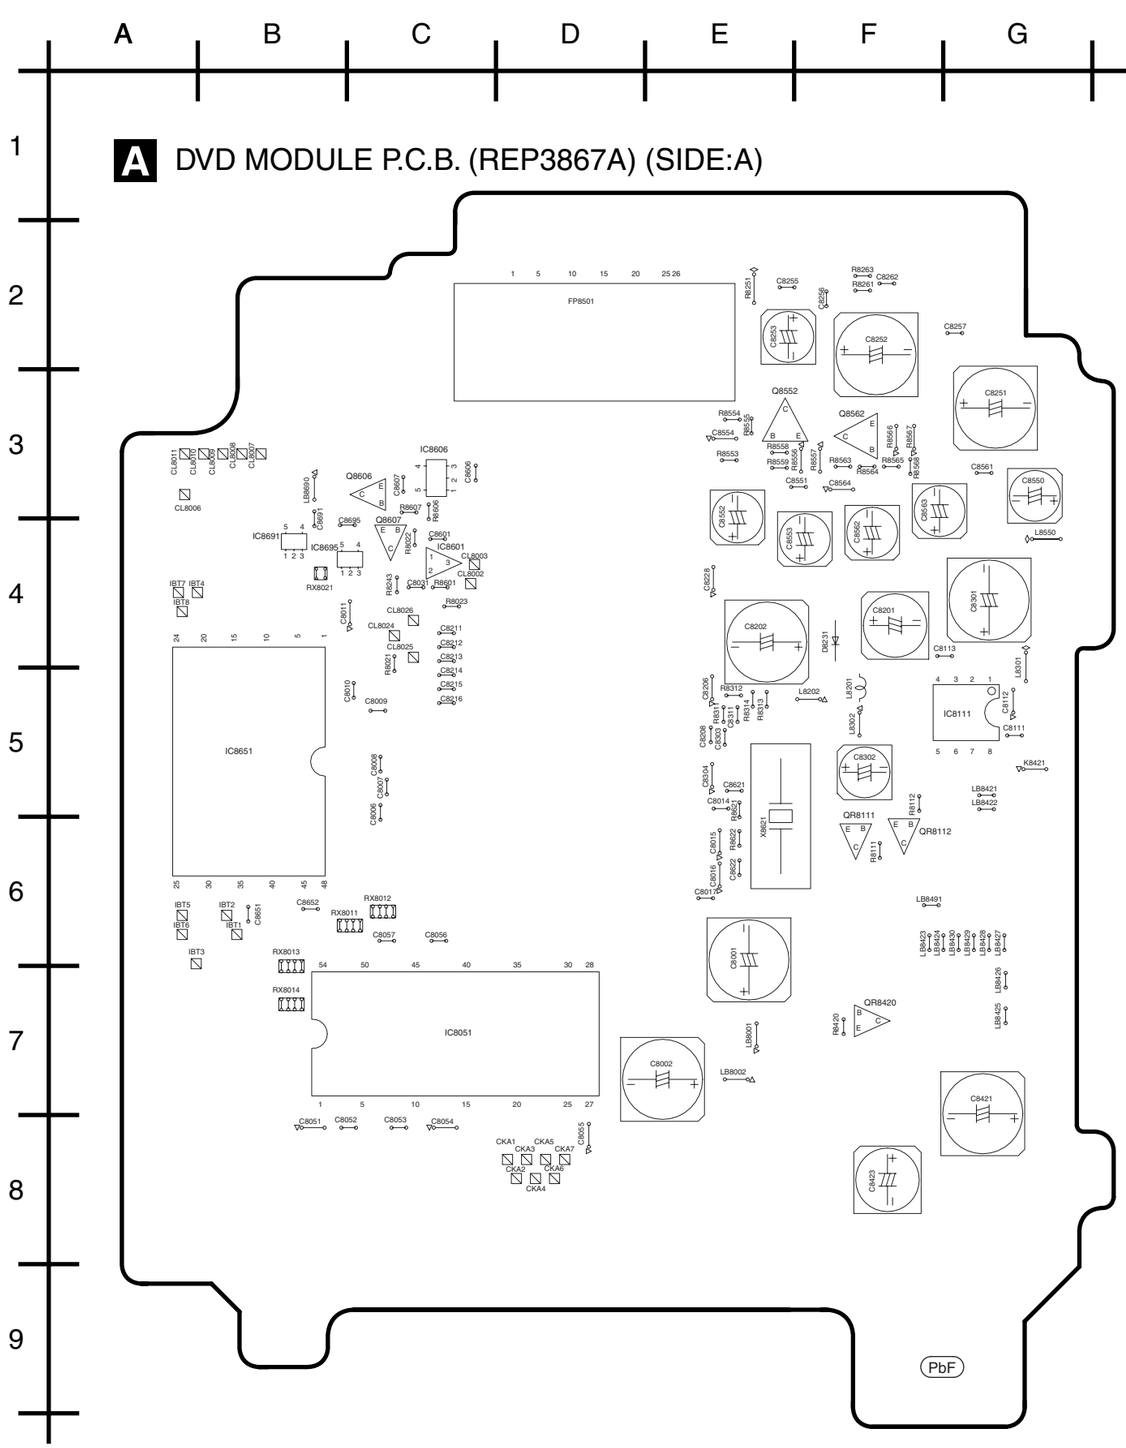

A DVD MODULE P.C.B. (REP3867A) (SIDE:B)

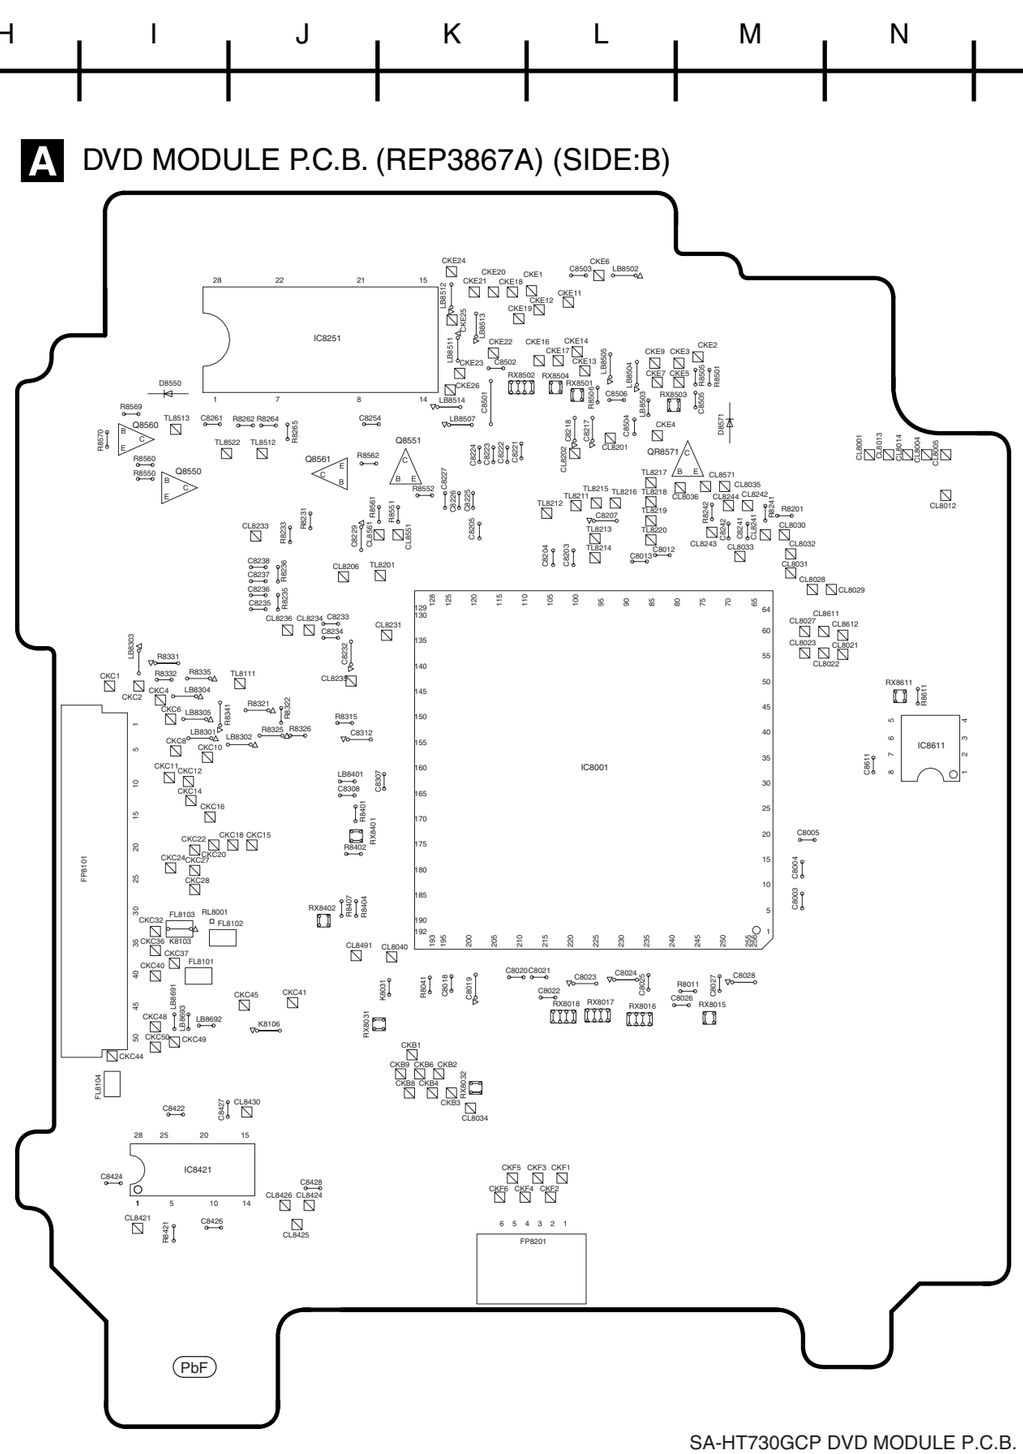

SA-HT730GCP DVD MODULE P.C.B.

B MAIN P.C.B. (REPX0450B)

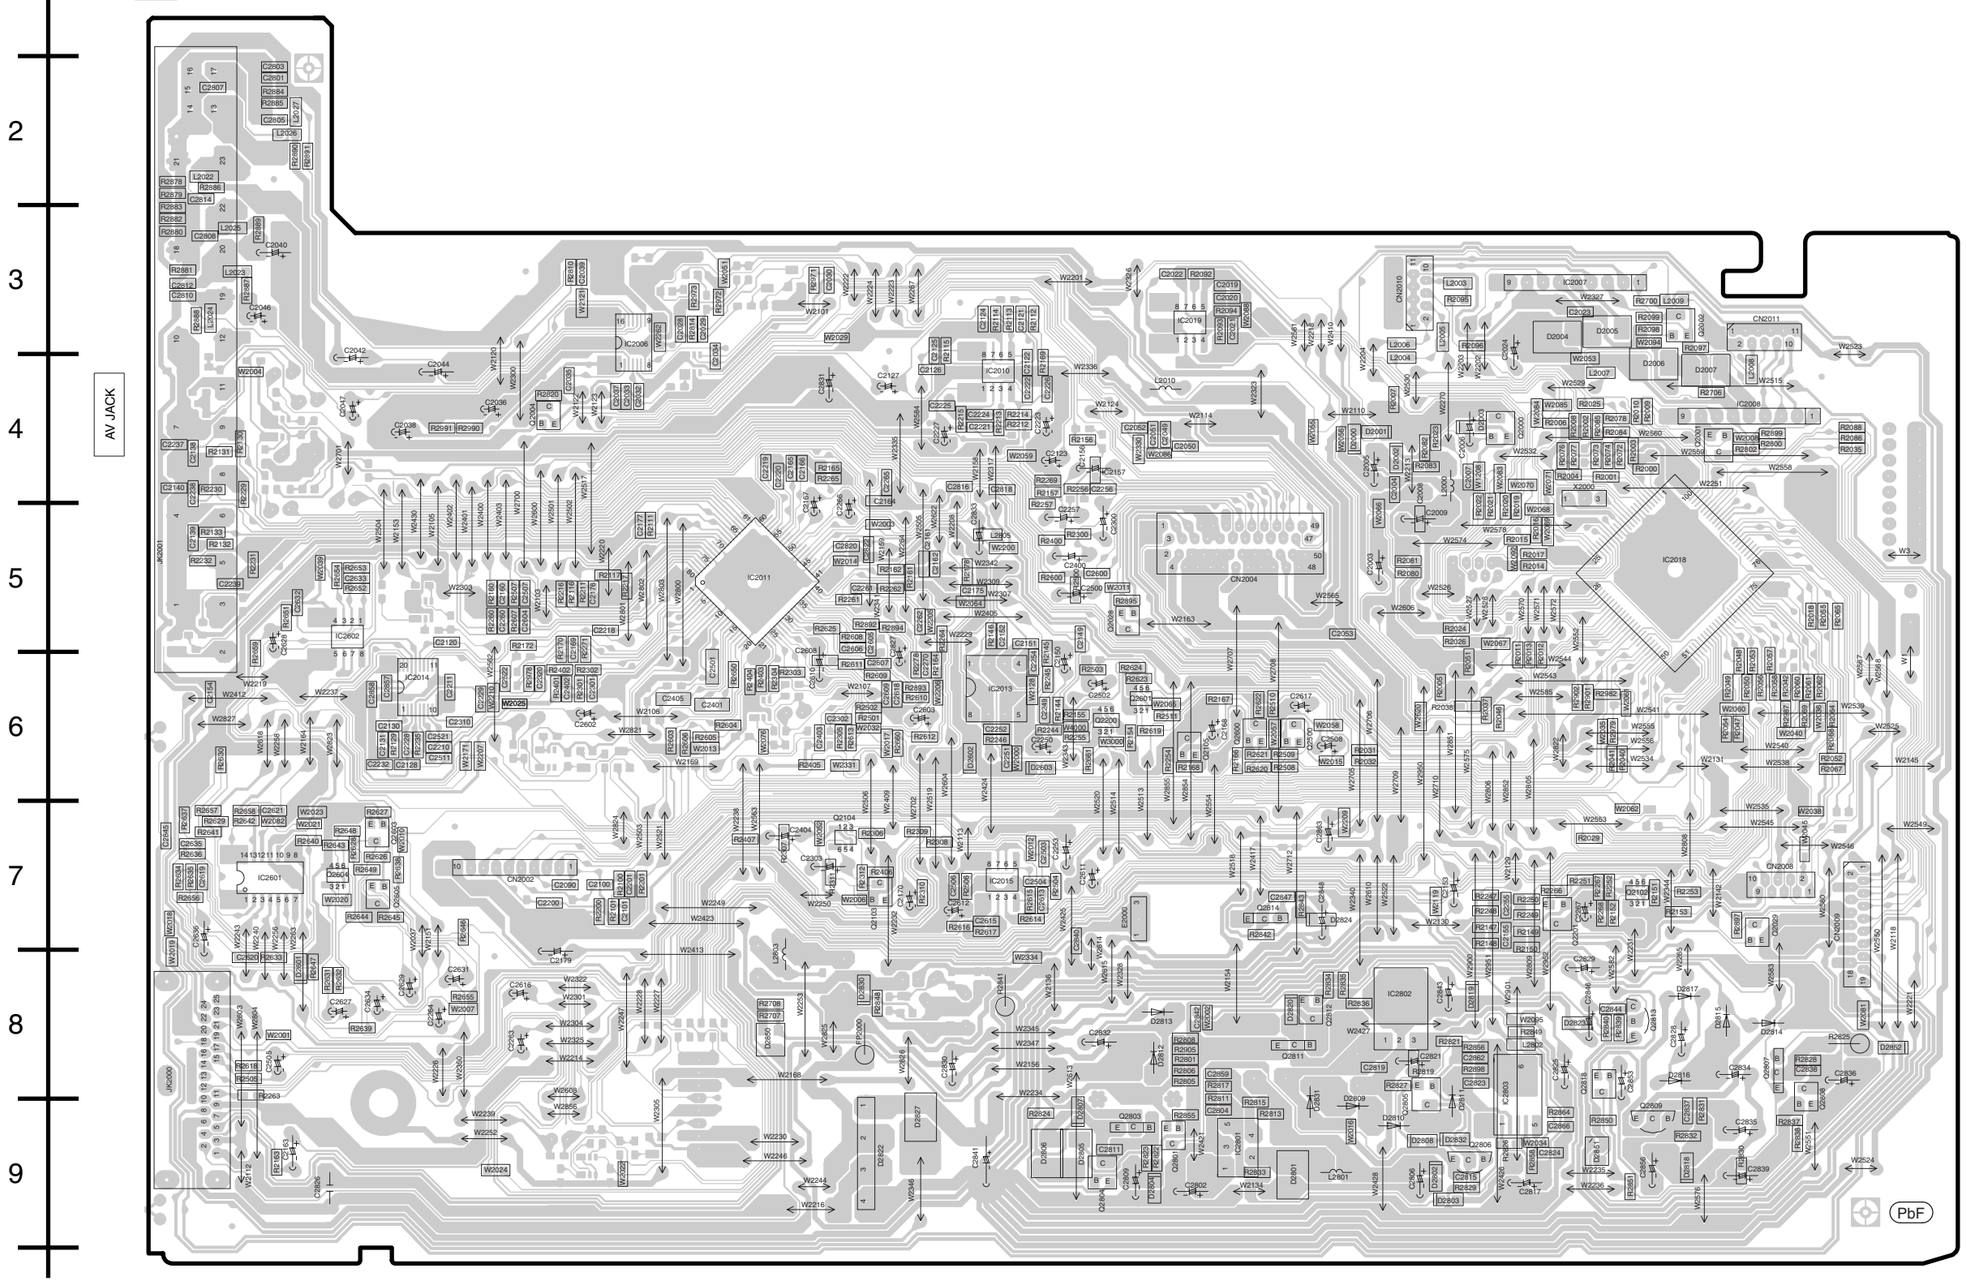

SA-HT730GCP MAIN P.C.B.

C FL P.C.B. (REPX0454A)

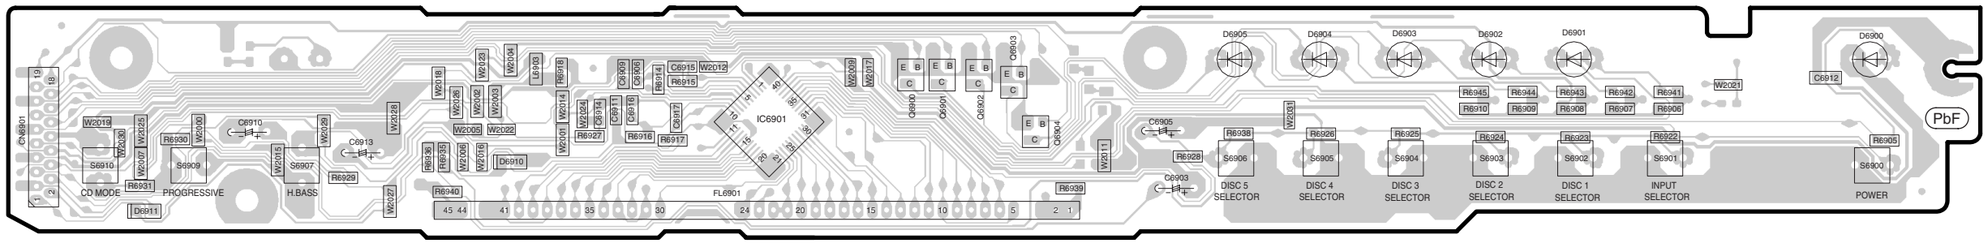

D HEADPHONE P.C.B. (REPX0454A)

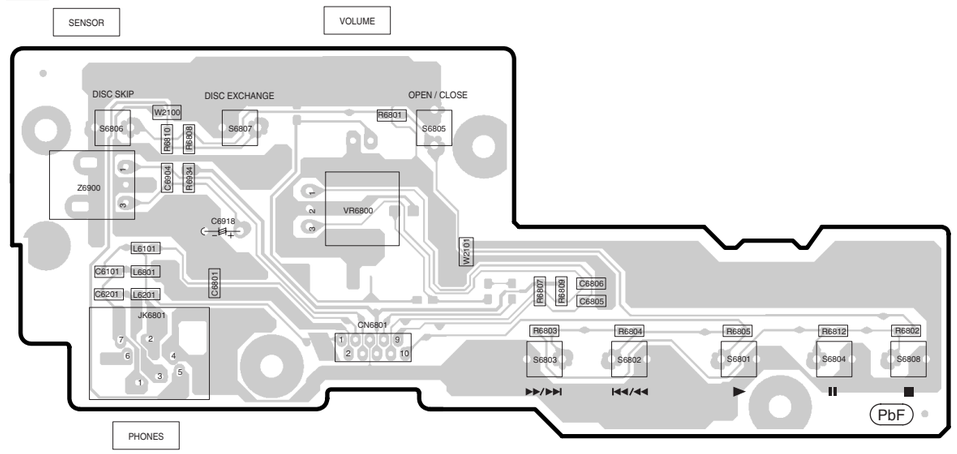

SA-HT730GCP FL/HEADPHONE P.C.B.

E LOADING MOTOR P.C.B.
(REP3465A)

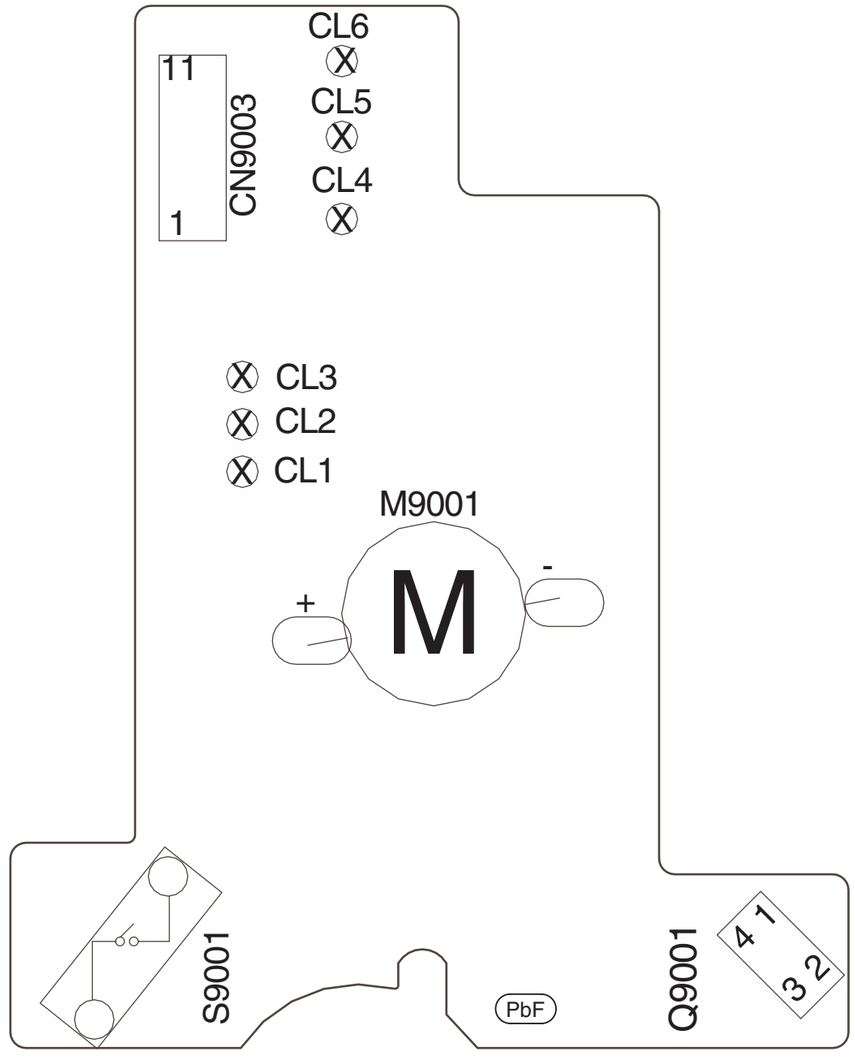

F TRAY MOTOR P.C.B.
(REP3466A)

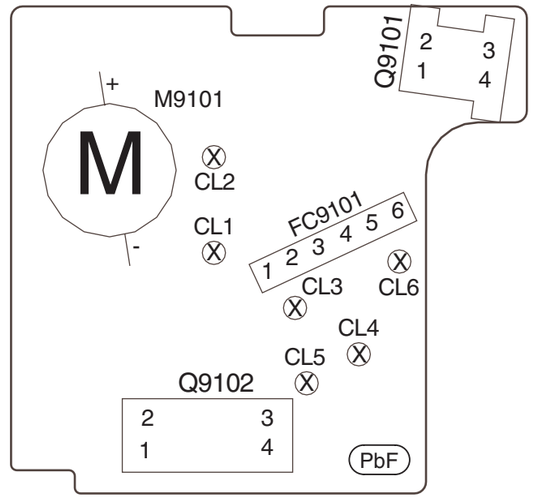

G SENSOR P.C.B.
(REPX3466A)

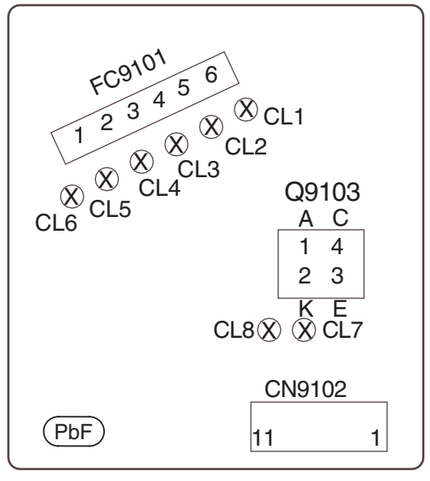

24 Wiring Connection Diagram

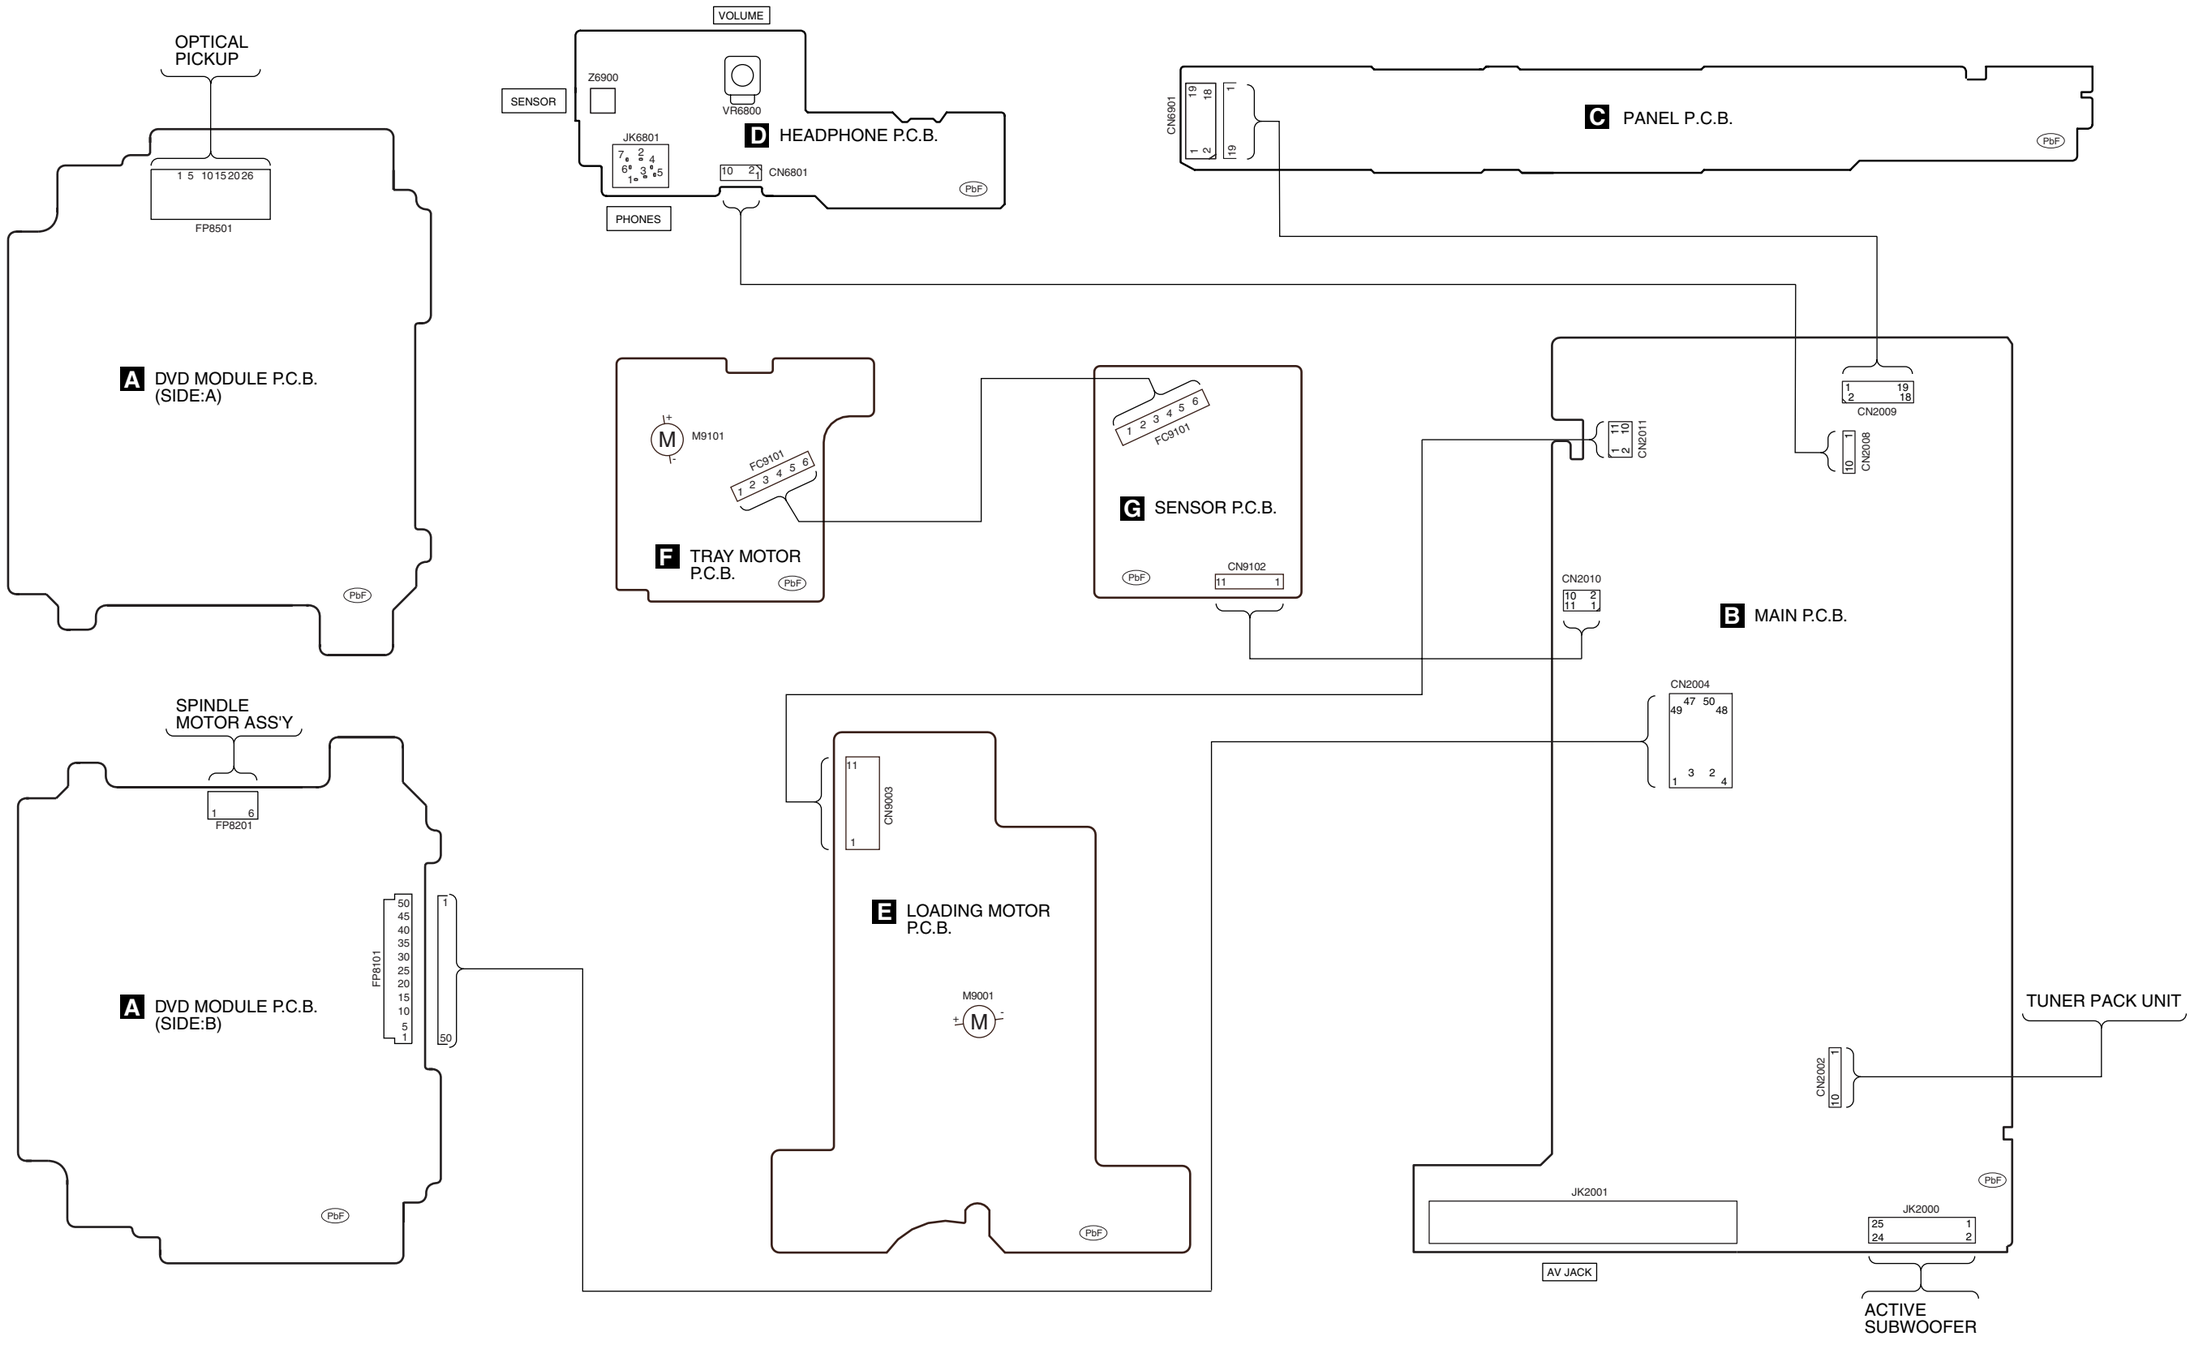

SA-HT730GCP WIRING CONNECTION

SA-HT730GCP

25 Illustration of IC's, Transistors and Diodes

<table>
<tr>
<td colspan="3"> 

C0ABBB000118 (8p)
C0ABCB000052 (14p)
C0CBCBD00018 (8p)
C0FBBK000050 (28p)
C1BB00000979 (20p)
C3ABPG000133 (54p)
C9ZB00000466 (16p)
B1ABCE000016 (8p)
C3EBGC000044 (8p)
C3EBEG000072 (8p)</td>
<td colspan="2"> 

C0HBB0000044 (40p)
C1BB00000845 (80p)
MN101C49GHB (100p)
MN2DS0003APH (256p)</td>
<td>RFKWMH82H160
 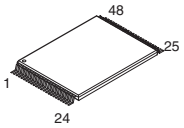
</td>
</tr>
<tr>
<td>C0AABB000125
 
</td>
<td>C0GAG0000007
 
</td>
<td>C0GBG0000048
 
</td>
<td>C0CBADG00023
 
</td>
<td>C0EBA0000031
C0JBAA000346
 
</td>
<td>C0EBE0000384
 
</td>
</tr>
<tr>
<td>C0DBEZG00021
 
</td>
<td>C0DAAZG00012
 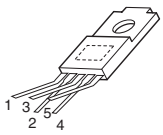
</td>
<td>B1BCCG000023
 
</td>
<td>2SD21370PA
 
</td>
<td colspan="2">2SB09700RL
2SB1219AHL
2SD1819A0L
UNR521400L
 

B1GBCFLL0037
B1ADCF000001
B1GBCFJA0028
B1GBCFJN0033
B1GDCFGA0018
B1GBCFJJ0051
UNR511V00L
UNR521100L</td>
</tr>
<tr>
<td>B1AAKD000014
 
</td>
<td>B1ACKD000005
 
</td>
<td>B1GFGCAA0001
 
</td>
<td>B0ADCJ000020
 
</td>
<td>MAZ82200ML
B0BC5R000009
 
</td>
<td>B0ECKM000016
B0JCPD000025
 
</td>
</tr>
<tr>
<td>MA2J11100L
 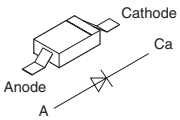
</td>
<td colspan="2">B0ACCE000003
B0ACCK000005
B0BC9R000008
B0BC7R500001
 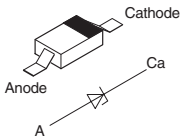
</td>
<td>B0BC5R600003
 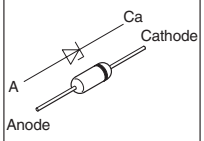
</td>
<td>B0EAKM000117
 
</td>
<td>MA2J72800L
 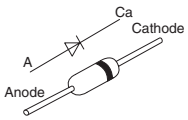
</td>
</tr>
<tr>
<td>B0FBAM000010
 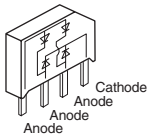
</td>
<td>B3AAA0000583
B3ABA0000397
 
</td>
<td>B3NAA0000068
 
</td>
<td>B3NAA0000011
 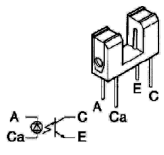
</td>
<td colspan="2">B3NAA0000078
 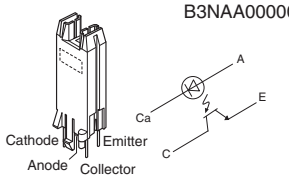
</td>
</tr>
<tr>
<td colspan="2">B3NAB0000027
 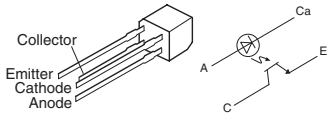
</td>
<td>B1BCCD000019
 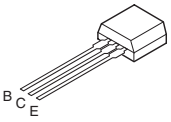
</td>
<td colspan="3"></td>
</tr>
</table>

26 Terminal Function of ICs

26.1. IC2018 (MN101C49GHB): Operation CPU

Pin No.	Terminal Name	I/O	Function
1	AVSS	-	- Power supply for A/D converter
2	KEY1	I	Key 1 line input
3	DES1	I	Tuner region setting signal input
4	DES2	I	Model select signal input
5	DES3	I	DVD region setting signal input
6	KEY2	I	Key 2 line input
7	DISC SENSE	I	Disc sensor signal input
8	VSS	-	GND
9	VSS	-	GND
10	VREF+	-	+ Power supply for A/D converter
11	VCC	-	Power supply terminal (5V)
12	XOUT	-	Main clock output (8.0MHz)
13	XIN	-	Main clock input (8.0MHz)
14	VSS	-	GND
15	VSS	-	GND
16	NC	-	Not used, open
17	VSS	-	GND
18	DVD CMD	O	DVD command signal output
19	DVD STA	I	DVD status signal input
20	DVD CK	I	DVD clock signal input
21	FLD RST	O	FL Driver Reset signal output
22	NC	-	Not used
23	EDA	I/O	EEPROM data in/output
24	ECK	O	EEPROM clock output
25	ECS	O	EEPROM latch output
26	RMT	I	Remote control input
27	LOAD	I	UP/DOWN switch signal input
28	OPEN SW	I	Rotary tray OPEN switch signal input
29	POS SW	I	Position detection sensor signal input
30	PULSE	I	Speed detection sensor signal input
31	SYNC	I	AC failure detection input
32	VPP	-	Power supply for Flash
33	RESET	I	System reset signal input
34	PWM	O	Pulse width modulation output for the changer
35	NC	-	Not used
36	NC	-	Not used
37	MUTE_S	O	Mute signal output for surround Audio signal
38	MUTE_ DVD	I	Signal output from DVD module control mute circuit
39	ASP_DA	O	ASP data output
40	ASP_CK	O	ASP clock output
41	VPP	-	Power supply for Flash
42	SS DATA	O	Surround data output
43	MUTE C	O	Mute signal output for Center speaker
44	SS_CLK	O	Surround clock output
45	NC	-	Not used, open
46	NC	-	Not used, open
47	NC	-	Not used, open
48	NC	-	Not used
49	NC	-	Not used
50	NC	-	Not used, open
51	MUTE F	O	Mute signal output for Front speaker
52	MUTE SW	O	Mute signal output for Subwoofer
53	NC	-	Not used, open
54	NC	-	Not used, open
55	MUTE L	O	Mute signal output for the line output
56	NC	-	Not used, open
57	NC	-	Not used, open
58	NC	-	Not used, open
59	MUTE_HP	O	Mute signal output for Headphone
60	NC	-	Not used
61	TU_SD	I	Tuner signal detect input
62	TU_ST/DO	I	Stereo indicator from Tuner/ DO output of Tuner IC
63	TU_SCL (PLL CK)	O	Clock output for Tuner
64	TU_SDA (PLL DA)	O	Data output for Tuner
65	FM_DET	I	Tuner FM detect signal input
66	RF_DET	I	RF detect input (Wireless ready)
67	FR_LINK	I	RF power control input (Wireless ready)
68	DVD_ PCNT	O	Control signal output for the power for the DVD module
69	NC	-	Not used, open
70	PCONT	O	Control signal output for the power control relay
71	MUTE H	O	Mute signal output for HIC amplifier
72	DC_DET	I	DC detection signal input
73	HB_MUTE	O	Mute signal output for Harmonic bass
74	NC	-	Not used, open
75	JOG_B	I	Volume jog B signal input
76	JOG_A	I	Volume jog A signal input
77	JOG_LED	-	Not used, open
78	RF_ PCONT	O	Control signal output for the RF power
79	NC	-	Not used, open
80	NC	-	Not used, open
81	NC	-	Not used, open
82	DISC5_ LED	O	Disc 5 LED control signal output
83	DISC4_ LED	O	Disc 4 LED control signal output
84	DISC3_ LED	O	Disc 3 LED control signal output
85	DISC2_ LED	O	Disc 2 LED control signal output
86	DISC1_ LED	O	Disc 1 LED control signal output
87	NC	-	Not used
88	NC	-	Not used, open
89	NC	-	Not used, open
90	NC	-	Not used, open
91	FL_CS	O	FL driver latch output
92	FL_CK	O	FL driver clock output
93	FL_DAT	O	Data input for the FL driver
94	LOAD_ REV	O	Reverse control signal output for OPEN/CLOSE motor
95	VSS	-	- Power supply for D/A converter
96	LOAD_ FWD	O	Forward control signal output for OPEN/CLOSE motor
97	TURN_ FWD	O	Forward control signal output for turn motor
98	TURN_ REW	O	Reverse control signal output for turn motor
99	NC	-	Not used, open
100	VDD	-	+ Power supply for D/A converter

27 Parts Location and Replacement Parts List

Notes:

*Important safety notice:

Components identified by ⚠ mark have special characteristics important for safety purpose.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacture's specified parts shown in the parts list.

*Warning: This product uses a laser diode. Refer to caution statements.

*Capacity values are in microfarads (μF) unless specified otherwise, P=Pico-farads (pF), F=Farads (F).

*Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM), 1M=1,000K (OHM).

*The parenthesized indications in the Remarks columns specify the model names and areas. (Refer to the cover page)

*The marking (RTL) indicates the retention time is limited for this item. After the discontinuation of this assembly in production, it will no longer be available.

*Reference for O/I book languages are as follows:

[Sp: Spanish]

*[M] indicates in the Remarks columns indicates parts supplied by PAVCSG.

*[SPG] indicates in the Remarks columns indicates parts supplied by SPG [PAVC].

27.1. Loading Mechanism, Traverse Unit & Cabinet

27.1.1. Loading Mechanism, Traverse Unit & Cabinet Parts Location

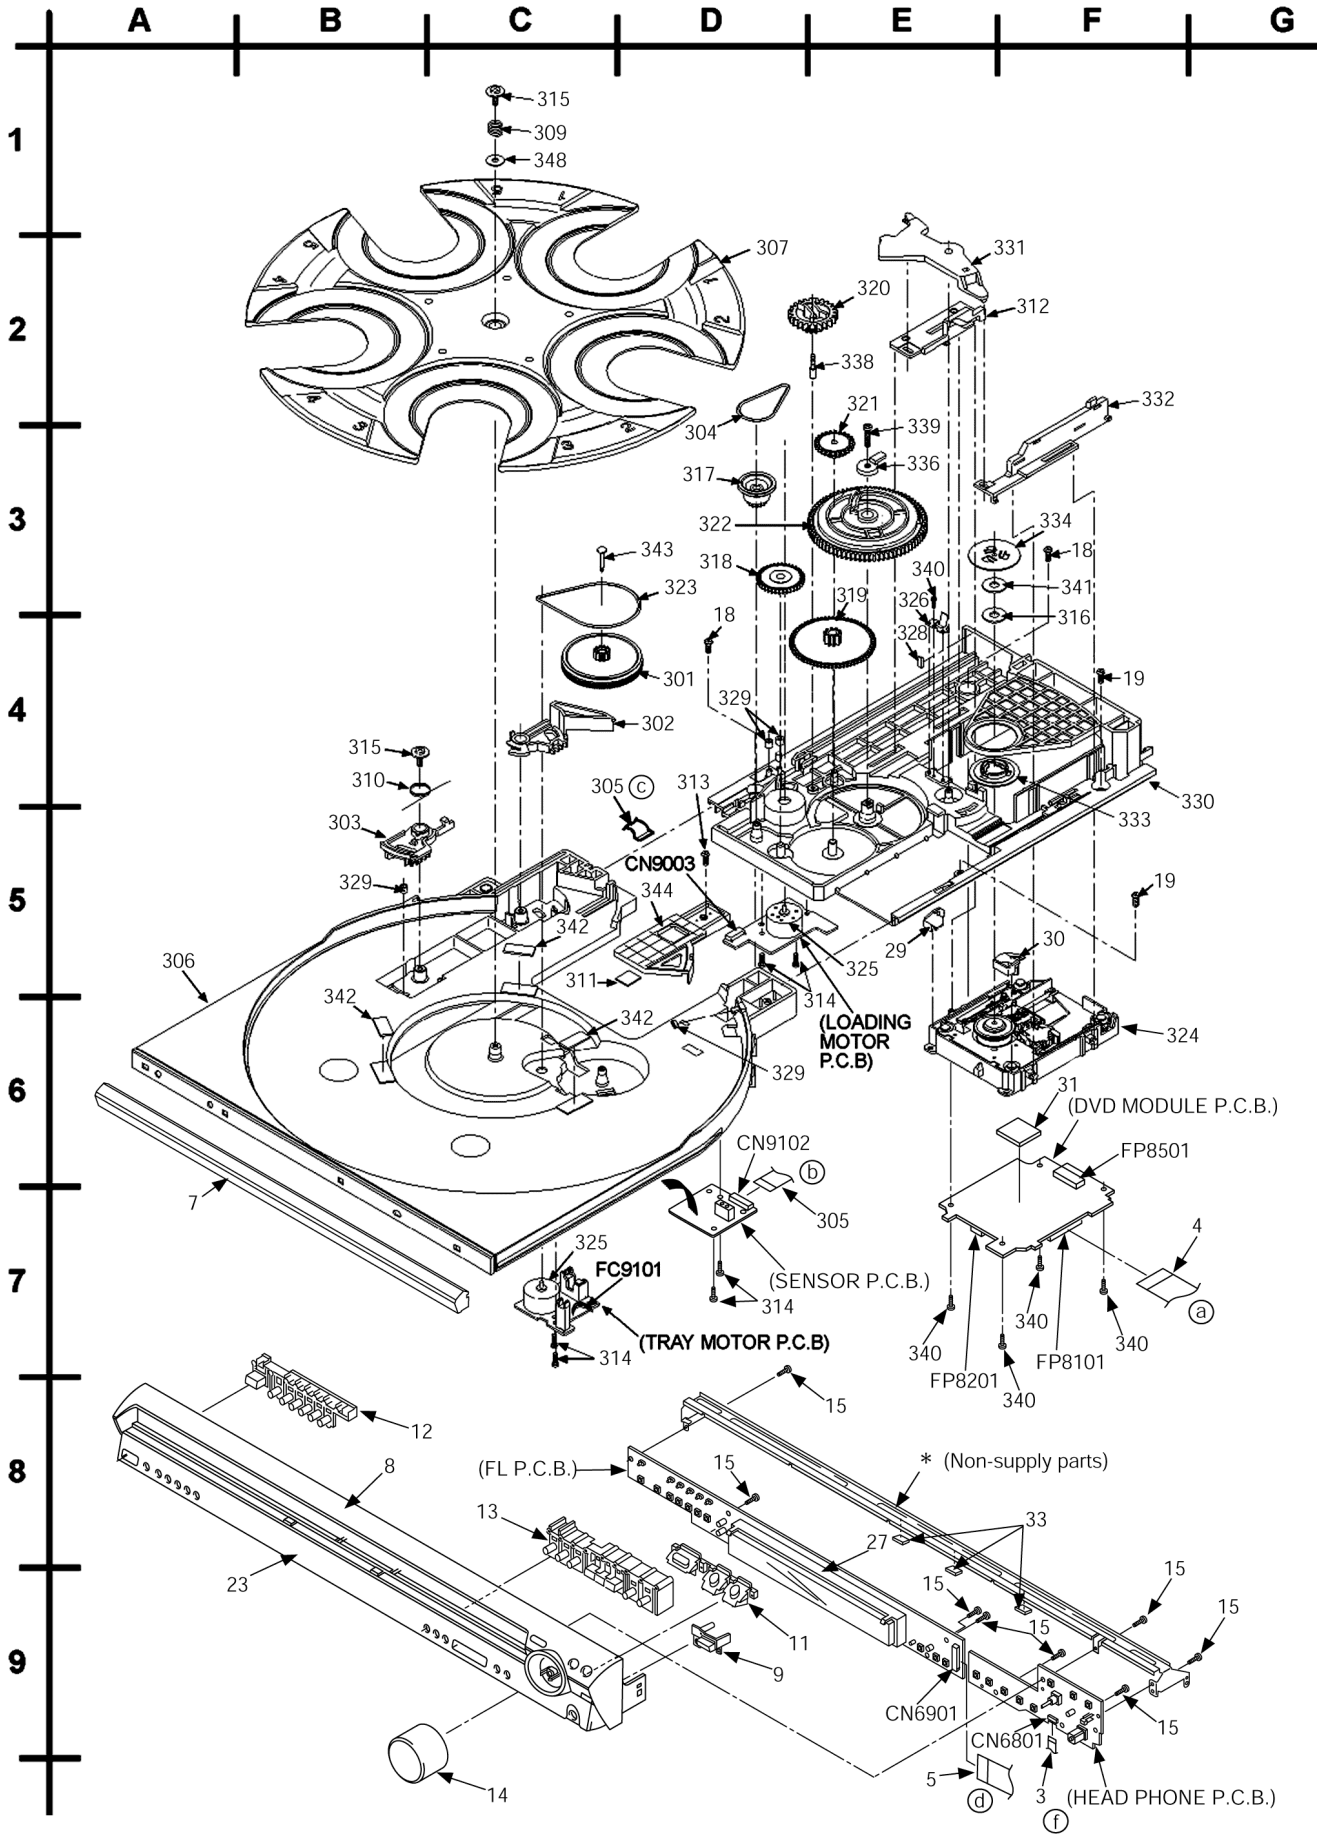

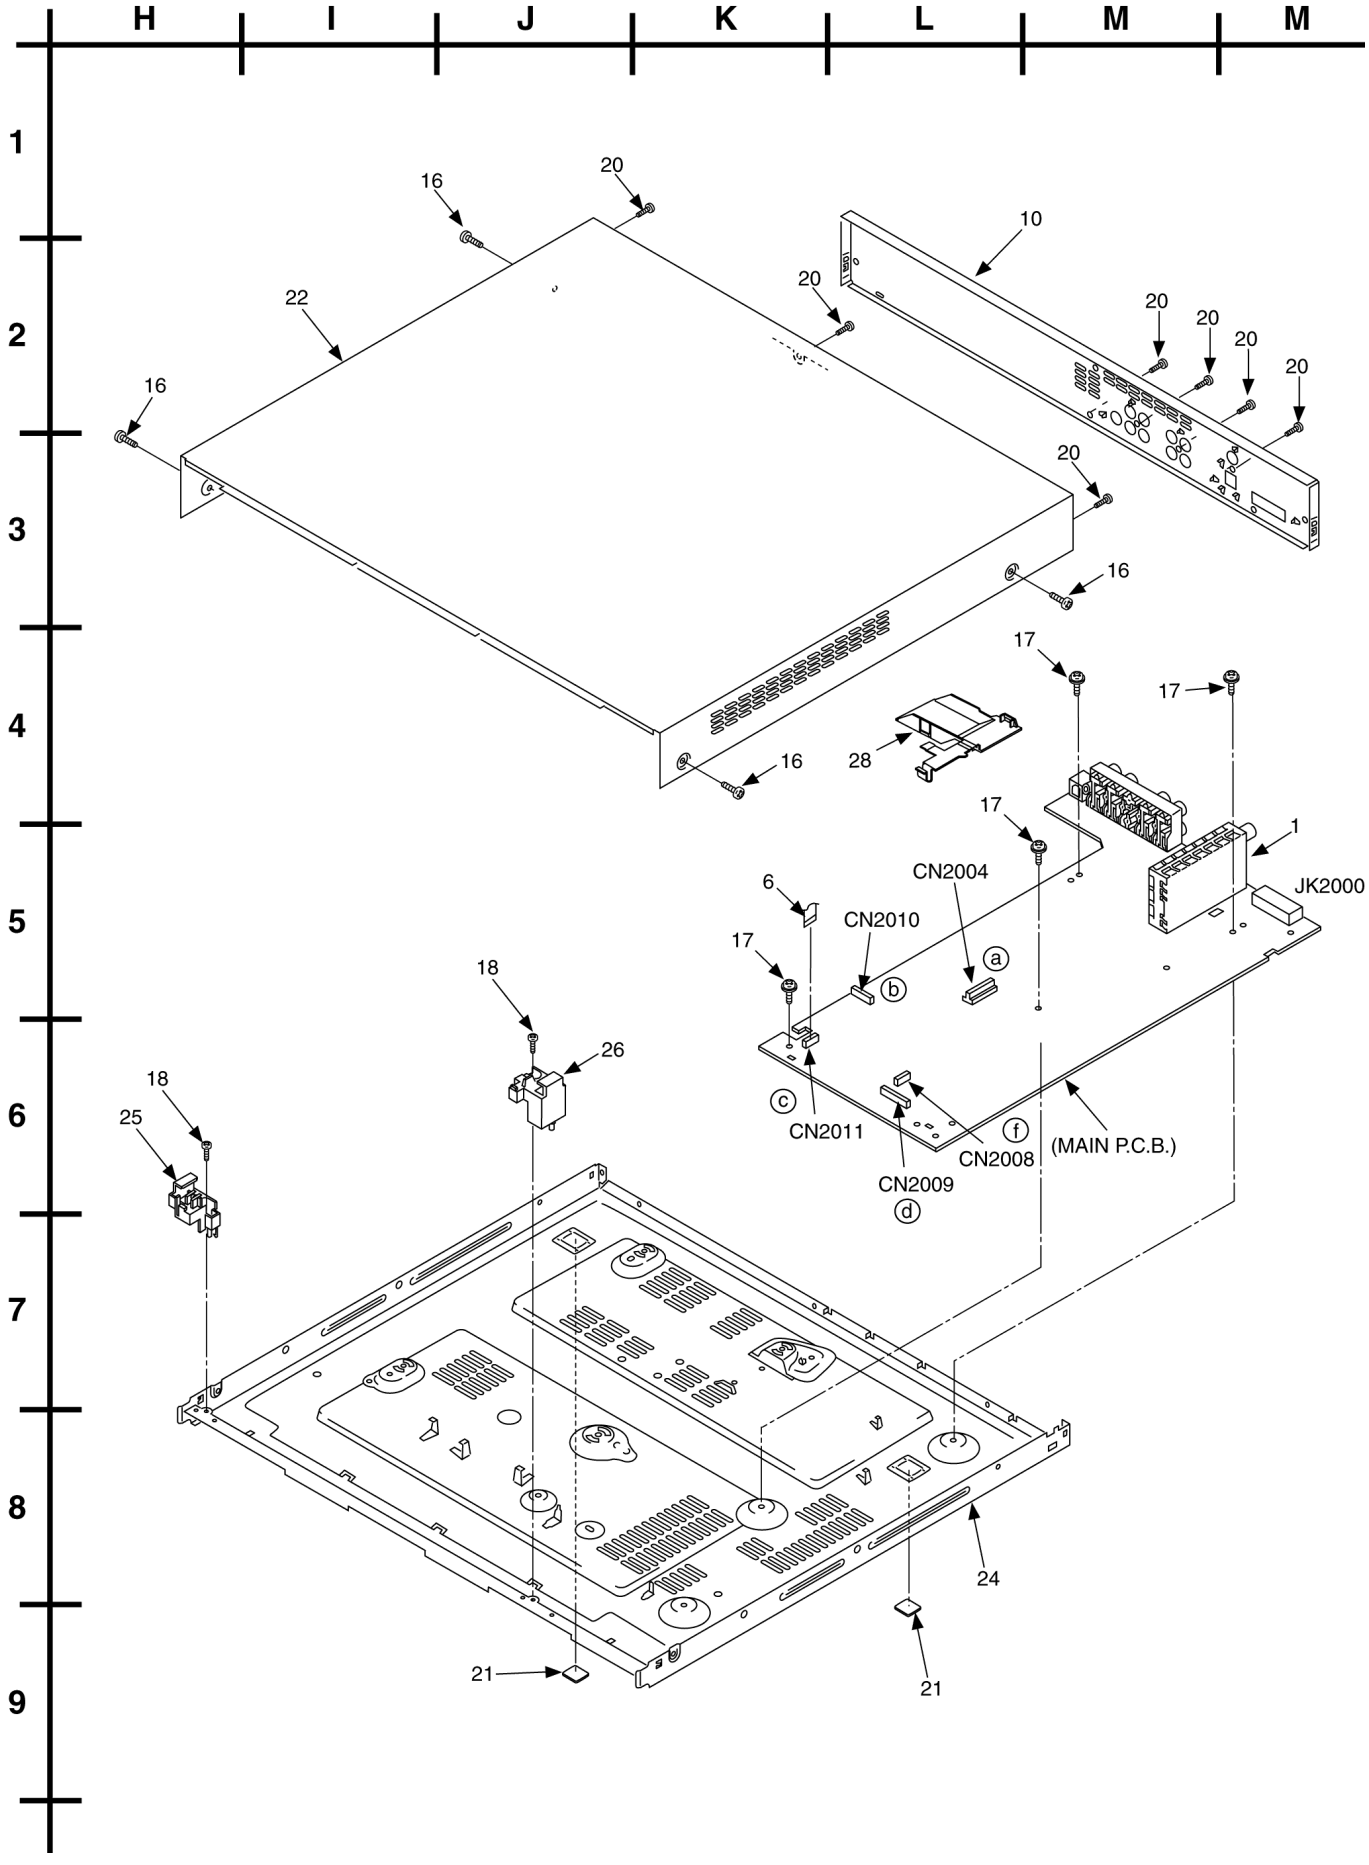
H
I
J
K
L
M
M
1
2
3
4
5
6
7
8
9
16
20
22
10
28
17
1
JK2000
CN2004
6
CN2010
18
26
25
CN2011
CN2008
(MAIN P.C.B.)
CN2009
24
21

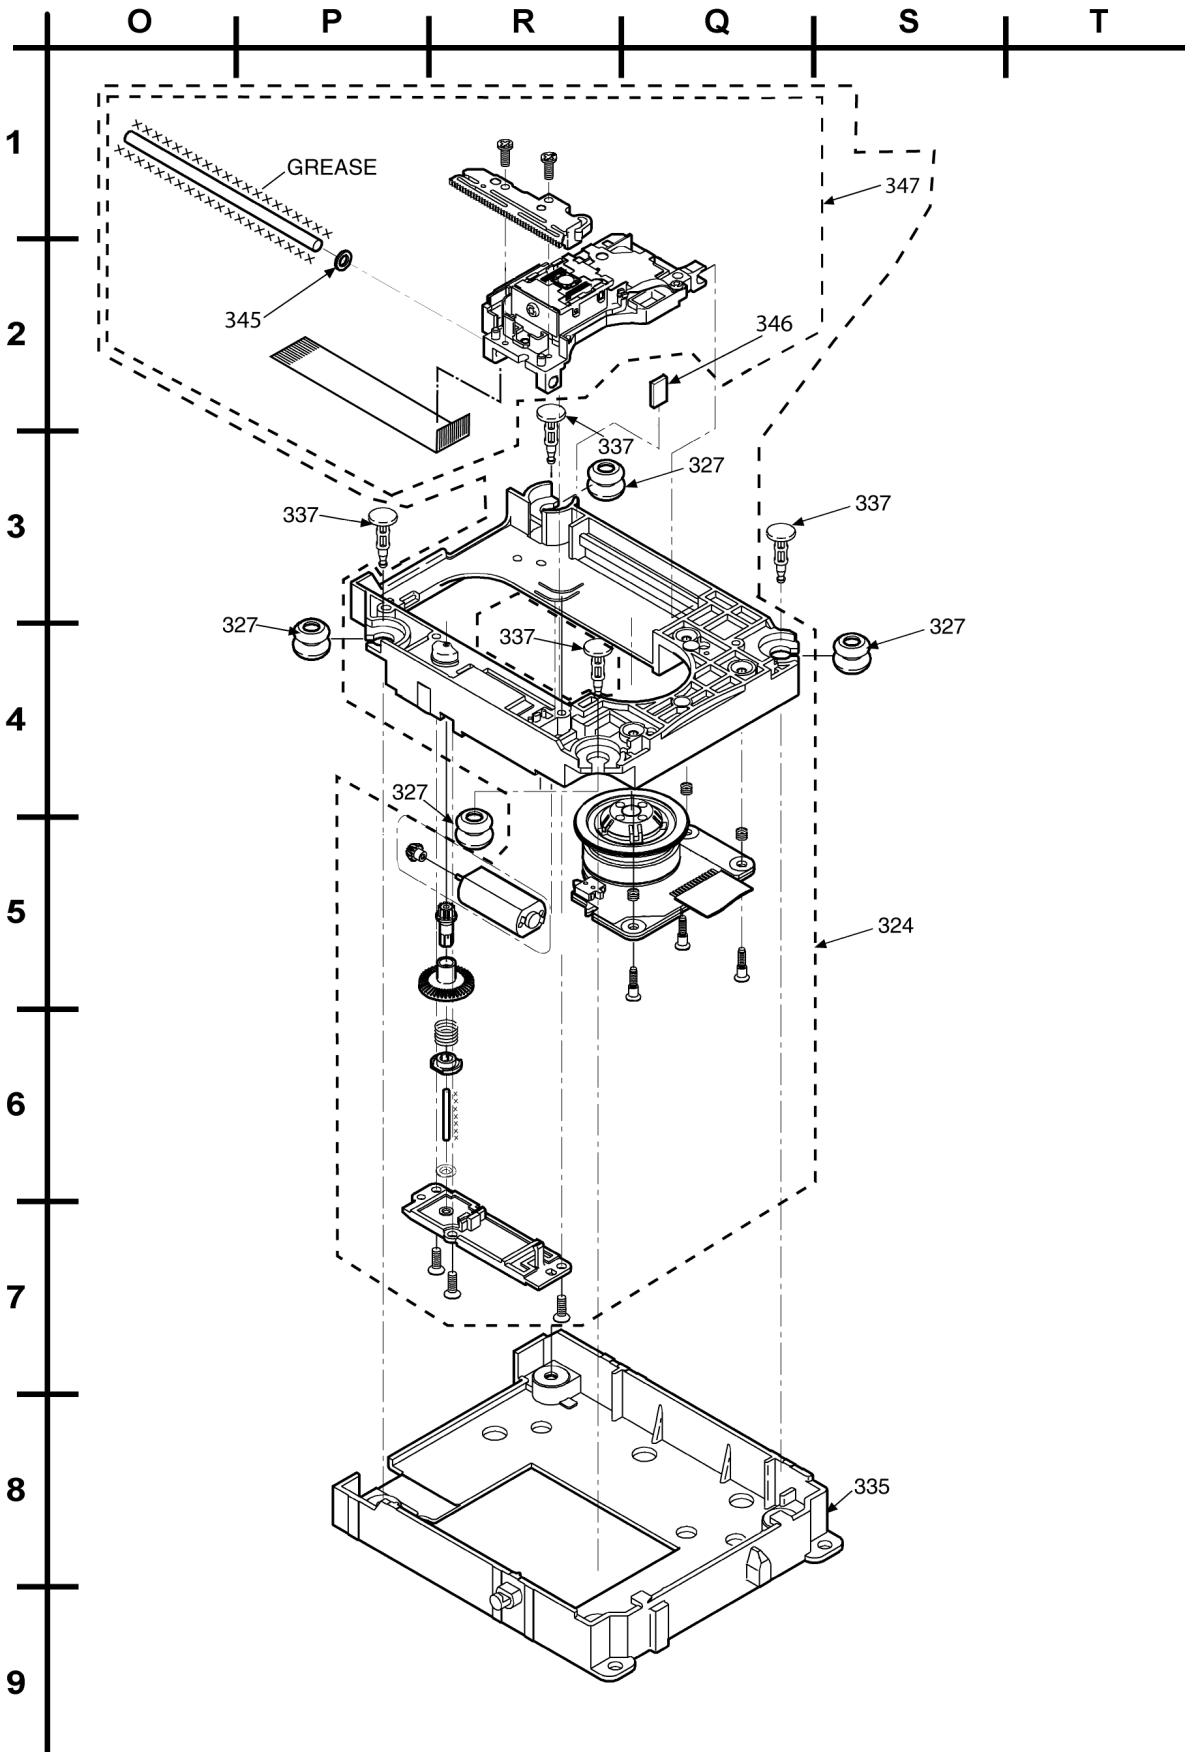
O
P
R
Q
S
T
1
2
3
4
5
6
7
8
9
GREASE
345
347
346
337
327
337
337
327
337
327
327
324
335

27.1.2. Traverse and Cabinet Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS	
1	J3CCBB000004	TUNER PACK	[M]
3	REEX0420	10P FFC WIRE	[M]
4	REEX0421	50P FFC WIRE	[M]
5	REEX0422	19P FFC (FL-MAIN)	[M]
6	REZ1483	11P FFC (MECHA BASE)	[M]
7	RGKX0305-S	TRAY LID	[M]
8	RGPX0177B-S1	FRONT PANEL	[M]
9	RGQX0025-Q	SENSOR WINDOW	[M]
10	RGRX0045B-A1	REAR PANEL	[M]
11	RGUX0622-S	OPEN/CLOSE BUTTON	[M]
12	RGUX0623-S	POWER BUTTON	[M]
13	RGUX0624-S	OPERATION BUTTON	[M]
14	RGWX0084-S	VOLUME KNOB	[M]
15	RHD26046	SCREW	[M]
16	RHD30007-1SJ	SCREW	[M]
17	RHD30090-1	SCREW	[M]
18	RHD30102-1	SCREW	[M]
19	RHD30107-1	SCREW	[M]
20	RHD30119-S	SCREW	[M]
21	RKA0059-K	LEG RUBBER	[M]
22	RKMX0111-S	TOP CABINET	[M]
23	RKWX0249C-Q	FL ORNAMENT	[M]
24	RMKX0103	BOTTOM CHASSIS	[M]
25	RMN0730	TRAY GUIDE L	[M]
26	RMN0731	TRAY GUIDE R	[M]
27	RMNX0149	FL HOLDER	[M]
28	RMVX0085	CHASSIS COVER	[M]
29	RMX0274	TRAY SUPPORT R	[M]
30	RMX0275	TRAY SUPPORT L	[M]
31	RMX0290	PLASTIC SHEET	[M]
33	RKAX0026-K	RUBBER CUSHION	[M]
		TRAVERSE DECK	
301	RDG0567	PULSE GEAR	[M]
302	RDG0568	OPEN LOCK GEAR	[M]
303	RDG0569	CLOSE LOCK GEAR	[M]
304	RDV0073	TRAY BELT	[M]
305	REZ1484	11P FFC CABLE	[M]
306	RGQ0358-K	TRAY BASE	[M]
307	RGQ0359-K	ROTARY TRAY	[M]
309	RMB0365	TRAY SPRING	[M]
310	RME0384	CLOSE LOCK GEAR SPRING	[M]
311	RMF0324	BLOCK SHEET	[M]
312	RMM0255	SLIDE PLATE L	[M]
313	XTB3+10JFJ	SCREW	[M]
314	XTN26+8GFJ	SCREW	[M]
315	XTWS3+10SFJ	SCREW	[M]
316	JSM0048	MAGNET	[M]
317	RDG0562	PULLEY GEAR	[M]
318	RDG0563	RELAY GEAR A	[M]
319	RDG0564	RELAY GEAR B	[M]
320	RDG0565	DRIVE GEAR A	[M]
321	RDG0566	DRIVE GEAR B	[M]
322	RDG0570	CAM GEAR	[M]
323	RDV0072	LOADING BELT	[M]
324	RAE2012Z-S	DU69U TRAVERSE	[M]
325	REM0112	LOADING MOTOR ASS'Y	[M]
326	RMC0387	SUPPORT SPRING	[M]
327	RMG0598-A	FLOATING RUBBER	[M]
328	RMG0615-K	CUSHION SHEET	[M]
329	RMG0620-K	CUSHION RUBBER	[M]
330	RMK0555	MECHA BASE	[M]
331	RML0646	CHANGE LEVER	[M]
332	RMM0254	SLIDE PLATE R	[M]
333	RMR1446-X	CLAMPER	[M]
334	RMR1447-X	MAGNET HOLDER	[M]
335	RMR1596-X2	MIDDLE CHASSIS	[M]
336	RMR1507-X	SUPPORT PIECE	[M]
337	RMS0789	FIXED PIN	[M]
338	RMS0802-J	DRIVE GEAR SHAFT	[M]
339	XTN26+14JFJK	SCREW	[M]
340	XTV2+6GFJ	PCB SCREW	[M]
341	XWG6FFY	WASHER	[M]
342	RMF0182	TRAY FELT	[M]
343	RMS0123-1	FIXED PIN B	[M]
344	RMM0256	BLOCK BASE	[M]
345	RMG0617-H	CUSHION RUBBER A	[M]
346	RMG0618-H	CUSHION RUBBER B	[M]
347	RXQ1252	DVD OPU CUB ASS'Y	[M]
348	RMX0247	WASHER	[M]

27.2. Component Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		PRINTED CIRCUIT BOARDS	
	REP3867A	DVD MODULE P.C.B	[M] (RTL)
	REPX0450B	MAIN P.C.B	[M] (RTL)
	REPX0454A	FL P.C.B	[M] (RTL)
	REPX0454A	HEADPHONE P.C.B	[M] (RTL)
	REP3465A	LOADING MOTOR P.C.B	[M] (RTL)
	REP3466A	TRAY MOTOR P.C.B	[M] (RTL)
	REP3466A	SENSOR P.C.B	[M] (RTL)
		INTEGRATED CIRCUITS	
IC2006	C9ZB00000466	IC VIDEO BUFFER	[M]
IC2007	C0GAG0000007	IC MOTOR DRIVE	[M]
IC2008	C0GAG0000007	IC MOTOR DRIVE	[M]
IC2010	C0ABBB000118	IC BUFFER AMP	[M]
IC2011	C1BB00000845	IC ASP	[M]
IC2013	C0AABB000125	IC HP AMP	[M]
IC2014	C1BB00000979	IC ANALOG SUPER SURROUND	[M]
IC2015	C0ABBB000118	IC BUFFER AMP	[M]
IC2018	MN101C49GHB	IC MICRO-PROCESSOR	[M]
IC2601	C0ABCB000052	IC BUFFER AMP	[M]
IC2602	C0ABBB000118	IC BUFFER AMP	[M]
IC2801	C0DAAZG00012	IC 5V REGULATOR	[M]
IC2802	C0CBADG00023	IC DC-DC CONVERTER	[M]
IC2803	C0DBEZG00021	IC REGULATOR	[M]
IC6901	C0HBB0000044	IC DISPLAY	[M]
IC8001	MN2DS0003APH	IC DV2.1 LSI	[M]
IC8051	C3ABPG000133	IC 64M SDRAM	[M]
IC8111	C0CBCBD00018	IC POWER SUPPLY	[M]
IC8251	C0GBG0000048	IC MOTOR DRIVER	[M]
IC8421	C0FBBK000050	IC AUDIO DAC	[M]
IC8601	C0EBE0000384	IC VOLTAGE DETECTING	[M]
IC8606	C0EBA0000031	IC RESET	[M]
IC8651	RFKWMH82H160	IC 16M FLASH ROM	[SPG]
IC8691	C0JBAA000346	IC AND GATE	[M]
IC8695	C0JBAA000346	IC AND GATE	[M]
		TRANSISTORS	
Q2000	B1GBCFLL0037	TRANSISTOR	[M]
Q2001	B1GBCFJJ0051	TRANSISTOR	[M]
Q2002	B1GBCFJJ0051	TRANSISTOR	[M]
Q2004	B1GBCFJN0033	TRANSISTOR	[M]
Q2028	B1GBCFJN0033	TRANSISTOR	[M]
Q2029	B1GBCFJN0033	TRANSISTOR	[M]
Q2102	B1GFGCAA0001	TRANSISTOR	[M]
Q2103	B1GDCFGA0018	TRANSISTOR	[M]
Q2104	B1GFGCAA0001	TRANSISTOR	[M]
Q2105	B1GDCFGA0018	TRANSISTOR	[M]
Q2200	B1GFGCAA0001	TRANSISTOR	[M]
Q2201	B1GDCFGA0018	TRANSISTOR	[M]
Q2500	B1GDCFGA0018	TRANSISTOR	[M]
Q2600	B1GDCFGA0018	TRANSISTOR	[M]
Q2601	B1GFGCAA0001	TRANSISTOR	[M]
Q2603	B1GDCFGA0018	TRANSISTOR	[M]
Q2604	B1GFGCAA0001	TRANSISTOR	[M]
Q2605	B1GDCFGA0018	TRANSISTOR	[M]
Q2801	B1ADCF000001	TRANSISTOR	[M]
Q2803	B1BCCG000023	TRANSISTOR	[M]
Q2804	B1ABCE000016	TRANSISTOR	[M]
Q2805	B1ABCE000016	TRANSISTOR	[M]
Q2806	B1ACKD000005	TRANSISTOR	[M]
Q2807	B1BCCD000019	TRANSISTOR	[M]
Q2808	B1ADCF000001	TRANSISTOR	[M]
Q2809	B1ACKD000005	TRANSISTOR	[M]
Q2811	B1BCCG000023	TRANSISTOR	[M]
Q2812	B1ABCE000016	TRANSISTOR	[M]
Q2813	B1AAKD000014	TRANSISTOR	[M]
Q2814	2SD21370PA	TRANSISTOR	[M]
Q2818	B1GBCFJA0028	TRANSISTOR	[M]
Q6900	B1GBCFJN0033	TRANSISTOR	[M]
Q6901	B1GBCFJN0033	TRANSISTOR	[M]
Q6902	B1GBCFJN0033	TRANSISTOR	[M]
Q6903	B1GBCFJN0033	TRANSISTOR	[M]
Q6904	B1GBCFJN0033	TRANSISTOR	[M]
Q8550	2SB1219AHL	TRANSISTOR	[M]
Q8551	2SD1819A0L	TRANSISTOR	[M]
Q8552	2SB09700RL	TRANSISTOR	[M]
Q8560	2SD1819A0L	TRANSISTOR	[M]
Q8561	2SD1819A0L	TRANSISTOR	[M]
Q8562	2SB09700RL	TRANSISTOR	[M]
Q8606	2SD1819A0L	TRANSISTOR	[M]
Q8607	2SD1819A0L	TRANSISTOR	[M]
Q9001	B3NAA0000068	CAM SENSOR TRANSISTOR	[M]
Q9101	B3NAA0000078	POSITION SENSOR TRANSISTOR	[M]
Q9102	B3NAA0000011	PHOTO INTERRUPTOR TRANSISTOR	[M]
Q9103	B3NAB0000027	PHOTO REFLECTOR TRANSISTOR	[M]
QR8111	UNR521400L	TRANSISTOR	[M]
QR8112	UNR521400L	TRANSISTOR	[M]
QR8420	UNR521100L	TRANSISTOR	[M]
QR8571	UNR511V00L	TRANSISTOR	[M]
		DIODES	
D2000	B0ACCE000003	DIODE	[M]
D2001	B0ACCE000003	DIODE	[M]
D2002	B0ACCE000003	DIODE	[M]
D2003	B0ACCK000005	DIODE	[M]
D2004	B0ECKM000016	DIODE	[M]
D2005	B0ECKM000016	DIODE	[M]
D2006	B0ECKM000016	DIODE	[M]
D2007	B0ECKM000016	DIODE	[M]
D2601	B0ACCK000005	DIODE	[M]
D2602	B0ACCK000005	DIODE	[M]
D2603	B0ACCK000005	DIODE	[M]
D2801	B0JCPD000025	DIODE	[M]
D2802	B0BC7R500001	DIODE	[M]
D2803	B0ACCK000005	DIODE	[M]
D2804	B0BC9R000008	DIODE	[M]
D2805	B0ECKM000016	DIODE	[M]
D2806	B0ECKM000016	DIODE	[M]
D2807	B0ACCK000005	DIODE	[M]
D2808	B0ACCK000005	DIODE	[M]
D2809	B0EAKM000117	DIODE	[M]
D2810	B0EAKM000117	DIODE	[M]
D2811	B0EAKM000117	DIODE	[M]
D2812	B0EAKM000117	DIODE	[M]
D2813	B0EAKM000117	DIODE	[M]
D2814	B0EAKM000117	DIODE	[M]
D2815	B0EAKM000117	DIODE	[M]
D2816	B0EAKM000117	DIODE	[M]
D2817	B0EAKM000117	DIODE	[M]
D2818	MAZ82200ML	DIODE	[M]
D2819	B0BC9R000008	DIODE	[M]
D2820	B0ACCK000005	DIODE	[M]
D2822	B0FBAM000010	DIODE	[M]
D2823	B0BC5R600003	DIODE	[M]
D2824	B0BC7R500001	DIODE	[M]
D2827	B0ECKM000016	DIODE	[M]
D2831	B0EAKM000117	DIODE	[M]
D2832	B0ACCK000005	DIODE	[M]
D2850	B0ADCJ000020	DIODE	[M]
D2851	B0ADCJ000020	DIODE	[M]
D2852	B0ACCK000005	DIODE	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
D6900	B3AAA0000583	DIODE	[M]
D6901	B3ABA0000397	DIODE	[M]
D6902	B3ABA0000397	DIODE	[M]
D6903	B3ABA0000397	DIODE	[M]
D6904	B3ABA0000397	DIODE	[M]
D6905	B3ABA0000397	DIODE	[M]
D6910	B0BC5R000009	DIODE	[M]
D6911	B0ACCK000005	DIODE	[M]
D8231	MA2J11100L	DIODE	[M]
D8550	MA2J11100L	DIODE	[M]
D8571	MA2J72800L	DIODE	[M]
		CHIP INDUCTORS	
LB8001	J0JHC0000045	CHIP INDUCTOR	[M]
LB8002	J0JHC0000045	CHIP INDUCTOR	[M]
LB8301	J0JCC0000119	CHIP INDUCTOR	[M]
LB8302	J0JCC0000119	CHIP INDUCTOR	[M]
LB8303	J0JCC0000119	CHIP INDUCTOR	[M]
LB8304	J0JCC0000119	CHIP INDUCTOR	[M]
LB8305	J0JCC0000119	CHIP INDUCTOR	[M]
LB8401	ERJ2GEJ151X	CHIP INDUCTOR	[M]
LB8421	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8422	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8423	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8424	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8425	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8426	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8427	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8428	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8429	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8430	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8491	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8502	J0JHC0000045	CHIP INDUCTOR	[M]
LB8503	ERJ2GE0R00X	CHIP RESISTOR	[M]
LB8504	J0JCC0000119	CHIP INDUCTOR	[M]
LB8505	J0JCC0000119	CHIP INDUCTOR	[M]
LB8507	J0JCC0000119	CHIP INDUCTOR	[M]
LB8511	ERJ3GEY0R00V	CHIP RESISTOR	[M]
LB8512	ERJ3GEY0R00V	CHIP RESISTOR	[M]
LB8513	ERJ3GEY0R00V	CHIP RESISTOR	[M]
LB8514	ERJ3GEY0R00V	CHIP RESISTOR	[M]
LB8690	J0JCC0000091	FILTER	[M]
LB8691	ERJ2GEJ101X	CHIP RESISTOR	[M]
LB8692	ERJ2GEJ101X	CHIP RESISTOR	[M]
LB8693	ERJ2GEJ101X	CHIP RESISTOR	[M]
		VARIABLE RESISTOR	
VR6800	EVEKE2F3024M	VR VOLUME JOG	[M]
		SWITCHES	
S6801	EVQ21405R	SW PLAY	[M]
S6802	EVQ21405R	SW REV	[M]
S6803	EVQ21405R	SW FWD	[M]
S6804	EVQ21405R	SW PAUSE	[M]
S6805	EVQ21405R	SW OPPEN/CLOSE	[M]
S6806	EVQ21405R	SW SKIP	[M]
S6807	EVQ21405R	SW DISC EX	[M]
S6808	EVQ21405R	SW STOP	[M]
S6900	EVQ21405R	SW POWER	[M]
S6901	EVQ21405R	SW SEELECTOR	[M]
S6902	EVQ21405R	SW DISC 1	[M]
S6903	EVQ21405R	SW DISC 2	[M]
S6904	EVQ21405R	SW DISC 3	[M]
S6905	EVQ21405R	SW DISC 4	[M]
S6906	EVQ21405R	SW DISC 5	[M]
S6907	EVQ21405R	SW HARMONIC BASS	[M]
S6909	EVQ21405R	SW PROGRESS	[M]
S6910	EVQ21405R	SW CD	[M]
S9001	K0L1BA000086	SW LOADING	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
		CONNECTORS	
CN2002	K1KA10AA0031	10P CONNECTOR	[M]
CN2004	K1MN50A00008	50P CONNECTOR	[M]
CN2008	K1MN10A00052	10P CONNECTOR	[M]
CN2009	K1MN19A00036	19P CONNECTOR	[M]
CN2010	K1MN11A00030	11P CONNECTOR	[M]
CN2011	K1MN11A00030	11P CONNECTOR	[M]
CN6801	K1MN10B00088	10P CONNECTOR	[M]
CN6901	K1MN19B00026	19P CONNECTOR	[M]
CN9003	K1MN11B00065	11P CONNECTOR	[M]
CN9102	K1MN11B00065	11P CONNECTOR	[M]
FP8101	K1MN50B00031	50P CONNECTOR	[M]
FP8201	K1MN06B00080	6P CONNECTOR	[M]
FP8501	K1MN26B00094	26P CONNECTOR	[M]
		COILS	
L2000	G0C3R3JA0027	COIL	[M]
L2003	J0JBC0000015	CHIP INDUCTOR	[M]
L2004	J0JBC0000015	CHIP INDUCTOR	[M]
L2005	J0JBC0000015	CHIP INDUCTOR	[M]
L2006	J0JBC0000015	CHIP INDUCTOR	[M]
L2007	J0JBC0000015	CHIP INDUCTOR	[M]
L2008	J0JBC0000015	CHIP INDUCTOR	[M]
L2009	J0JBC0000015	CHIP INDUCTOR	[M]
L2010	ELESN220JA	COIL	[M]
L2022	J0JBC0000015	CHIP INDUCTOR	[M]
L2023	J0JBC0000015	CHIP INDUCTOR	[M]
L2024	J0JBC0000015	CHIP INDUCTOR	[M]
L2025	J0JBC0000015	CHIP INDUCTOR	[M]
L2026	J0JBC0000015	CHIP INDUCTOR	[M]
L2027	J0JBC0000015	CHIP INDUCTOR	[M]
L2801	G0ZZ00001930	COIL	[M]
L2802	J0JHC0000045	CHIP INDUCTOR	[M]
L2805	ERJ3GEY0R00V	CHIP RESISTOR	[M]
L6101	J0JBC0000019	CHIP INDUCTOR	[M]
L6201	J0JBC0000019	CHIP INDUCTOR	[M]
L6801	J0JBC0000019	CHIP INDUCTOR	[M]
L6903	J0JBC0000041	CHIP INDUCTOR	[M]
L8201	G1C100K00020	CHIP INDUCTOR	[M]
L8202	J0JCC0000079	FILTER	[M]
L8301	G1C100KA0055	CHIP INDUCTOR	[M]
L8302	J0JCC0000079	FILTER	[M]
L8550	G1C100KA0055	CHIP INDUCTOR	[M]
		COMPONENT COMBINATION	
Z6900	B3RAB0000025	REMOTE SENSOR	[M]
		OSCILLATORS	
X2000	H2D800400009	CRYSTAL OSCILLATOR	[M]
X8621	H0J270500085	CRYSTAL OSCILLATOR	[M]
		DISPLAY TUBES	
FL6901	A2BD00000108	FL DISPLAY	[M]
FL8101	F1H0J1050022	CHIP CAPACITOR	[M]
FL8102	F1H0J1050022	CHIP CAPACITOR	[M]
FL8103	F1H0J1050022	CHIP CAPACITOR	[M]
FL8104	F1J1E1040022	CHIP CAPACITOR	[M]
FC9101	RWJ4906082SS	6P FLAT CABLE	[M]
		FUSE PROTECTOR	
FP2000	K5G202AA0002	FUSE PROTECTOR	[M] ⚠
		JACKS	
JK2000	K1FB125B0097	JK SYSTEM CONNECTOR	[M]
JK2001	K2HZ921B0002	JK COMBO	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
JK6801	K2HC103A0024	JK	[M]
		EARTH TERMINAL	
E2000	K4CZ01000027	TERMINALS	[M]
		CHIP JUMPERS	
W1208	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2000	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2000	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2001	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2001	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2002	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2002	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2003	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2003	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2004	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2004	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2005	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2006	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2007	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2008	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2009	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2010	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2011	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2011	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2012	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2013	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2014	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2014	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2015	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2015	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2016	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2016	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2017	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2017	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2018	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2018	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2019	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2019	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2020	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2021	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2022	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2023	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2024	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2024	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2025	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2025	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2026	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2027	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2028	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2029	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2029	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2030	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2031	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2032	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2034	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2035	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2036	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2038	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2039	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2040	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2045	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2051	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2052	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2053	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2055	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2056	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2057	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2058	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2059	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2060	ERJ6GEY0R00V	CHIP RESISTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
W2061	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2062	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2064	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2065	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2066	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2067	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2068	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2069	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2070	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2071	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2076	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2081	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2082	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2083	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2084	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2085	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2086	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2088	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2092	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2094	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2095	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2100	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2101	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2119	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2121	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2128	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2171	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2200	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2205	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2206	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2207	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2209	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2210	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2262	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2330	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2331	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W2334	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W2620	ERJ6GEY0R00V	CHIP RESISTOR	[M]
W3000	ERJ3GEY0R00V	CHIP RESISTOR	[M]
W4000	ERJ3GEY0R00V	CHIP RESISTOR	[M]
		RESISTORS	
R2000	ERJ3GEYJ101V	100 1/16W	[M]
R2001	ERJ3GEYJ101V	100 1/16W	[M]
R2002	ERJ3GEYJ221V	220 1/16W	[M]
R2003	ERJ3GEYJ103V	10K 1/16W	[M]
R2004	ERJ3GEYJ103V	10K 1/16W	[M]
R2005	ERJ3GEYJ473V	47K 1/16W	[M]
R2006	ERJ3GEYJ104V	100K 1/16W	[M]
R2007	ERJ3GEYJ223V	22K 1/16W	[M]
R2008	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2009	ERJ3GEYJ221V	220 1/16W	[M]
R2010	ERJ3GEYJ221V	220 1/16W	[M]
R2011	ERJ3GEYJ101V	100 1/16W	[M]
R2012	ERJ3GEYJ101V	100 1/16W	[M]
R2013	ERJ3GEYJ101V	100 1/16W	[M]
R2014	ERJ3GEYJ101V	100 1/16W	[M]
R2015	ERJ3GEYJ221V	220 1/16W	[M]
R2016	ERJ3GEYJ221V	220 1/16W	[M]
R2017	ERJ3GEYJ221V	220 1/16W	[M]
R2018	ERJ3GEYJ102V	1K 1/16W	[M]
R2019	ERJ3GEYJ221V	220 1/16W	[M]
R2020	ERJ3GEYJ221V	220 1/16W	[M]
R2021	ERJ3GEYJ221V	220 1/16W	[M]
R2022	ERJ3GEYJ221V	220 1/16W	[M]
R2023	ERJ3GEYJ223V	22K 1/16W	[M]
R2024	ERJ3GEYJ103V	10K 1/16W	[M]
R2025	ERJ3GEYJ221V	220 1/16W	[M]
R2026	ERJ3GEYJ221V	220 1/16W	[M]
R2029	ERJ3GEYJ221V	220 1/16W	[M]
R2031	ERJ3GEYJ221V	220 1/16W	[M]
R2032	ERJ3GEYJ221V	220 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2035	ERJ3GEYJ221V	220 1/16W	[M]
R2037	ERJ3GEYJ221V	220 1/16W	[M]
R2038	ERJ3GEYJ221V	220 1/16W	[M]
R2040	ERJ3GEYJ221V	220 1/16W	[M]
R2041	ERJ3GEYJ221V	220 1/16W	[M]
R2042	ERJ3GEYJ103V	10K 1/16W	[M]
R2046	ERJ3GEYJ221V	220 1/16W	[M]
R2047	ERJ3GEYJ103V	10K 1/16W	[M]
R2048	ERJ3GEYJ221V	220 1/16W	[M]
R2049	ERJ3GEYJ473V	47K 1/16W	[M]
R2050	ERJ3GEYJ221V	220 1/16W	[M]
R2051	ERJ3GEYJ103V	10K 1/16W	[M]
R2052	ERJ3GEYJ563V	56K 1/16W	[M]
R2053	ERJ3GEYJ221V	220 1/16W	[M]
R2054	ERJ3GEYJ473V	47K 1/16W	[M]
R2055	ERJ3GEYJ221V	220 1/16W	[M]
R2056	ERJ3GEYJ221V	220 1/16W	[M]
R2057	ERJ3GEYJ221V	220 1/16W	[M]
R2058	ERJ3GEYJ221V	220 1/16W	[M]
R2060	ERJ3GEYJ221V	220 1/16W	[M]
R2061	ERJ3GEYJ221V	220 1/16W	[M]
R2062	ERJ3GEYJ221V	220 1/16W	[M]
R2064	ERJ3GEYJ221V	220 1/16W	[M]
R2065	ERJ3GEYJ221V	220 1/16W	[M]
R2067	ERJ3GEYJ473V	47K 1/16W	[M]
R2068	ERJ3GEYJ473V	47K 1/16W	[M]
R2069	ERJ3GEYJ563V	56K 1/16W	[M]
R2072	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2073	ERJ3GEY0R00V	0 1/16W	[M]
R2074	ERJ3GEYJ103V	10K 1/16W	[M]
R2076	ERJ3GEYJ103V	10K 1/16W	[M]
R2077	ERJ3GEYJ223V	22K 1/16W	[M]
R2078	ERJ3GEYJ221V	220 1/16W	[M]
R2080	ERJ3GEYJ471V	470 1/16W	[M]
R2081	ERJ3GEYJ223V	22K 1/16W	[M]
R2082	ERJ3GEYJ473V	47K 1/16W	[M]
R2083	ERJ3GEYJ681V	680 1/16W	[M]
R2084	ERJ3GEYJ473V	47K 1/16W	[M]
R2085	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2086	ERJ3GEYJ221V	220 1/16W	[M]
R2088	ERJ3GEYJ221V	220 1/16W	[M]
R2092	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2093	ERJ3GEYJ223V	22K 1/16W	[M]
R2094	ERJ3GEYJ223V	22K 1/16W	[M]
R2095	ERJ3GEYJ121V	120 1/16W	[M]
R2096	ERJ3GEYJ151V	150 1/16W	[M]
R2097	ERJ3GEYJ331V	330 1/16W	[M]
R2098	ERJ3GEYJ331V	330 1/16W	[M]
R2099	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2100	ERJ3GEYJ102V	1K 1/16W	[M]
R2101	ERJ3GEYJ473V	47K 1/16W	[M]
R2111	ERJ3GEYJ333V	33K 1/16W	[M]
R2112	ERJ3GEYJ103V	10K 1/16W	[M]
R2113	ERJ3GEYJ103V	10K 1/16W	[M]
R2114	ERJ3GEYJ103V	10K 1/16W	[M]
R2115	ERJ3GEYJ273V	27K 1/16W	[M]
R2116	ERJ3GEYJ104V	100K 1/16W	[M]
R2117	ERJ3GEYJ104V	100K 1/16W	[M]
R2129	ERJ3GEYJ123V	12K 1/16W	[M]
R2130	ERJ3GEYJ103V	10K 1/16W	[M]
R2131	ERJ3GEYJ103V	10K 1/16W	[M]
R2132	ERJ3GEYJ103V	10K 1/16W	[M]
R2133	ERJ3GEYJ103V	10K 1/16W	[M]
R2144	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2145	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2146	ERJ3GEYJ333V	33K 1/16W	[M]
R2147	ERJ3GEYJ220V	22 1/16W	[M]
R2148	ERJ3GEYJ220V	22 1/16W	[M]
R2149	ERJ3GEYJ220V	22 1/16W	[M]
R2150	ERJ3GEYJ220V	22 1/16W	[M]
R2151	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2152	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2153	ERJ3GEYJ100V	10 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2154	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2155	ERJ3GEYJ104V	100K 1/16W	[M]
R2156	ERJ3GEYJ103V	10K 1/16W	[M]
R2157	ERJ3GEYJ123V	12K 1/16W	[M]
R2160	ERJ3GEYJ103V	10K 1/16W	[M]
R2161	ERJ3GEYJ273V	27K 1/16W	[M]
R2162	ERJ3GEYJ392V	3.9K 1/16W	[M]
R2163	ERJ3GEYJ102V	1K 1/16W	[M]
R2164	ERJ3GEYJ223V	22K 1/16W	[M]
R2165	ERJ3GEYJ103V	10K 1/16W	[M]
R2166	ERJ3GEYJ122V	1.2K 1/16W	[M]
R2167	ERJ3GEYJ123V	12K 1/16W	[M]
R2168	ERJ3GEYJ223V	22K 1/16W	[M]
R2169	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2170	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2172	ERJ3GEY0R00V	0 1/16W	[M]
R2178	ERJ3GEYJ153V	15K 1/16W	[M]
R2200	ERJ3GEYJ102V	1K 1/16W	[M]
R2201	ERJ3GEYJ473V	47K 1/16W	[M]
R2211	ERJ3GEYJ333V	33K 1/16W	[M]
R2212	ERJ3GEYJ103V	10K 1/16W	[M]
R2213	ERJ3GEYJ103V	10K 1/16W	[M]
R2214	ERJ3GEYJ103V	10K 1/16W	[M]
R2215	ERJ3GEYJ273V	27K 1/16W	[M]
R2216	ERJ3GEYJ104V	100K 1/16W	[M]
R2217	ERJ3GEYJ104V	100K 1/16W	[M]
R2229	ERJ3GEYJ103V	10K 1/16W	[M]
R2230	ERJ3GEYJ103V	10K 1/16W	[M]
R2231	ERJ3GEYJ103V	10K 1/16W	[M]
R2232	ERJ3GEYJ103V	10K 1/16W	[M]
R2235	ERJ3GEYJ123V	12K 1/16W	[M]
R2244	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2245	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2246	ERJ3GEYJ333V	33K 1/16W	[M]
R2247	ERJ3GEYJ220V	22 1/16W	[M]
R2248	ERJ3GEYJ220V	22 1/16W	[M]
R2249	ERJ3GEYJ220V	22 1/16W	[M]
R2250	ERJ3GEYJ220V	22 1/16W	[M]
R2251	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2252	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2253	ERJ3GEYJ100V	10 1/16W	[M]
R2254	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2255	ERJ3GEYJ104V	100K 1/16W	[M]
R2256	ERJ3GEYJ103V	10K 1/16W	[M]
R2257	ERJ3GEYJ123V	12K 1/16W	[M]
R2260	ERJ3GEYJ103V	10K 1/16W	[M]
R2261	ERJ3GEYJ392V	3.9K 1/16W	[M]
R2262	ERJ3GEYJ273V	27K 1/16W	[M]
R2263	ERJ3GEYJ102V	1K 1/16W	[M]
R2264	ERJ3GEYJ223V	22K 1/16W	[M]
R2265	ERJ3GEYJ103V	10K 1/16W	[M]
R2266	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2267	ERJ3GEYJ563V	56K 1/16W	[M]
R2268	ERJ3GEYJ273V	27K 1/16W	[M]
R2269	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2271	ERJ3GEY0R00V	0 1/16W	[M]
R2278	ERJ3GEYJ153V	15K 1/16W	[M]
R2300	ERJ3GEYJ103V	10K 1/16W	[M]
R2301	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2302	ERJ3GEYJ752V	7.5K 1/16W	[M]
R2303	ERJ3GEYJ473V	47K 1/16W	[M]
R2304	ERJ3GEYJ822V	8.2K 1/16W	[M]
R2305	ERJ3GEYJ102V	1K 1/16W	[M]
R2306	ERJ3GEYJ104V	100K 1/16W	[M]
R2307	ERJ3GEYJ101V	100 1/16W	[M]
R2308	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2309	ERJ3GEYJ563V	56K 1/16W	[M]
R2310	ERJ3GEYJ273V	27K 1/16W	[M]
R2311	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2312	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2400	ERJ3GEYJ103V	10K 1/16W	[M]
R2401	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2402	ERJ3GEYJ752V	7.5K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2403	ERJ3GEYJ473V	47K 1/16W	[M]
R2404	ERJ3GEYJ822V	8.2K 1/16W	[M]
R2405	ERJ3GEYJ102V	1K 1/16W	[M]
R2406	ERJ3GEYJ104V	100K 1/16W	[M]
R2407	ERJ3GEYJ101V	100 1/16W	[M]
R2500	ERJ3GEYJ103V	10K 1/16W	[M]
R2501	ERJ3GEYJ104V	100K 1/16W	[M]
R2502	ERJ3GEYJ153V	15K 1/16W	[M]
R2503	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2504	ERJ3GEYJ682V	6.8K 1/16W	[M]
R2505	ERJ3GEYJ102V	1K 1/16W	[M]
R2506	ERJ3GEYJ333V	33K 1/16W	[M]
R2507	ERJ3GEYJ103V	10K 1/16W	[M]
R2508	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2509	ERJ3GEYJ563V	56K 1/16W	[M]
R2510	ERJ3GEYJ273V	27K 1/16W	[M]
R2511	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2600	ERJ3GEYJ103V	10K 1/16W	[M]
R2603	ERJ3GEYJ303V	30K 1/16W	[M]
R2604	ERJ3GEYJ104V	100K 1/16W	[M]
R2605	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2606	ERJ3GEYJ752V	7.5K 1/16W	[M]
R2607	ERJ3GEYJ273V	27K 1/16W	[M]
R2608	ERJ3GEYJ124V	120K 1/16W	[M]
R2609	ERJ3GEYJ563V	56K 1/16W	[M]
R2610	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2611	ERJ3GEYJ563V	56K 1/16W	[M]
R2612	ERJ3GEYJ153V	15K 1/16W	[M]
R2613	ERJ3GEYJ332V	3.3K 1/16W	[M]
R2614	ERJ3GEYJ102V	1K 1/16W	[M]
R2615	ERJ3GEYJ104V	100K 1/16W	[M]
R2616	ERJ3GEYJ183V	18K 1/16W	[M]
R2617	ERJ3GEYJ683V	68K 1/16W	[M]
R2618	ERJ3GEYJ102V	1K 1/16W	[M]
R2619	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2620	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2621	ERJ3GEYJ563V	56K 1/16W	[M]
R2622	ERJ3GEYJ273V	27K 1/16W	[M]
R2623	ERJ3GEYJ104V	100K 1/16W	[M]
R2624	ERJ3GEYJ104V	100K 1/16W	[M]
R2625	ERJ3GEYJ223V	22K 1/16W	[M]
R2626	ERJ3GEYJ563V	56K 1/16W	[M]
R2627	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2628	ERJ3GEYJ273V	27K 1/16W	[M]
R2629	ERJ3GEYJ104V	100K 1/16W	[M]
R2630	ERJ3GEYJ822V	8.2K 1/16W	[M]
R2631	ERJ3GEYJ102V	1K 1/16W	[M]
R2632	ERJ3GEY0R00V	0 1/16W	[M]
R2633	ERJ3GEYJ104V	100K 1/16W	[M]
R2634	ERJ3GEYJ103V	10K 1/16W	[M]
R2635	ERJ3GEYJ103V	10K 1/16W	[M]
R2636	ERJ3GEYJ103V	10K 1/16W	[M]
R2637	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2638	ERJ3GEYJ562V	5.6K 1/16W	[M]
R2639	ERJ3GEYJ103V	10K 1/16W	[M]
R2640	ERJ3GEYJ563V	56K 1/16W	[M]
R2641	ERJ3GEYJ333V	33K 1/16W	[M]
R2642	ERJ3GEYJ393V	39K 1/16W	[M]
R2643	ERJ3GEYJ104V	100K 1/16W	[M]
R2644	ERJ3GEYJ273V	27K 1/16W	[M]
R2645	ERJ3GEYJ563V	56K 1/16W	[M]
R2646	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2647	ERJ3GEYJ104V	100K 1/16W	[M]
R2648	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2649	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2650	ERJ3GEYJ273V	27K 1/16W	[M]
R2651	ERJ3GEYJ123V	12K 1/16W	[M]
R2652	ERJ3GEYJ224V	220K 1/16W	[M]
R2653	ERJ3GEYJ102V	1K 1/16W	[M]
R2654	ERJ3GEYJ104V	100K 1/16W	[M]
R2655	ERJ3GEYJ104V	100K 1/16W	[M]
R2656	ERJ3GEYJ103V	10K 1/16W	[M]
R2657	ERJ3GEYJ152V	1.5K 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2658	ERJ3GEYJ392V	3.9K 1/16W	[M]
R2659	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2660	ERJ3GEYJ102V	1K 1/16W	[M]
R2661	ERJ3GEYJ102V	1K 1/16W	[M]
R2700	ERJ3GEYJ103V	10K 1/16W	[M]
R2706	ERJ3GEYJ331V	330 1/16W	[M]
R2707	ERJ3GEYJ8R2V	8.2 1/16W	[M]
R2800	ERJ3GEYJ331V	330 1/16W	[M]
R2801	ERJ3GEYJ1R0V	1 1/16W	[M]
R2802	ERJ3GEYJ103V	10K 1/16W	[M]
R2805	ERJ3GEYJ1R0V	1 1/16W	[M]
R2806	ERJ3GEYJ1R0V	1 1/16W	[M]
R2808	ERJ3GEYJ1R0V	1 1/16W	[M]
R2810	ERJ3GEYJ103V	10K 1/16W	[M]
R2811	ERJ3GEYJ103V	10K 1/16W	[M]
R2813	ERJ3GEYJ471V	470 1/16W	[M]
R2815	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2817	ERJ3GEYJ102V	1K 1/16W	[M]
R2819	ERJ3GEYJ471V	470 1/16W	[M]
R2820	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2821	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2822	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2823	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2824	ERJ3GEYJ821V	820 1/16W	[M]
R2825	ERD2FCVJ4R7T	4.7 1/4W	[M]
R2826	ERJ3GEYJ681V	680 1/16W	[M]
R2827	ERJ3GEYJ471V	470 1/16W	[M]
R2828	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2829	ERJ3GEYJ102V	1K 1/16W	[M]
R2830	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2831	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2832	ERJ3GEYJ151V	150 1/16W	[M]
R2833	ERJ3GEYJ102V	1K 1/16W	[M]
R2834	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2835	ERJ3GEYJ222V	2.2K 1/16W	[M]
R2836	ERJ3GEYJ821V	820 1/16W	[M]
R2837	ERJ3GEYJ561V	560 1/16W	[M]
R2838	ERJ3GEYJ272V	2.7K 1/16W	[M]
R2839	ERJ3GEYJ821V	820 1/16W	[M]
R2840	ERJ3GEYJ151V	150 1/16W	[M]
R2841	ERD2FCVJ4R7T	4.7 1/4W	[M]
R2842	ERJ3GEYJ182V	1.8K 1/16W	[M]
R2843	ERJ3GEYJ471V	470 1/16W	[M]
R2849	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2850	ERJ3GEYJ393V	39K 1/16W	[M]
R2851	ERJ3GEYJ153V	15K 1/16W	[M]
R2855	ERJ3GEYJ102V	1K 1/16W	[M]
R2856	ERJ3GEYJ823V	82K 1/16W	[M]
R2858	ERJ3GEYJ102V	1K 1/16W	[M]
R2864	ERJ3GEYJ681V	680 1/16W	[M]
R2878	ERJ3GEYJ1R0V	1 1/16W	[M]
R2879	ERJ3GEYJ1R0V	1 1/16W	[M]
R2880	ERJ3GEYJ1R0V	1 1/16W	[M]
R2881	ERJ3GEYJ1R0V	1 1/16W	[M]
R2882	ERJ3GEYJ1R0V	1 1/16W	[M]
R2883	ERJ3GEYJ1R0V	1 1/16W	[M]
R2884	ERJ3GEYJ1R0V	1 1/16W	[M]
R2885	ERJ3GEYJ1R0V	1 1/16W	[M]
R2886	D0HB750ZA003	75 3W	[M]
R2887	D0HB750ZA003	75 3W	[M]
R2888	D0HB750ZA003	75 3W	[M]
R2889	D0HB750ZA003	75 3W	[M]
R2890	D0HB750ZA003	75 3W	[M]
R2891	D0HB750ZA003	75 3W	[M]
R2892	ERJ3GEYJ102V	1K 1/16W	[M]
R2893	ERJ3GEYJ822V	8.2K 1/16W	[M]
R2894	ERJ3GEYJ224V	220K 1/16W	[M]
R2895	ERJ3GEYJ103V	10K 1/16W	[M]
R2897	ERJ3GEYJ102V	1K 1/16W	[M]
R2898	ERJ3GEYJ331V	330 1/16W	[M]
R2899	ERJ3GEYJ472V	4.7K 1/16W	[M]
R2901	ERJ3GEYJ224V	220K 1/16W	[M]
R2902	ERJ3GEY0R00V	0 1/16W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R2905	ERJ3GEYJ1R0V	1 1/16W	[M]
R2971	ERJ3GEY0R00V	0 1/16W	[M]
R2972	ERJ3GEY0R00V	0 1/16W	[M]
R2973	ERJ3GEY0R00V	0 1/16W	[M]
R2978	ERJ3GEYJ103V	10K 1/16W	[M]
R2979	ERJ3GEY0R00V	0 1/16W	[M]
R2982	ERJ3GEYJ103V	10K 1/16W	[M]
R2987	ERJ3GEY0R00V	0 1/16W	[M]
R2990	ERJ3GEYJ473V	47K 1/16W	[M]
R2991	ERJ3GEY0R00V	0 1/16W	[M]
R6801	ERJ3GEYJ272V	2.7K 1/16W	[M]
R6802	ERJ3GEYJ222V	2.2K 1/16W	[M]
R6803	ERJ3GEYJ122V	1.2K 1/16W	[M]
R6804	ERJ3GEYJ102V	1K 1/16W	[M]
R6805	ERJ3GEYJ102V	1K 1/16W	[M]
R6807	ERJ3GEYJ223V	22K 1/16W	[M]
R6808	ERJ3GEYJ472V	4.7K 1/16W	[M]
R6809	ERJ3GEYJ223V	22K 1/16W	[M]
R6810	ERJ3GEYJ682V	6.8K 1/16W	[M]
R6812	ERJ3GEYJ182V	1.8K 1/16W	[M]
R6905	ERJ3GEY0R00V	0 1/16W	[M]
R6906	ERJ3GEYJ221V	220 1/16W	[M]
R6907	ERJ3GEYJ221V	220 1/16W	[M]
R6908	ERJ3GEYJ221V	220 1/16W	[M]
R6909	ERJ3GEYJ221V	220 1/16W	[M]
R6910	ERJ3GEYJ221V	220 1/16W	[M]
R6914	ERJ3GEYJ183V	18K 1/16W	[M]
R6915	ERJ3GEYJ102V	1K 1/16W	[M]
R6916	ERJ3GEYJ680V	68 1/16W	[M]
R6917	ERJ3GEYJ102V	1K 1/16W	[M]
R6918	ERJ3GEYJ223V	22K 1/16W	[M]
R6922	ERJ3GEYJ102V	1K 1/16W	[M]
R6923	ERJ3GEYJ102V	1K 1/16W	[M]
R6924	ERJ3GEYJ122V	1.2K 1/16W	[M]
R6925	ERJ3GEYJ182V	1.8K 1/16W	[M]
R6926	ERJ3GEYJ222V	2.2K 1/16W	[M]
R6927	ERJ3GEYJ332V	3.3K 1/16W	[M]
R6928	ERJ3GEYJ472V	4.7K 1/16W	[M]
R6929	ERJ3GEYJ682V	6.8K 1/16W	[M]
R6930	ERJ3GEYJ103V	10K 1/16W	[M]
R6931	ERJ3GEYJ223V	22K 1/16W	[M]
R6934	ERJ3GEYJ470V	47 1/16W	[M]
R6935	ERJ3GEYJ151V	150 1/16W	[M]
R6936	ERJ3GEYJ151V	150 1/16W	[M]
R6938	ERJ3GEYJ272V	2.7K 1/16W	[M]
R6939	ERJ3GEY0R00V	0 1/16W	[M]
R6940	ERJ3GEY0R00V	0 1/16W	[M]
R6941	ERJ3GEYJ221V	220 1/16W	[M]
R6942	ERJ3GEYJ221V	220 1/16W	[M]
R6943	ERJ3GEYJ221V	220 1/16W	[M]
R6944	ERJ3GEYJ221V	220 1/16W	[M]
R6945	ERJ3GEYJ221V	220 1/16W	[M]
R8011	ERJ2GEJ220X	22 2W	[M]
R8021	ERJ2GEJ103X	10K 2W	[M]
R8022	ERJ2GEJ103X	10K 2W	[M]
R8023	ERJ2GEJ473X	47K 2W	[M]
R8041	ERJ2GEJ330X	33 2W	[M]
R8111	ERJ2GEJ223X	22K 2W	[M]
R8112	ERJ2GEJ223X	22K 2W	[M]
R8201	ERJ2GEJ222X	2.2K 2W	[M]
R8231	ERJ2GEJ103X	10K 2W	[M]
R8233	ERJ2GEJ153X	15K 2W	[M]
R8235	ERJ2GEJ822X	8.2K 2W	[M]
R8236	ERJ2GEJ822X	8.2K 2W	[M]
R8241	ERJ2GEJ223X	22K 2W	[M]
R8242	ERJ2GEJ752X	7.5K 2W	[M]
R8243	ERJ2GEJ103X	10K 2W	[M]
R8251	ERJ6GEYJ6R8V	6.8 1/10W	[M]
R8261	ERJ2GEJ823X	82K 2W	[M]
R8262	ERJ2GEJ472X	4.7K 2W	[M]
R8263	ERJ2GEJ823X	82K 2W	[M]
R8264	ERJ2GEJ472X	4.7K 2W	[M]
R8265	ERJ2GE0R00X	0 2W	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
R8311	ERJ2RHD242X	2.4K 2W	[M]
R8312	ERJ2RHD102X	1K 2W	[M]
R8313	ERJ2RHD243X	24K 2W	[M]
R8314	ERJ2GE0R00X	0 2W	[M]
R8315	ERJ2GEJ6R8X	6.8 2W	[M]
R8321	ERJ3RBD161V	160 3W	[M]
R8322	ERJ2RKD100X	10 2W	[M]
R8325	ERJ3RBD161V	160 3W	[M]
R8326	ERJ2GE0R00X	0 2W	[M]
R8331	ERJ3RBD161V	160 3W	[M]
R8332	ERJ2RKD100X	10 2W	[M]
R8335	ERJ3RED820V	82 3W	[M]
R8341	ERJ3RED820V	82 3W	[M]
R8401	ERJ2GEJ473X	47K 2W	[M]
R8402	ERJ2GEJ101X	100 2W	[M]
R8404	ERJ2GEJ101X	100 2W	[M]
R8407	ERJ2GEJ101X	100 2W	[M]
R8420	ERJ2GEJ222X	2.2K 2W	[M]
R8421	ERJ2GE0R00X	0 2W	[M]
R8501	ERJ2GE0R00X	0 2W	[M]
R8505	ERJ2GEJ222X	2.2K 2W	[M]
R8506	ERJ2GEJ152X	1.5K 2W	[M]
R8550	ERJ2GEJ752X	7.5K 2W	[M]
R8551	ERJ2GE0R00X	0 2W	[M]
R8552	ERJ2GEJ102X	1K 2W	[M]
R8553	ERJ2GEJ102X	1K 2W	[M]
R8554	ERJ2GEJ680X	68 2W	[M]
R8555	ERJ2GEJ2R2X	2.2 2W	[M]
R8556	ERJ3GEYJ560V	56 1/16W	[M]
R8557	ERJ3GEYJ510V	51 1/16W	[M]
R8558	ERJ2GEJ473X	47K 2W	[M]
R8559	ERJ2GEJ153X	15K 2W	[M]
R8560	ERJ2GEJ102X	1K 2W	[M]
R8561	ERJ2GE0R00X	0 2W	[M]
R8562	ERJ2GEJ102X	1K 2W	[M]
R8563	ERJ2GEJ102X	1K 2W	[M]
R8564	ERJ2GEJ220X	22 2W	[M]
R8565	ERJ2GEJ2R2X	2.2 2W	[M]
R8566	ERJ3GEYJ560V	56 1/16W	[M]
R8567	ERJ3GEYJ510V	51 1/16W	[M]
R8568	ERJ2GEJ473X	47K 2W	[M]
R8569	ERJ2GEJ123X	12K 2W	[M]
R8570	ERJ2GEJ104X	100K 2W	[M]
R8601	ERJ2GEJ102X	1K 2W	[M]
R8606	ERJ2GEJ104X	100K 2W	[M]
R8607	ERJ2GEJ103X	10K 2W	[M]
R8611	ERJ2GEJ101X	100 2W	[M]
R8621	ERJ2GEJ105X	1M 2W	[M]
R8622	ERJ2RHD102X	1K 2W	[M]
K8031	ERJ2GE0R00X	CHIP JUMPER	[M]
K8106	ERJ3GEY0R00V	CHIP JUMPER	[M]
K8421	ERJ3GEY0R00V	CHIP JUMPER	[M]
RX8011	D1H88204A024	CHIP RESISTOR	[M]
RX8012	D1H88204A024	CHIP RESISTOR	[M]
RX8013	D1H88204A024	CHIP RESISTOR	[M]
RX8014	D1H88204A024	CHIP RESISTOR	[M]
RX8015	D1H422020001	CHIP RESISTOR	[M]
RX8016	D1H88204A024	CHIP RESISTOR	[M]
RX8017	D1H88204A024	CHIP RESISTOR	[M]
RX8018	D1H88204A024	CHIP RESISTOR	[M]
RX8021	D1H410320002	CHIP RESISTOR	[M]
RX8031	D1H447220001	CHIP RESISTOR	[M]
RX8032	D1H447220001	CHIP RESISTOR	[M]
RX8401	D1H410120001	CHIP RESISTOR	[M]
RX8402	D1H410120001	CHIP RESISTOR	[M]
RX8501	D1H456020001	CHIP RESISTOR	[M]
RX8502	D1H85604A024	CHIP RESISTOR	[M]
RX8503	D1H456020001	CHIP RESISTOR	[M]
RX8504	D1H456020001	CHIP RESISTOR	[M]
RX8611	D1H447220001	CHIP RESISTOR	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
		CAPACITORS	
C2003	ECEA1AKA220B	22 10V	[M]
C2004	ECJ1VB1E103K	0.01 25V	[M]
C2005	ECA1AM102B	1000 10V	[M]
C2006	ECEA1HKA2R2B	2.2 50V	[M]
C2007	ECJ1VB1C104K	0.1 16V	[M]
C2008	ECJ1VB1C104K	0.1 16V	[M]
C2009	ECEA0JKA101B	100 6.3V	[M]
C2019	ECJ1VB1H331K	330P 50V	[M]
C2020	ECJ1VB1H331K	330P 50V	[M]
C2021	ECJ1VB1H331K	330P 50V	[M]
C2022	ECJ1VB1H223K	0.022 50V	[M]
C2023	ECJ1VB1C104K	0.1 16V	[M]
C2024	ECEA1CKA470B	47 16V	[M]
C2028	ECJ1VB1A105K	1 10V	[M]
C2029	ECJ1VB1A105K	1 10V	[M]
C2032	ECJ1VB1C104K	0.1 16V	[M]
C2033	ECJ1VB1H103K	0.01 50V	[M]
C2034	ECJ1VB1C104K	0.1 16V	[M]
C2035	ECJ1VB1H103K	0.01 50V	[M]
C2036	ECEA1HKA220I	22 50V	[M]
C2037	ECJ1VB1H103K	0.01 50V	[M]
C2038	ECEA1AKA221I	220 10V	[M]
C2039	ECJ1VB1H103K	0.01 50V	[M]
C2040	ECA0JM102B	1000 6.3V	[M]
C2042	ECA0JM102B	1000 6.3V	[M]
C2044	ECA0JM102B	1000 6.3V	[M]
C2046	ECA0JM331I	330 6.3V	[M]
C2047	ECA0JM331I	330 6.3V	[M]
C2049	ECJ1VC1H101K	100P 50V	[M]
C2050	ECJ1VC1H101K	100P 50V	[M]
C2051	ECJ1VC1H101K	100P 50V	[M]
C2052	ECJ1VC1H101K	100P 50V	[M]
C2053	ECJ1VB1E103K	0.01 25V	[M]
C2090	ECJ1VB1E103K	0.01 25V	[M]
C2100	ECJ1VB1C393K	0.039 16V	[M]
C2101	ECJ1VB1H332K	3300P 50V	[M]
C2120	ECJ1VB1A105K	1 10V	[M]
C2121	ECJ1VC1H151K	150P 50V	[M]
C2122	ECJ1VB1H391K	390P 50V	[M]
C2123	ECEA1HKA100I	10 50V	[M]
C2124	ECJ1VC1H101K	100P 50V	[M]
C2125	ECJ1VC1H330J	33P 50V	[M]
C2126	ECJ1VB1E103K	0.01 25V	[M]
C2127	ECEA1HKA4R7I	4.7 50V	[M]
C2128	ECJ1VB1A225K	2.2 10V	[M]
C2130	ECJ1VB1A154K	0.15 10V	[M]
C2131	ECJ1VB1H332K	3300P 50V	[M]
C2138	ECJ1VC1H221J	220P 50V	[M]
C2139	ECJ1VC1H101K	100P 50V	[M]
C2140	ECJ1VB1H681K	680P 50V	[M]
C2149	ECJ1VB1A105K	1 10V	[M]
C2150	ECEA1HKA010I	1 50V	[M]
C2151	ECJ1VC1H101K	100P 50V	[M]
C2152	ECJ1VC1H151K	150P 50V	[M]
C2153	ECA1CM101B	100 16V	[M]
C2154	ECJ1VB1E103K	0.01 25V	[M]
C2155	ECJ1VB1H102K	1000P 50V	[M]
C2156	ECJ1VB1A105K	1 10V	[M]
C2157	ECEA1HKA100B	10 50V	[M]
C2160	ECJ1VB1H471K	470P 50V	[M]
C2161	ECJ1VB1C104K	0.1 16V	[M]
C2162	ECJ1VB1C683K	0.068 16V	[M]
C2163	ECEA1HKA3R3B	3.3 50V	[M]
C2164	ECJ1VB1H272K	2700P 50V	[M]
C2165	ECJ1VB1A124K	0.12 10V	[M]
C2166	ECJ1VB1A124K	0.12 10V	[M]
C2167	ECEA1HKA4R7I	4.7 50V	[M]
C2168	ECEA1HKA3R3I	3.3 50V	[M]
C2169	ECJ1VB1H471K	470P 50V	[M]
C2170	ECEA1HKA4R7I	4.7 50V	[M]
C2175	ECJ1VB1C333K	0.033 16V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C2176	ECJ1VB1H471K	470P 50V	[M]
C2177	ECJ1VB1H471K	470P 50V	[M]
C2179	EEUFM1A681B	680P 10V	[M]
C2200	ECJ1VB1C393K	0.039 16V	[M]
C2201	ECJ1VB1H332K	3300P 50V	[M]
C2210	ECJ1VB1H223K	0.022 50V	[M]
C2211	ECJ1VB1C823K	0.082 16V	[M]
C2218	ECJ1VB1A105K	1 10V	[M]
C2219	ECJ1VB1A124K	0.12 10V	[M]
C2220	ECJ1VB1A124K	0.12 10V	[M]
C2221	ECJ1VC1H151K	150P 50V	[M]
C2222	ECJ1VB1H391K	390P 50V	[M]
C2223	ECEA1HKA100I	10 50V	[M]
C2224	ECJ1VC1H101K	100P 50V	[M]
C2225	ECJ1VC1H330J	33P 50V	[M]
C2226	ECJ1VB1E103K	0.01 25V	[M]
C2227	ECEA1HKA4R7I	4.7 50V	[M]
C2228	ECJ1VB1A154K	0.15 10V	[M]
C2229	ECJ1VB1A225K	2.2 10V	[M]
C2232	ECJ1VB1H332K	3300P 50V	[M]
C2237	ECJ1VB1H104K	0.1 50V	[M]
C2238	ECJ1VC1H221J	220P 50V	[M]
C2239	ECJ1VC1H101K	100P 50V	[M]
C2249	ECJ1VB1A105K	1 10V	[M]
C2250	ECEA1HKA010I	1 50V	[M]
C2251	ECJ1VC1H101K	100P 50V	[M]
C2252	ECJ1VC1H151K	150P 50V	[M]
C2253	ECA1CM101B	100 16V	[M]
C2254	ECJ1VB1E103K	0.01 25V	[M]
C2255	ECJ1VB1H102K	1000P 50V	[M]
C2256	ECJ1VB1A105K	1 10V	[M]
C2257	ECEA1HKA100B	10 50V	[M]
C2260	ECJ1VB1H471K	470P 50V	[M]
C2261	ECJ1VB1C104K	0.1 16V	[M]
C2262	ECJ1VB1C683K	0.068 16V	[M]
C2263	ECEA1HKA3R3I	3.3 50V	[M]
C2264	ECEA1HKA100I	10 50V	[M]
C2265	ECJ1VB1H272K	2700P 50V	[M]
C2266	ECEA1HKA4R7I	4.7 50V	[M]
C2267	ECEA1HKA4R7I	4.7 50V	[M]
C2270	ECJ1VB1C333K	0.033 16V	[M]
C2300	ECEA1CKA100B	10 16V	[M]
C2301	ECJ1VB1H471K	470P 50V	[M]
C2302	ECJ1VB1A105K	1 10V	[M]
C2303	ECEA1HKA3R3B	3.3 50V	[M]
C2310	ECJ1VB1H223K	0.022 50V	[M]
C2320	F1H1A334A025	0.33 10V	[M]
C2400	ECEA1HKA100B	10 50V	[M]
C2401	F1K1A4750013	4.7 10V	[M]
C2402	ECJ1VB1H471K	470P 50V	[M]
C2403	ECJ1VB1A105K	1 10V	[M]
C2404	ECEA1HKA3R3B	3.3 50V	[M]
C2405	F1K1A4750013	4.7 10V	[M]
C2500	ECEA1CKA100B	10 16V	[M]
C2501	F1K1A4750013	4.7 10V	[M]
C2502	ECEA1HKA010I	1 50V	[M]
C2503	ECJ1VB1C333K	0.033 16V	[M]
C2504	ECJ1VB1C104K	0.1 16V	[M]
C2505	ECEA1HKA010I	1 50V	[M]
C2506	ECJ1VB1E103K	0.01 25V	[M]
C2507	ECJ1VB1H471K	470P 50V	[M]
C2508	ECEA1HKA4R7I	4.7 50V	[M]
C2511	ECJ1VB1A105K	1 10V	[M]
C2521	ECJ1VB1A105K	1 10V	[M]
C2522	ECJ1VB1A105K	1 10V	[M]
C2600	ECJ1VB1A105K	1 10V	[M]
C2602	ECEA1HKA100I	10 50V	[M]
C2603	ECEA1HKA100I	10 50V	[M]
C2604	ECJ1VB1H222K	2200P 50V	[M]
C2605	F1H1A334A025	0.33 10V	[M]
C2606	ECJ1VB1A124K	0.12 10V	[M]
C2607	F1H1A334A025	0.33 10V	[M]
C2608	ECJ1VB1H104K	0.1 50V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C2609	ECJ1VB1H562K	5600P 50V	[M]
C2610	ECEA1HKA100B	10 50V	[M]
C2611	ECEA1HKA4R7I	4.7 50V	[M]
C2612	ECEA1HKA4R7I	4.7 50V	[M]
C2613	ECJ1VB1E103K	0.01 25V	[M]
C2615	ECJ1VB1H562K	5600P 50V	[M]
C2616	ECEA1CKA100I	10 16V	[M]
C2617	ECEA1HKA4R7I	4.7 50V	[M]
C2618	ECJ1VB1C563K	0.056 16V	[M]
C2619	ECJ1VB0J474K	0.47 6.3V	[M]
C2620	ECJ1VB1C683K	0.068 16V	[M]
C2621	ECJ1VC1H221J	220P 50V	[M]
C2627	ECEA1HKA100I	10 50V	[M]
C2628	ECEA1HKA100I	10 50V	[M]
C2629	ECEA1HKA4R7I	4.7 50V	[M]
C2631	ECEA1HKA4R7I	4.7 50V	[M]
C2632	ECJ1VC1H101K	100P 50V	[M]
C2633	ECJ1VB1H223K	0.022 50V	[M]
C2634	ECEA1HKA4R7I	4.7 50V	[M]
C2635	ECJ1VC1H221J	220P 50V	[M]
C2636	ECEA1HKAR47B	0.47 50V	[M]
C2801	ECJ1VC1H101K	100P 50V	[M]
C2802	ECA1EM221B	220 25V	[M]
C2803	ECJ1VC1H101K	100P 50V	[M]
C2804	ECJ1VC1H101K	100P 50V	[M]
C2805	ECJ1VC1H101K	100P 50V	[M]
C2806	EEUFC0J821B	820P 6.3V	[M]
C2807	ECJ1VC1H101K	100P 50V	[M]
C2808	ECJ1VC1H101K	100P 50V	[M]
C2809	ECEA1EKA330B	33 25V	[M]
C2810	ECJ1VC1H101K	100P 50V	[M]
C2811	ECJ1VB1H103K	0.01 50V	[M]
C2812	ECJ1VC1H101K	100P 50V	[M]
C2814	ECJ1VC1H101K	100P 50V	[M]
C2815	ECJ1VB1H103K	0.01 50V	[M]
C2816	ECJ1VB1H221K	220P 50V	[M]
C2817	ECEA0JKA221B	220 6.3V	[M]
C2818	ECJ1VB1H221K	220P 50V	[M]
C2819	ECJ1VB1A105K	1 10V	[M]
C2820	ECJ1VB1E103K	0.01 25V	[M]
C2821	ECEA0JKA470B	47 6.3V	[M]
C2822	ECJ1VB1E103K	0.01 25V	[M]
C2823	ECJ1VB1A105K	1 10V	[M]
C2824	ECJ1VB1A105K	1 10V	[M]
C2825	ECEA0JKA331B	330 6.3V	[M]
C2826	ECQB1H104JF4	0.1 50V	[M]
C2827	ECEA1HKA100I	10 50V	[M]
C2828	ECA1JM101B	100 63V	[M]
C2829	ECA1HM101B	100 50V	[M]
C2830	F2A1E1020065	1000P 25V	[M]
C2831	ECEA1CKA470B	47 16V	[M]
C2832	F2A1E1020065	1000P 25V	[M]
C2833	ECEA1CKA470B	47 16V	[M]
C2834	ECA1HM101B	100 50V	[M]
C2835	ECA1JM101B	100 63V	[M]
C2836	ECA1CM101B	100 16V	[M]
C2837	ECJ1VB1H103K	0.01 50V	[M]
C2838	ECJ1VB1H103K	0.01 50V	[M]
C2839	ECEA1AKA330B	33 10V	[M]
C2840	ECJ1VB1C104K	0.1 16V	[M]
C2841	ECA1EM472B	4700 25V	[M]
C2842	ECJ1VB1H103K	0.01 50V	[M]
C2843	ECEA1EKA330B	33 25V	[M]
C2844	ECJ1VB1H103K	0.01 50V	[M]
C2845	ECJ1VB1C104K	0.1 16V	[M]
C2846	ECA1EM101B	100 25V	[M]
C2847	ECJ1VB1H103K	0.01 50V	[M]
C2848	ECA1EM101B	100 25V	[M]
C2853	ECEA1HKN4R7B	4.7 50V	[M]
C2856	ECA1HM101B	100 50V	[M]
C2857	ECJ1VB1A225K	2.2 10V	[M]
C2858	ECJ1VB1A225K	2.2 10V	[M]
C2859	ECJ1VB1E103K	0.01 25V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C2862	ECJ1VB1C104K	0.1 16V	[M]
C2863	ECEA1CKA221B	220 16V	[M]
C2866	ECJ1VB1A105K	1 10V	[M]
C6101	ECJ1VB1H473K	0.047 50V	[M]
C6201	ECJ1VB1H473K	0.047 50V	[M]
C6801	ECJ1VB1H102K	1000P 50V	[M]
C6805	ECJ1VC1H101K	100P 50V	[M]
C6806	ECJ1VC1H101K	100P 50V	[M]
C6903	ECEA1HKA220B	22 50V	[M]
C6904	ECJ1VB1H102K	1000P 50V	[M]
C6905	ECEA1HKA220B	22 50V	[M]
C6906	ECJ1VC1H390K	39P 50V	[M]
C6909	ECJ1VB1H103K	0.01 50V	[M]
C6910	ECEA0JKS101B	100 6.3V	[M]
C6911	ECJ1VB1H103K	0.01 50V	[M]
C6912	ECJ1VB1C104K	0.1 16V	[M]
C6913	ECEA1HKS3R3B	3.3 50V	[M]
C6914	ECUV1C224KBV	0.22 16V	[M]
C6915	ECJ1VC1H101K	100P 50V	[M]
C6916	ECJ1VC1H101K	100P 50V	[M]
C6917	ECJ1VC1H101K	100P 50V	[M]
C6918	ECEA1AKA470B	47 10V	[M]
C8001	F2G0J101A066	100P 6.3V	[M]
C8002	F2G0G331A012	330P 4V	[M]
C8003	ECJ0EB1E222K	2200P 25V	[M]
C8004	ECJ0EF1C104Z	0.1 16V	[M]
C8005	ECJ0EF1C104Z	0.1 16V	[M]
C8006	ECJ0EF1C104Z	0.1 16V	[M]
C8007	ECJ0EF1C104Z	0.1 16V	[M]
C8008	ECJ0EF1C104Z	0.1 16V	[M]
C8009	ECJ0EF1C104Z	0.1 16V	[M]
C8010	ECJ0EF1C104Z	0.1 16V	[M]
C8011	ECJ1VB0J105K	1 6.3V	[M]
C8012	ECJ0EF1C104Z	0.1 16V	[M]
C8013	ECJ0EF1C104Z	0.1 16V	[M]
C8014	ECJ0EF1C104Z	0.1 16V	[M]
C8015	ECJ1VB0J105K	1 6.3V	[M]
C8016	ECJ1VB0J105K	1 6.3V	[M]
C8017	ECJ0EF1C104Z	0.1 16V	[M]
C8018	ECJ0EF1C104Z	0.1 16V	[M]
C8019	ECJ1VB0J105K	1 6.3V	[M]
C8020	ECJ0EF1C104Z	0.1 16V	[M]
C8021	ECJ0EF1C104Z	0.1 16V	[M]
C8022	ECJ0EF1C104Z	0.1 16V	[M]
C8023	ECJ1VB0J105K	1 6.3V	[M]
C8024	ECJ1VB0J105K	1 6.3V	[M]
C8025	ECJ0EF1C104Z	0.1 16V	[M]
C8026	ECJ0EB1E222K	2200P 25V	[M]
C8027	ECJ0EF1C104Z	0.1 16V	[M]
C8028	ECJ1VB0J105K	1 6.3V	[M]
C8031	ECJ0EF1C104Z	0.1 16V	[M]
C8051	ECJ1VB0J105K	1 6.3V	[M]
C8052	ECJ0EF1C104Z	0.1 16V	[M]
C8053	ECJ0EC1H221J	220P 50V	[M]
C8054	ECJ1VB0J105K	1 6.3V	[M]
C8055	ECJ1VB0J105K	1 6.3V	[M]
C8056	ECJ0EF1C104Z	0.1 16V	[M]
C8057	ECJ0EB1E222K	2200P 25V	[M]
C8111	ECJ0EB1A104K	0.1 10V	[M]
C8112	ECJ1VB0J105K	1 6.3V	[M]
C8113	ECJ0EB1E471K	470P 25V	[M]
C8201	F2H0J101A003	100P 6.3V	[M]
C8202	F2G0J101A066	100P 6.3V	[M]
C8203	ECJ0EF1C104Z	0.1 16V	[M]
C8204	ECJ0EF1C104Z	0.1 16V	[M]
C8205	ECJ0EF1C104Z	0.1 16V	[M]
C8206	ECJ1VB0J105K	1 6.3V	[M]
C8207	ECJ1VF1C104Z	0.1 16V	[M]
C8208	ECJ0EF1C104Z	0.1 16V	[M]
C8211	ECJ0EB1A333K	0.033 10V	[M]
C8212	ECJ0EF1C104Z	0.1 16V	[M]
C8213	ECJ0EF1C104Z	0.1 16V	[M]
C8214	ECJ0EF1C104Z	0.1 16V	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
C8215	ECJ0EB1E562K	5600P 25V	[M]
C8216	ECJ0EB1C183K	0.018 16V	[M]
C8217	ECJ1VB0J105K	1 6.3V	[M]
C8218	ECJ1VB0J105K	1 6.3V	[M]
C8221	ECJ0EB1A104K	0.1 10V	[M]
C8222	ECJ0EB1A104K	0.1 10V	[M]
C8223	ECJ0EB1A104K	0.1 10V	[M]
C8224	ECJ0EB1A104K	0.1 10V	[M]
C8225	ECJ0EF1C104Z	0.1 16V	[M]
C8226	ECJ0EF1C104Z	0.1 16V	[M]
C8227	ECJ0EF1C104Z	0.1 16V	[M]
C8228	ECJ1VB0J105K	1 6.3V	[M]
C8229	ECJ1VB0J105K	1 6.3V	[M]
C8232	ECJ1VF1C104Z	0.1 16V	[M]
C8233	ECJ0EB1E472K	4700P 25V	[M]
C8234	ECJ0EF1C104Z	0.1 16V	[M]
C8235	ECJ0EB1H102K	1000P 50V	[M]
C8236	ECJ0EB1H102K	1000P 50V	[M]
C8237	ECJ0EB1H102K	1000P 50V	[M]
C8238	ECJ0EB1H821K	820P 50V	[M]
C8241	ECJ0EB1A104K	0.1 10V	[M]
C8242	ECJ0EB1A104K	0.1 10V	[M]
C8251	F2G0J221A065	220P 6.3V	[M]
C8252	F2G1C470A076	47P 16V	[M]
C8253	F2H1C220A003	22P 16V	[M]
C8254	ECJ0EF1C104Z	0.1 16V	[M]
C8255	ECJ0EF1C104Z	0.1 16V	[M]
C8256	ECJ0EF1C104Z	0.1 16V	[M]
C8257	ECJ0EF1C104Z	0.1 16V	[M]
C8261	ECJ0EF1C104Z	0.1 16V	[M]
C8262	ECJ0EF1C104Z	0.1 16V	[M]
C8301	F2H0J2210006	220P 6.3V	[M]
C8302	F2H0J330A003	33P 6.3V	[M]
C8303	ECJ0EF1C104Z	0.1 16V	[M]
C8304	ECJ1VB0J105K	1 6.3V	[M]
C8307	ECJ0EF1C104Z	0.1 16V	[M]
C8308	ECJ0EC1H150J	15P 50V	[M]
C8311	ECJ0EF1C104Z	0.1 16V	[M]
C8312	ECJ1VB0J105K	1 6.3V	[M]
C8421	F2G0J101A083	100P 6.3V	[M]
C8422	ECJ0EF1C104Z	0.1 16V	[M]
C8423	F2G0J330A083	33P 6.3V	[M]
C8424	ECJ0EF1C104Z	0.1 16V	[M]
C8426	ECJ0EF1C104Z	0.1 16V	[M]
C8427	ECJ0EF1C104Z	0.1 16V	[M]
C8428	ECJ0EF1C104Z	0.1 16V	[M]
C8501	ECJ3YB1A106M	10 10V	[M]
C8502	ECJ0EF1C104Z	0.1 16V	[M]
C8503	ECJ0EF1C104Z	0.1 16V	[M]
C8504	ECJ0EF1C104Z	0.1 16V	[M]
C8505	ECJ0EC1H221J	220P 50V	[M]
C8506	ECJ0EC1H101J	100P 50V	[M]
C8550	F2H0J330A003	33P 6.3V	[M]
C8551	ECJ0EF1C104Z	0.1 16V	[M]
C8552	F2G1C100A072	10P 16V	[M]
C8553	F2H0J470A003	47P 6.3V	[M]
C8554	ECJ1VB0J105K	1 6.3V	[M]
C8561	ECJ0EF1C104Z	0.1 16V	[M]
C8562	F2G1C100A072	10P 16V	[M]
C8563	F2H0J470A003	47P 6.3V	[M]
C8564	ECJ1VB0J105K	1 6.3V	[M]
C8601	ECJ0EF1C104Z	0.1 16V	[M]
C8606	ECJ0EF1C104Z	0.1 16V	[M]
C8607	ECJ0EB0J224K	0.22 6.3V	[M]
C8611	ECJ0EF1C104Z	0.1 16V	[M]
C8621	ECJ0EC1H120J	12P 50V	[M]
C8622	ECJ0EC1H120J	12P 50V	[M]
C8651	ECJ0EF1C104Z	0.1 16V	[M]
C8652	ECJ0EF1C104Z	0.1 16V	[M]
C8691	ECJ0EF1C104Z	0.1 16V	[M]
C8695	ECJ0EF1C104Z	0.1 16V	[M]

27.3. Packing Materials & Accessories Parts List

Ref. No.	Part No.	Part Name & Description	Remarks
		PACKING MATERIALS	
P1	RPGX1389	PACKING CASE	[M]
P2	RPNX0293	POLYFOAM (MAIN SET)	[M]
P3	RPFX0058	MIRAMAT SHEET	[M]
		ACCESSORIES	
A1	EUR7722XB0	REMOTE CONTROLLER	[M]

Ref. No.	Part No.	Part Name & Description	Remarks
A1-1	UR76EC3103A	R/C BATTERY COVER	[M]
A2	K2CQ2CA00002	AC CORD	[M] ⚠
A3	RQT7974-M	OI BOOK [SP]	[M]
A4	RSA0007-L	FM INDOOR ANTENNA	[M]
A5	K1HA25HA0001	SYSTEM CABLE	[M]
A6	K2KA2BA00001	VIDEO CABLE	[M]
A7	N1DAAAA00001	AM LOOP ANTENNA	[M]
A10	RQCA1029	SPEAKER LABEL	[M]
A12	K2DA42E00001	AC PLUG ADAPTOR	[M]

27.4. Packaging

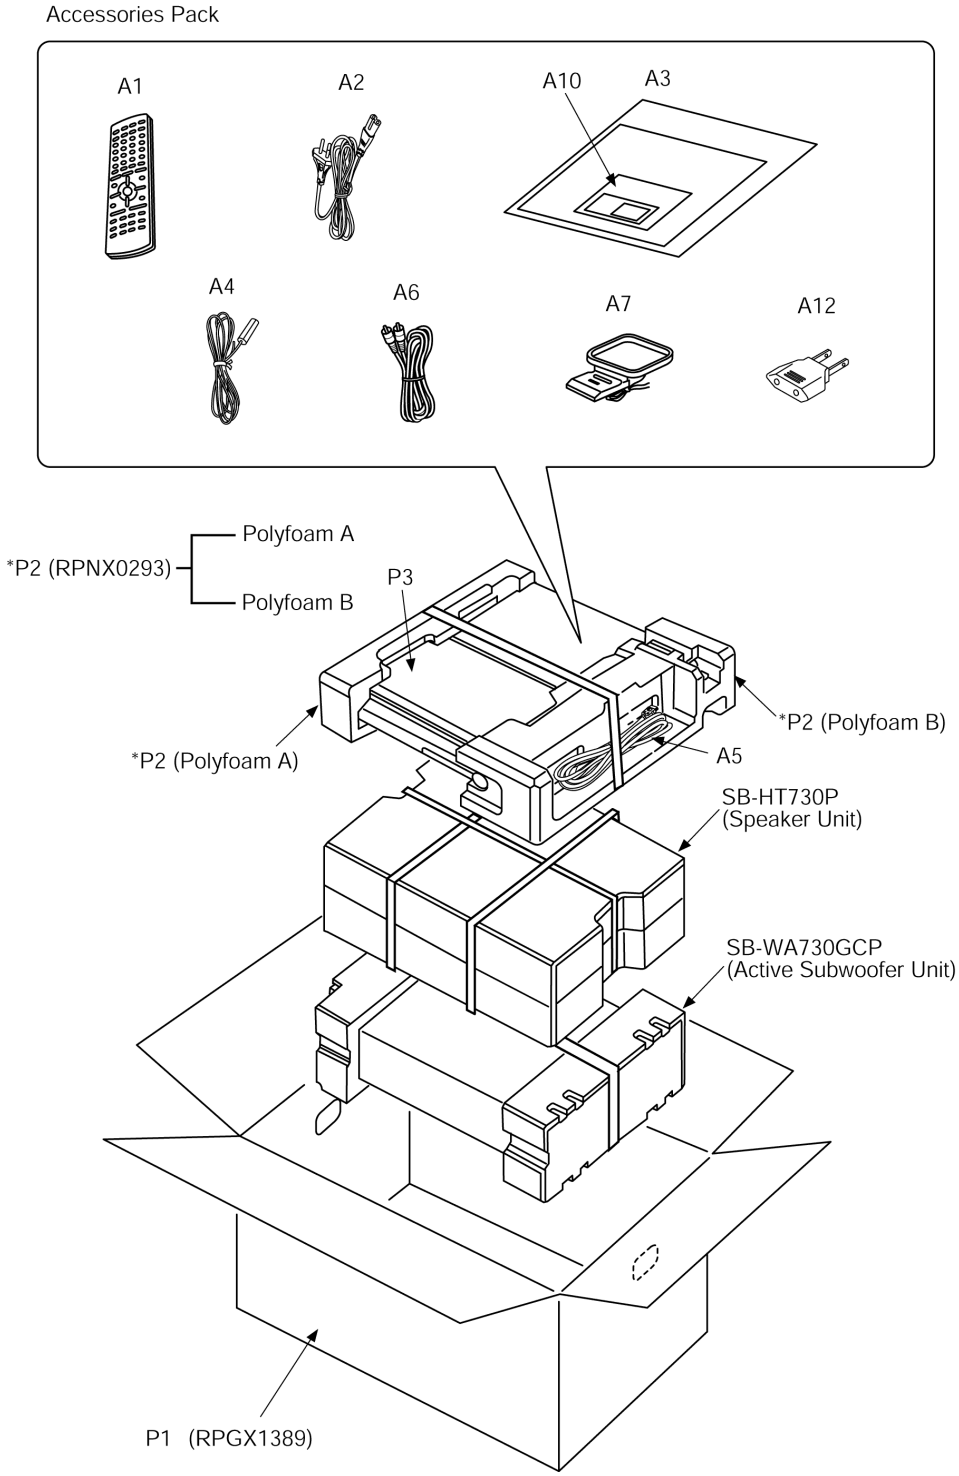

28 Schematic Diagram for printing with letter size

22 Schematic Diagram

SCHEMATIC DIAGRAM-1

A DVD MODULE CIRCUIT

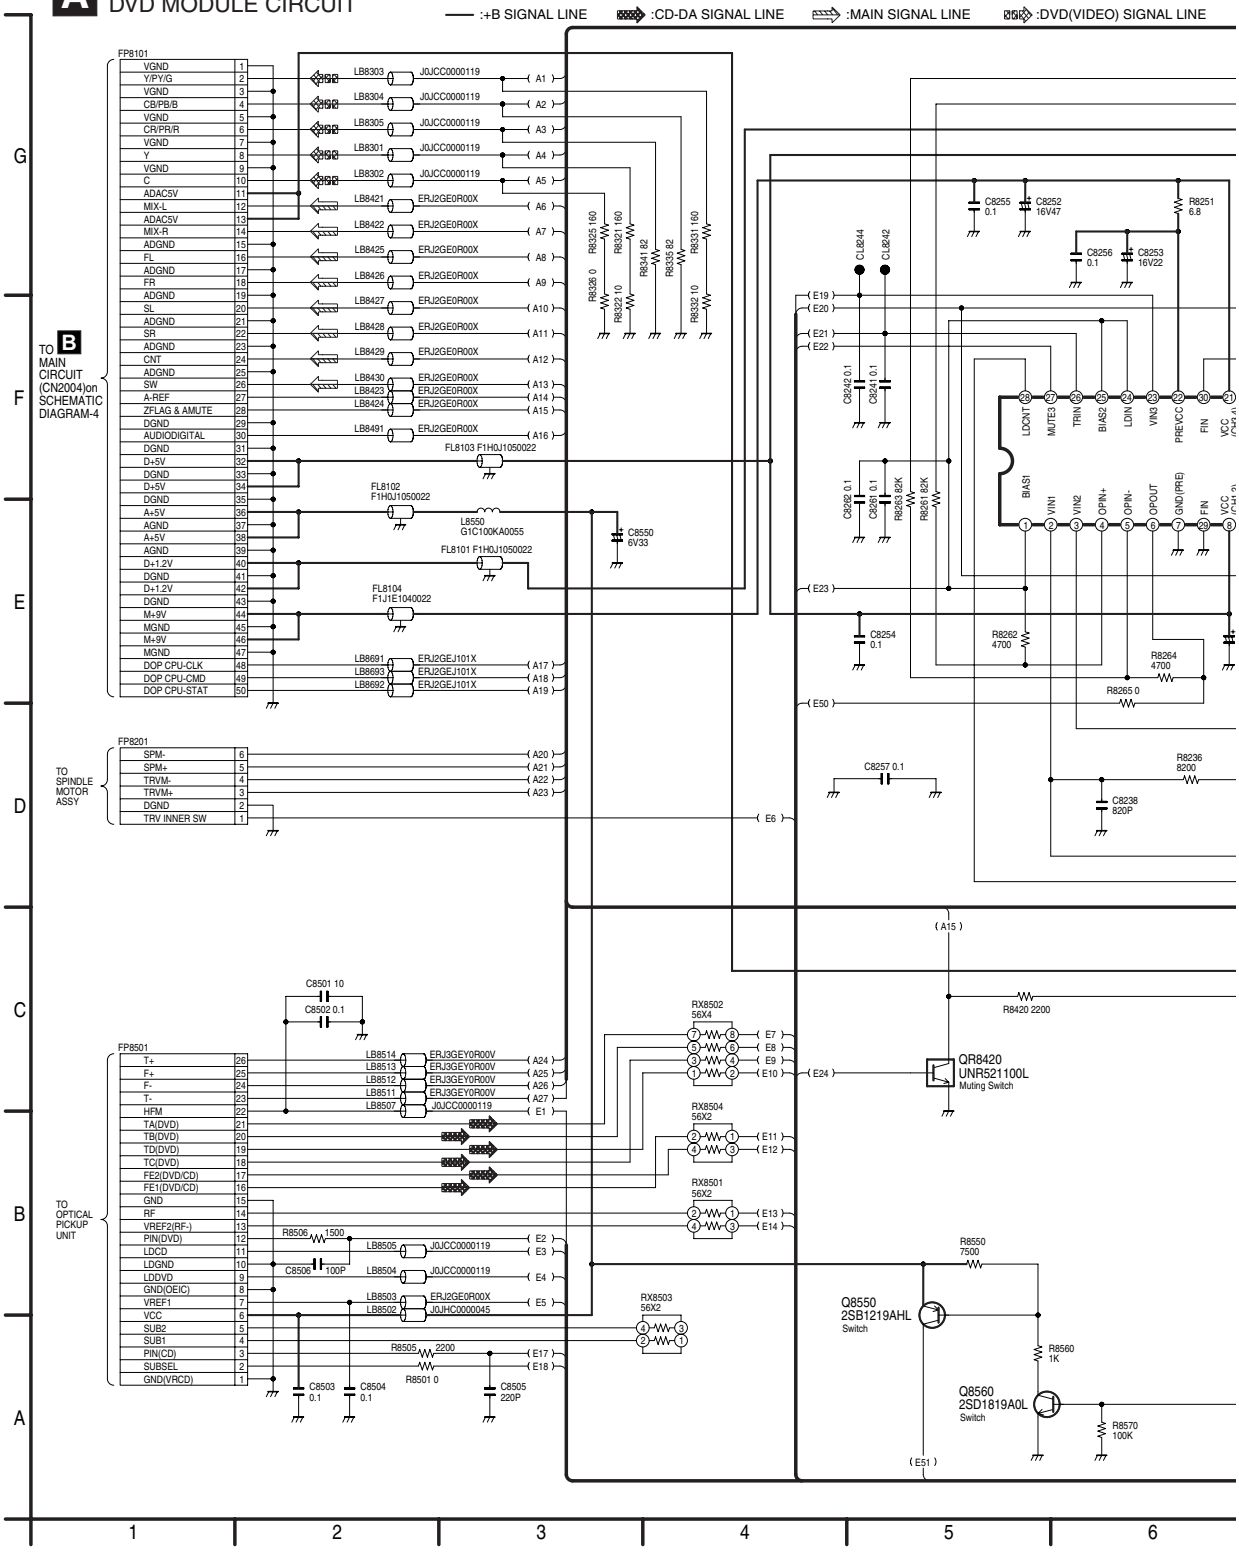

:O) SIGNAL LINE :DVD(AUDIO) SIGNAL LINE

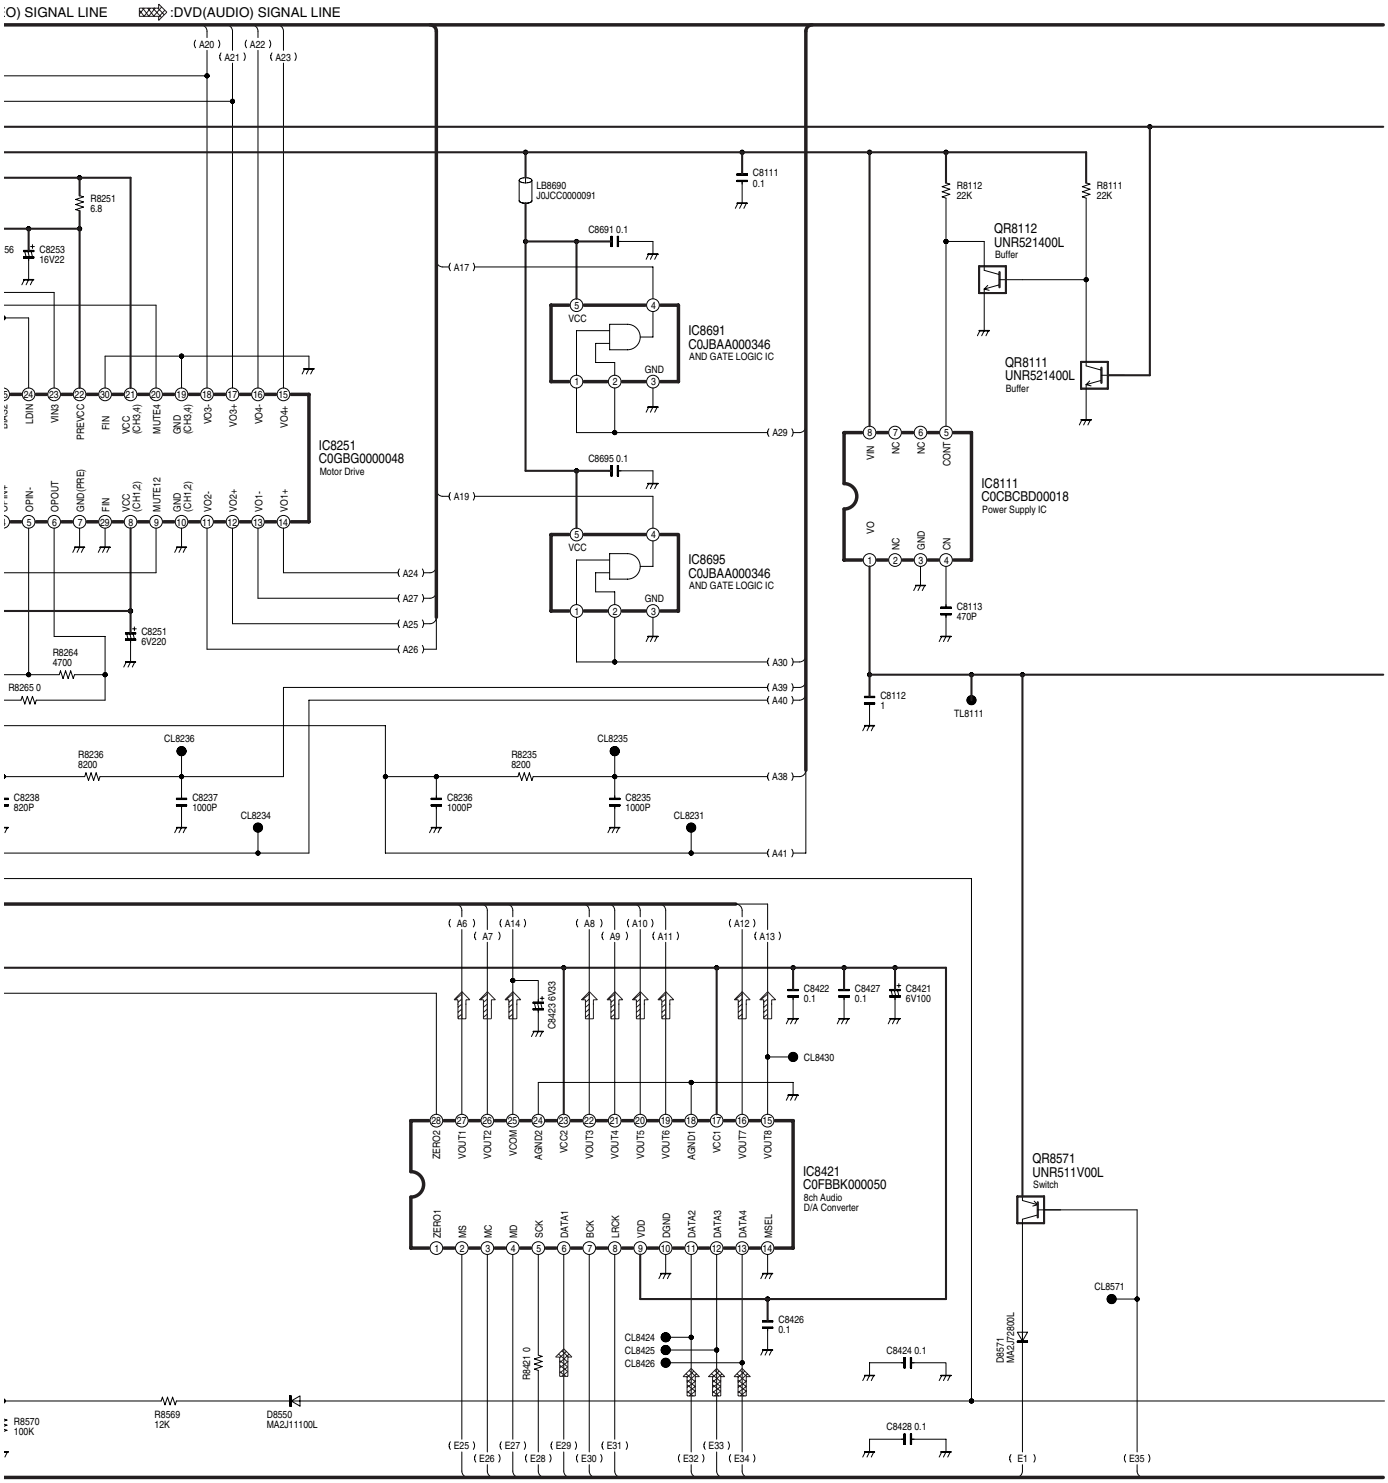

SA-HT730GCP DVD MODULE CIRCUIT

6 7 8 9 10 11

SCHEMATIC DIAGRAM-2

A DVD MODULE CIRCUIT

:+B SIGNAL LINE :CD-DA SIGNAL LINE :DVD(VIDEO) SIGNAL LINE :DVD(AUDIO) SIGNAL LINE

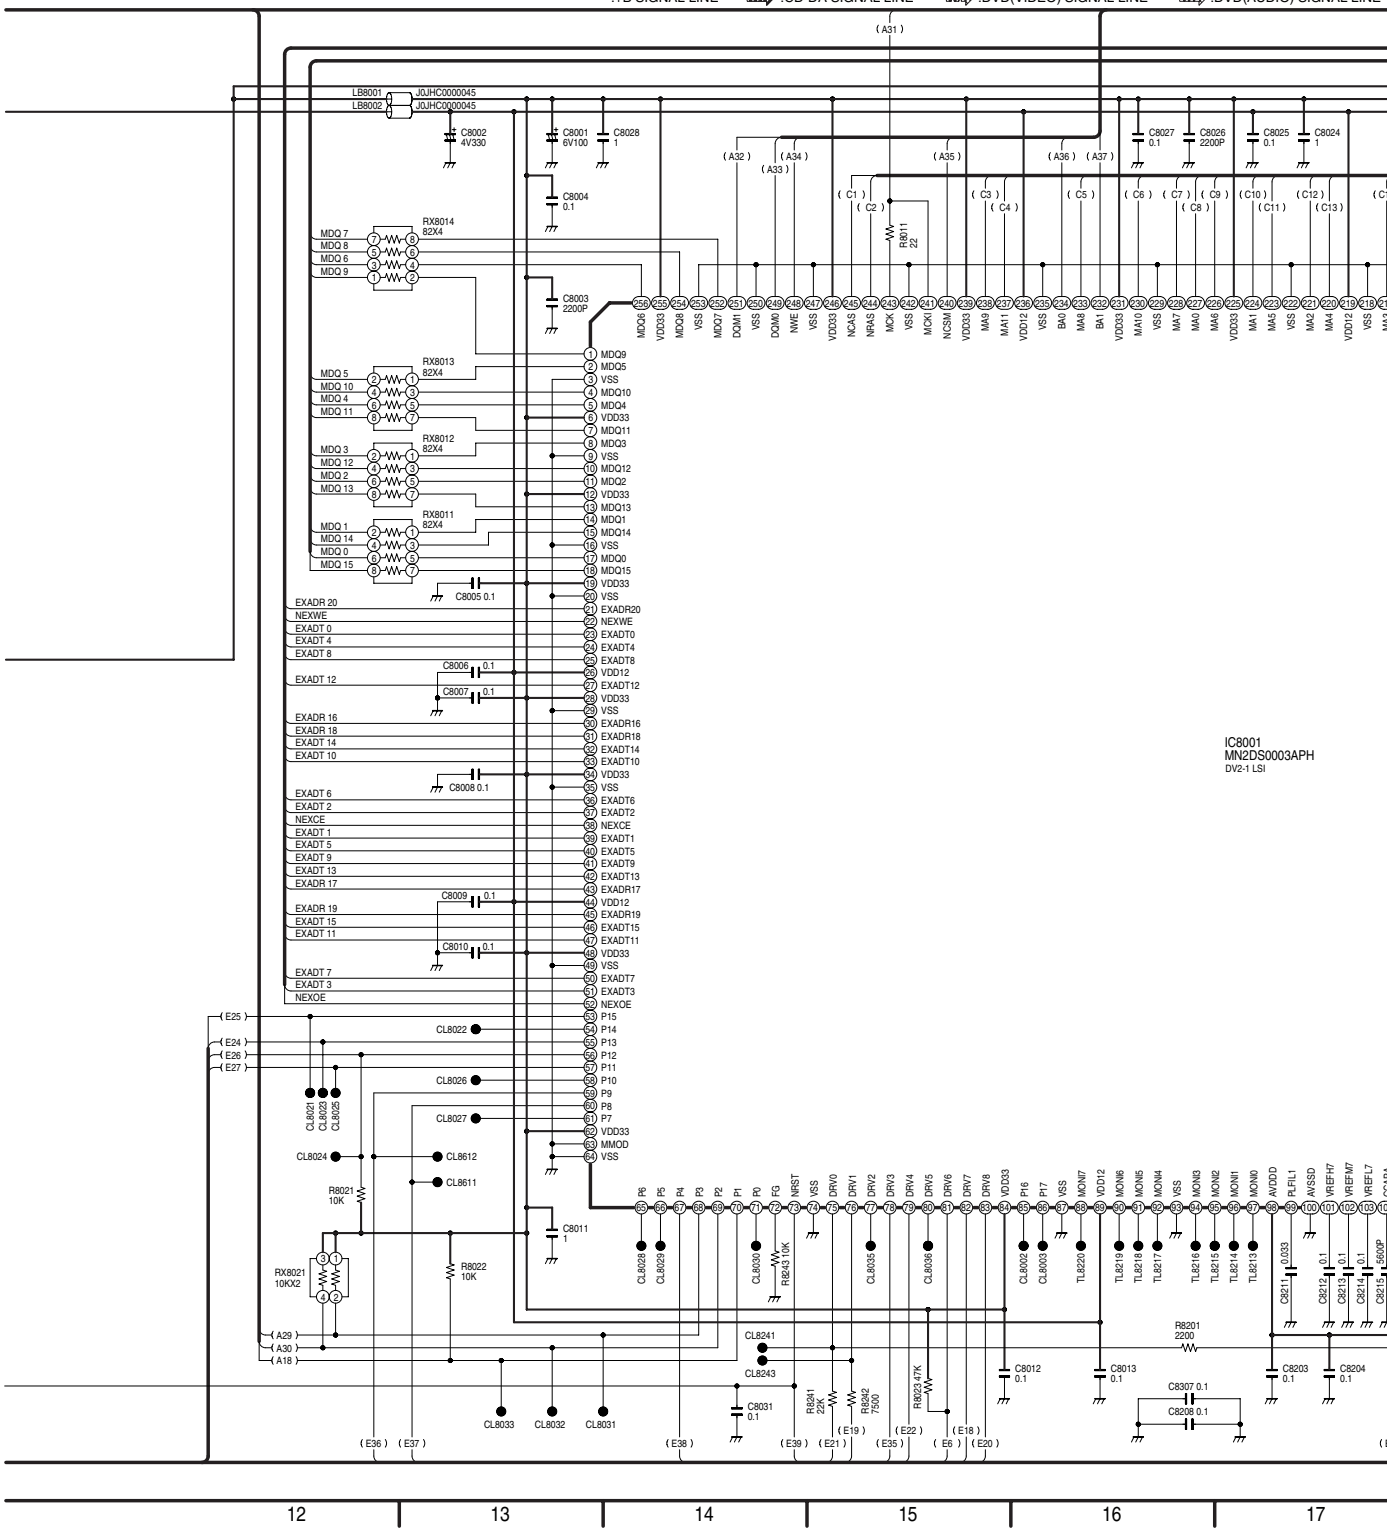

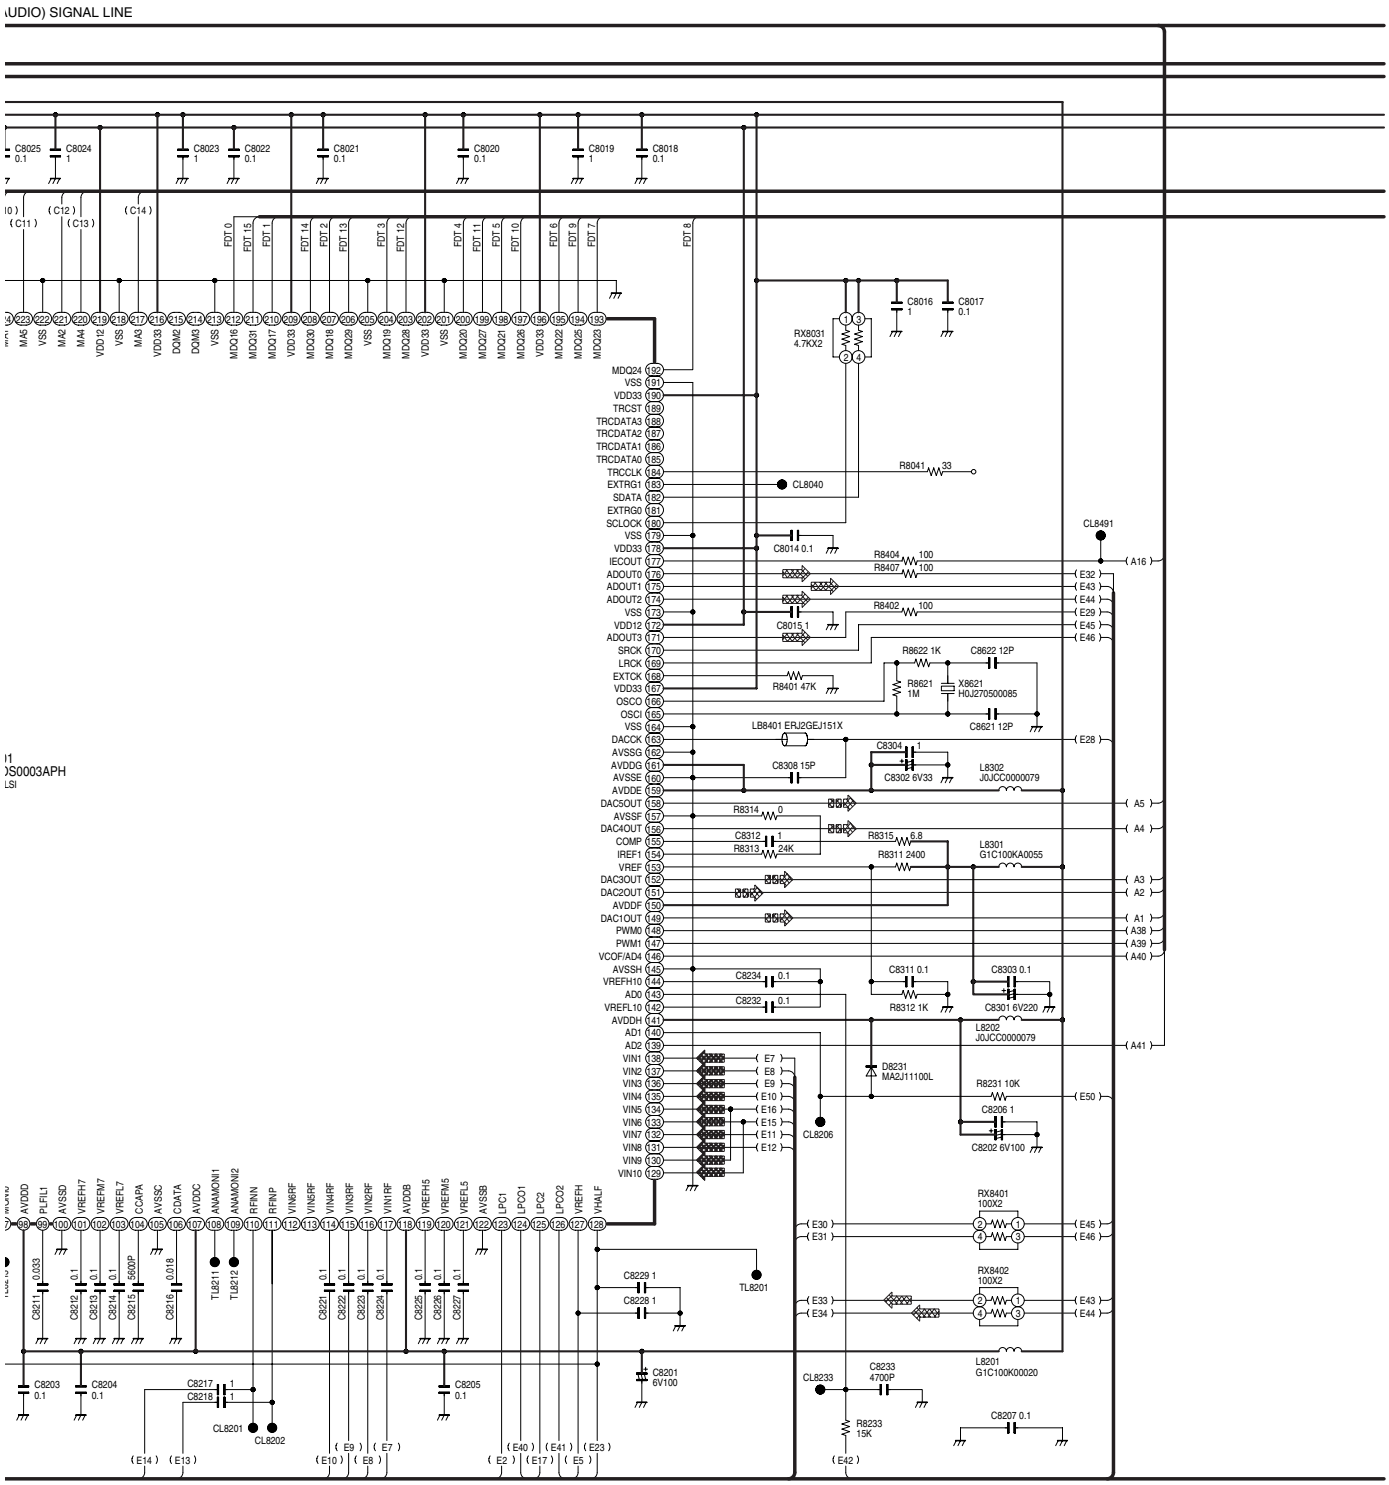
UDIO) SIGNAL LINE
SA-HT730GCP DVD MODULE CIRCUIT
17
18
19
20
21
22

SCHEMATIC DIAGRAM-3

A DVD MODULE CIRCUIT

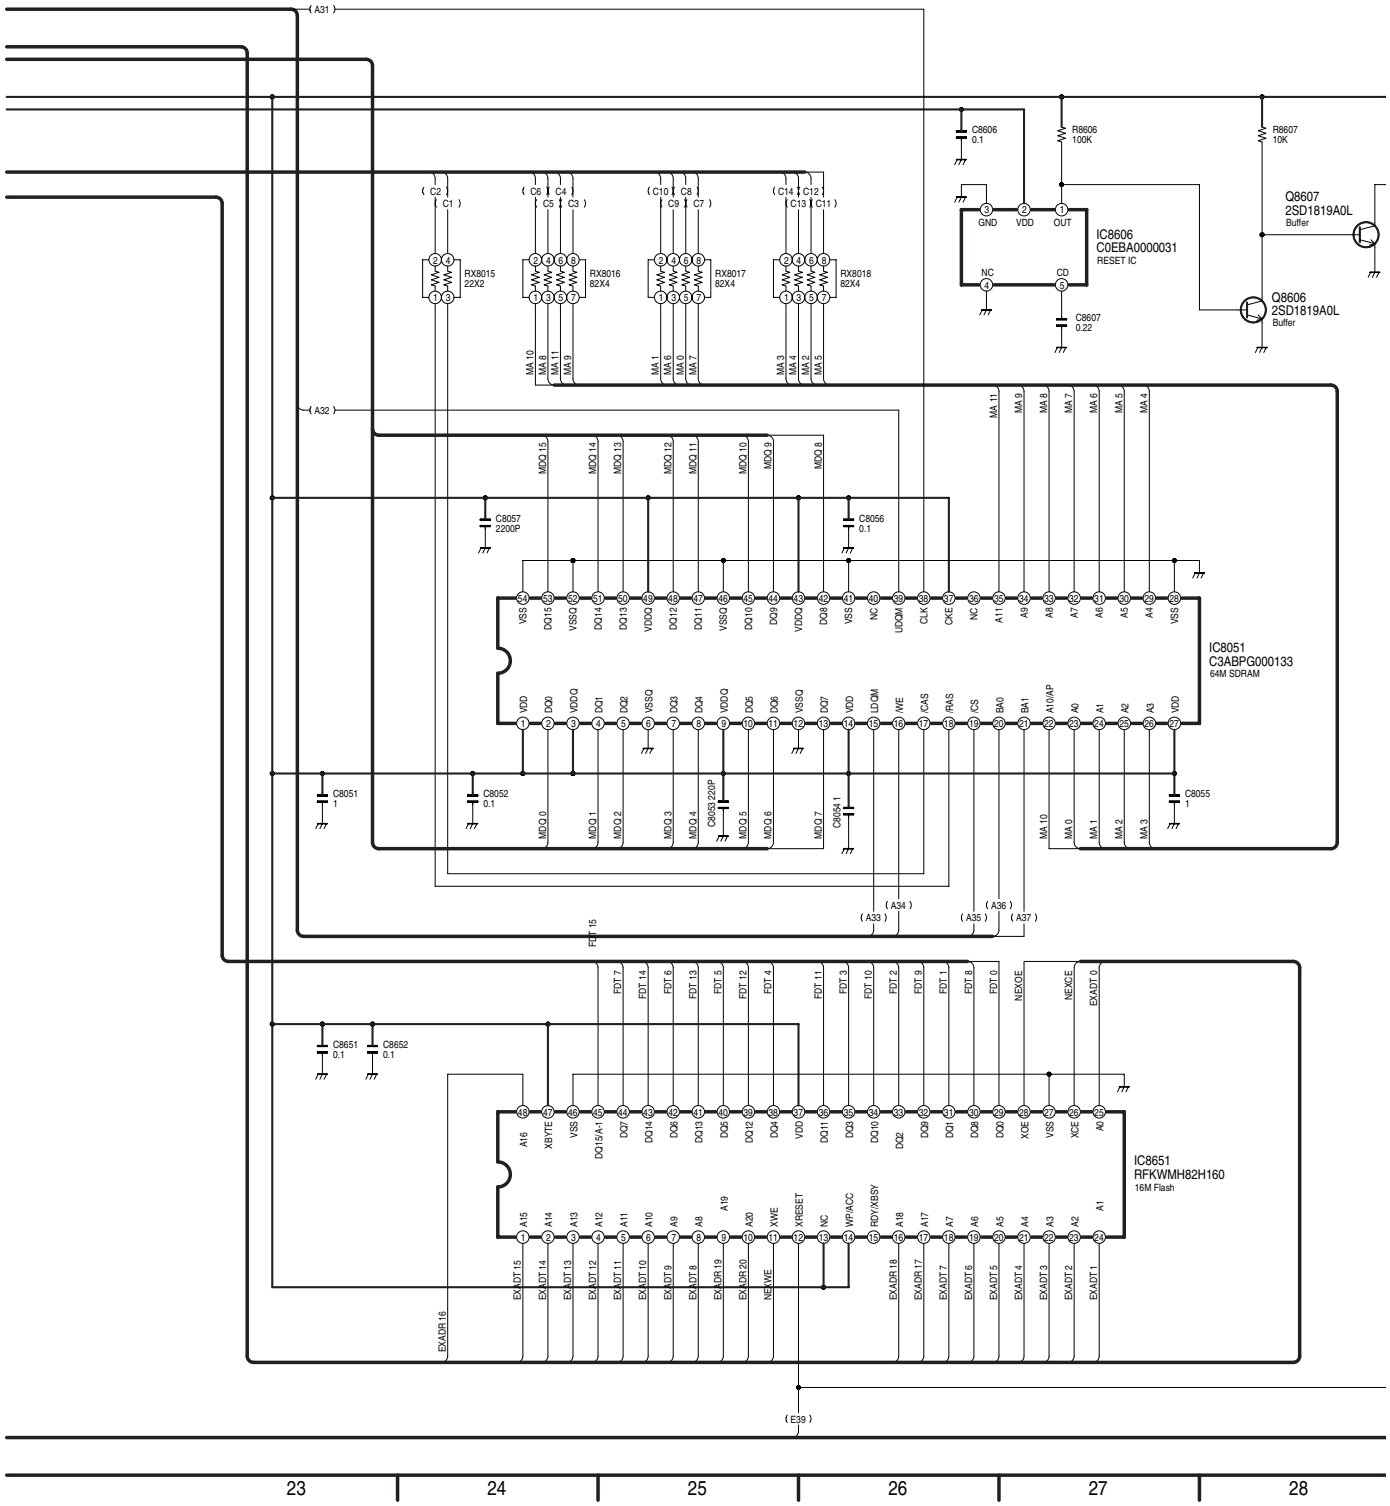

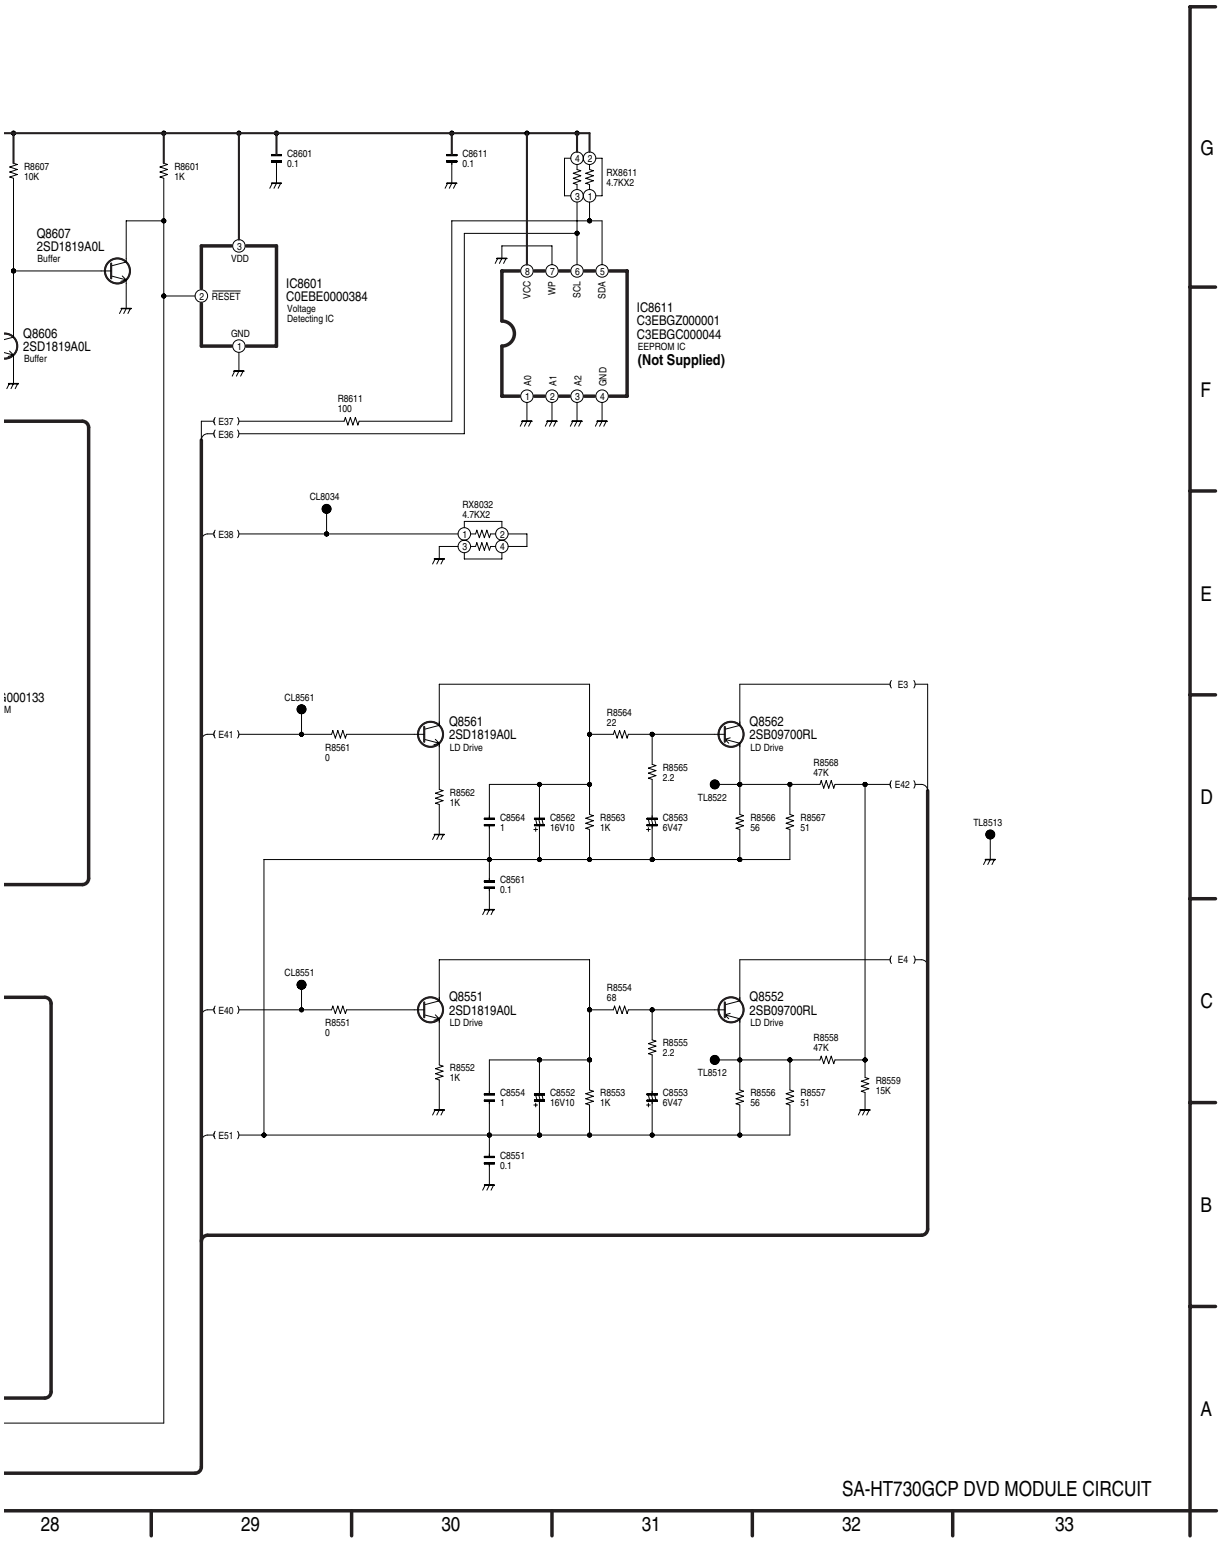

SA-HT730GCP DVD MODULE CIRCUIT

SCHEMATIC DIAGRAM-4

B MAIN CIRCUIT

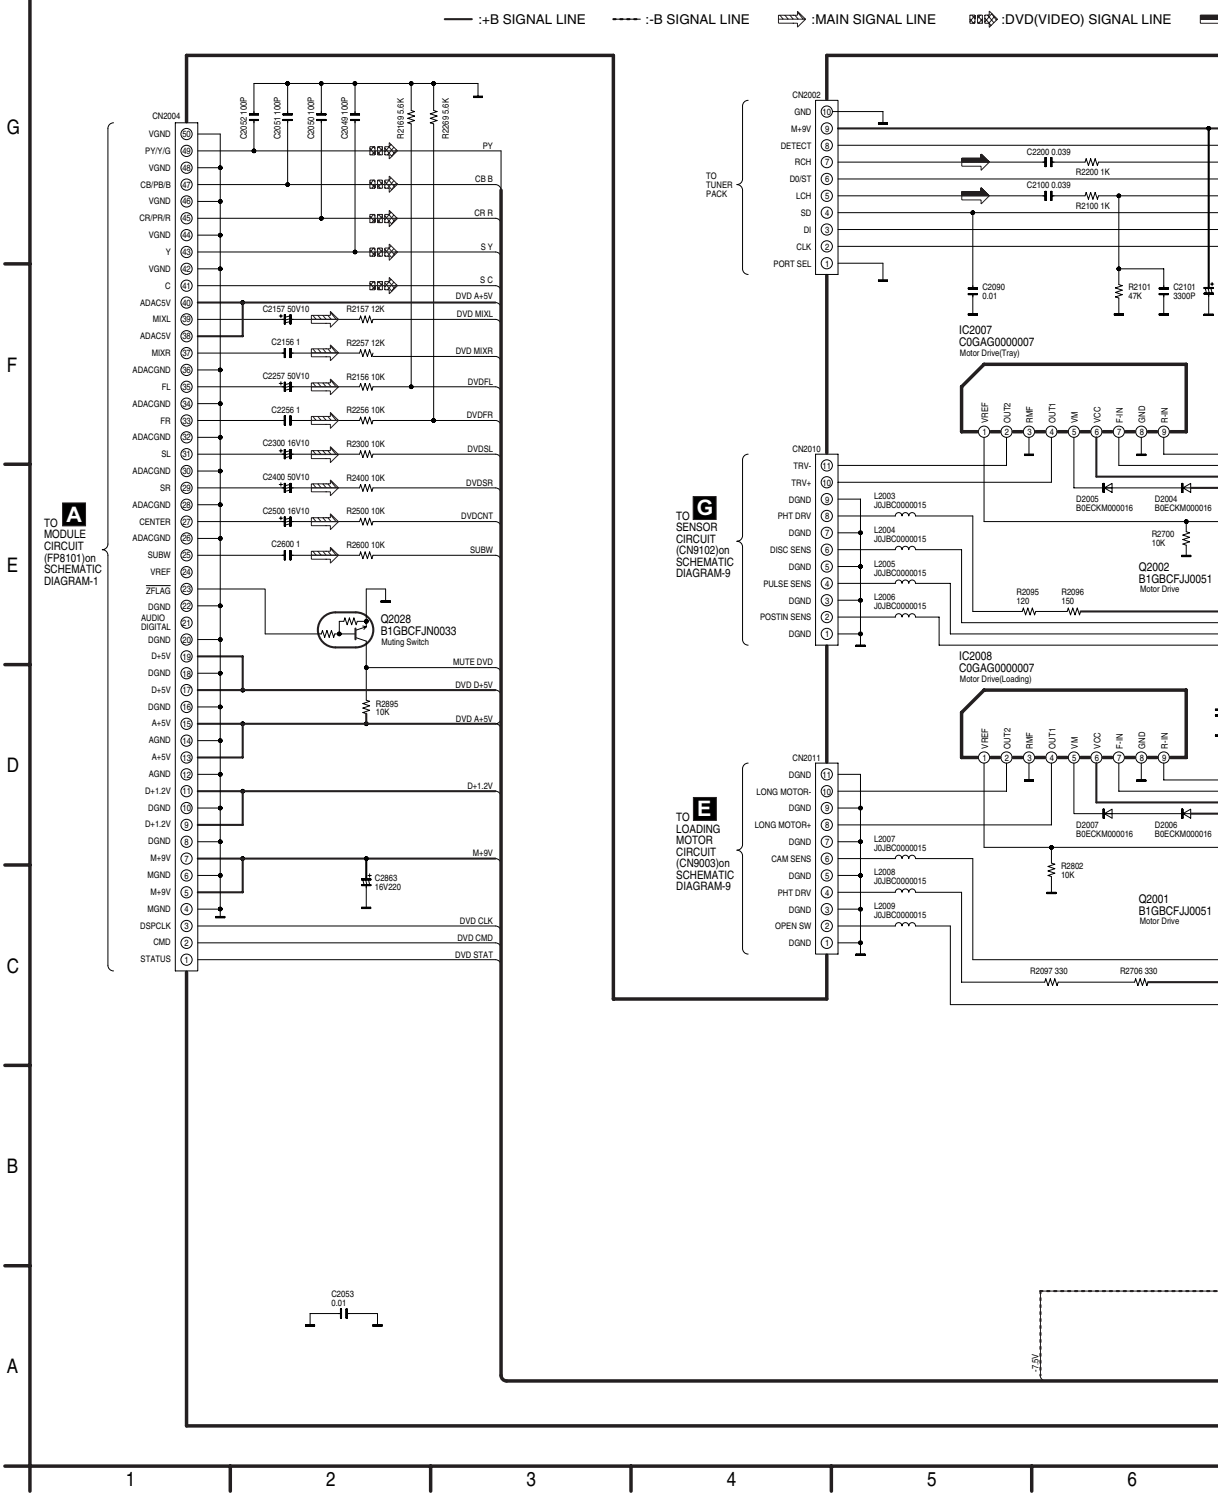

SIGNAL LINE :FM/AM SIGNAL LINE

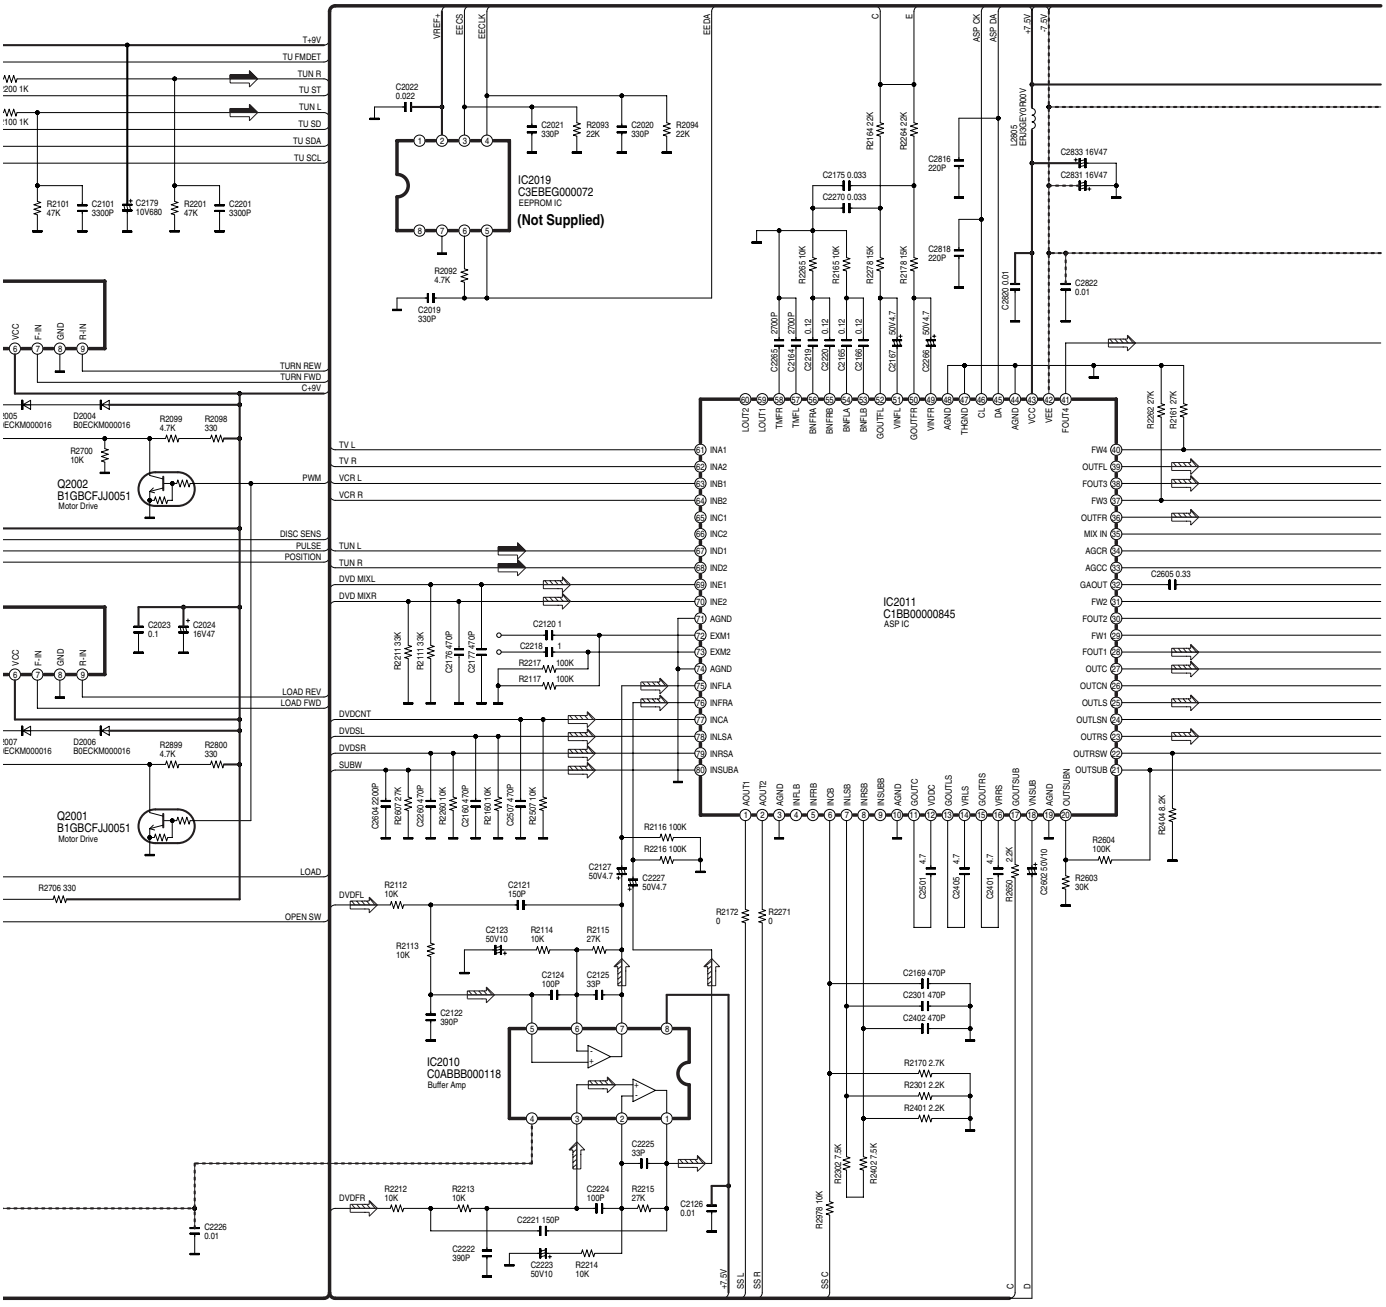

SA-HT730GCP MAIN CIRCUIT

6 | 7 | 8 | 9 | 10 | 11

SCHEMATIC DIAGRAM-5

B MAIN CIRCUIT

:+B SIGNAL LINE :-B SIGNAL LINE :MAIN SIGNAL LINE

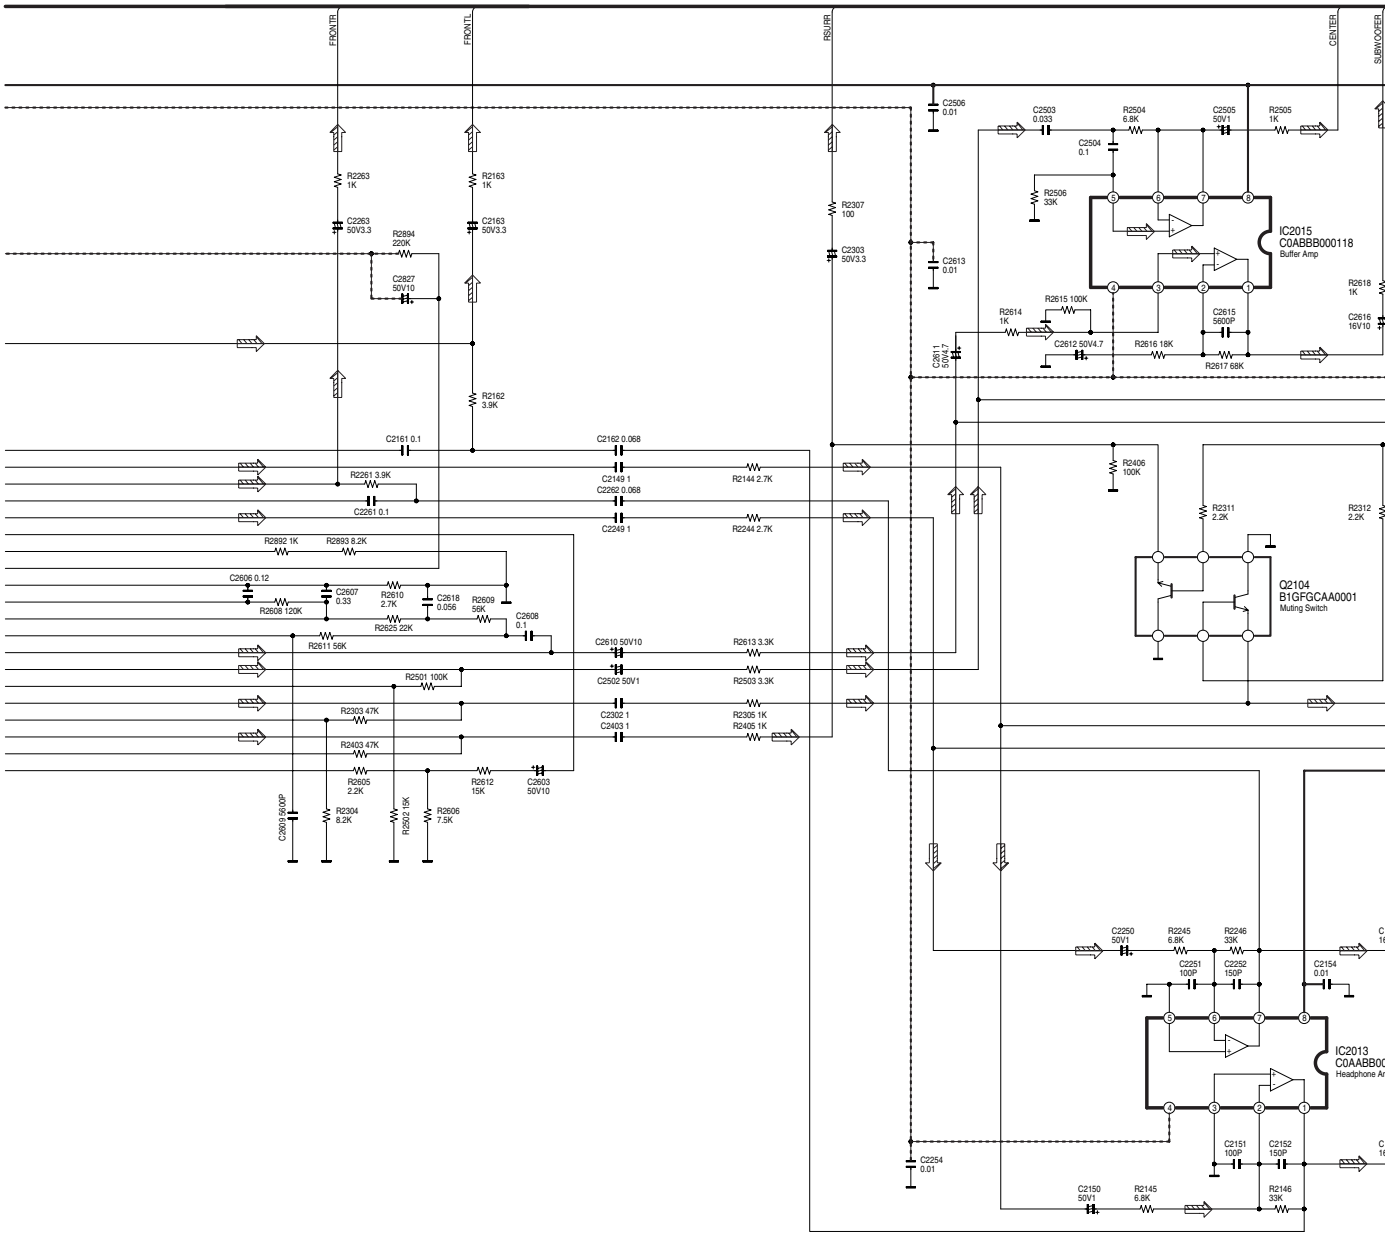

12 | 13 | 14 | 15 | 16 | 17

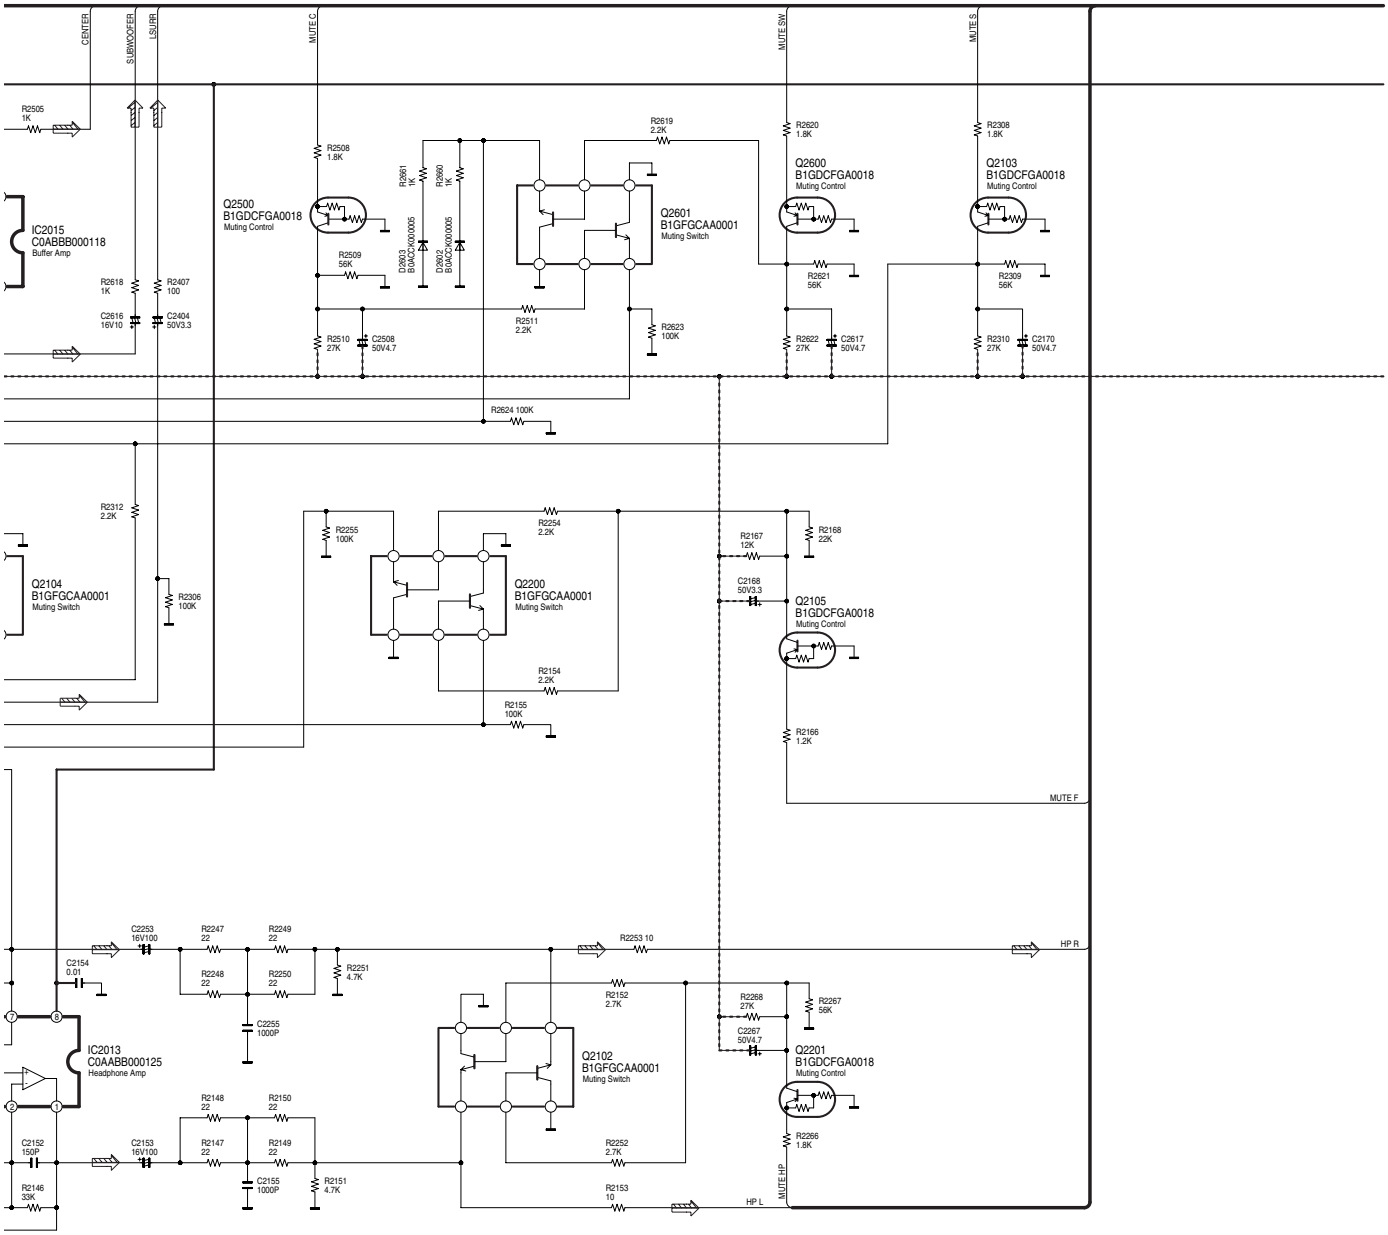

SA-HT730GCP MAIN CIRCUIT

17	18	19	20	21	22

SCHEMATIC DIAGRAM-6

B MAIN CIRCUIT

—— :+B SIGNAL LINE -·-·- :-B SIGNAL LINE ▨ :DVD(VIDEO) SIGNAL LINE

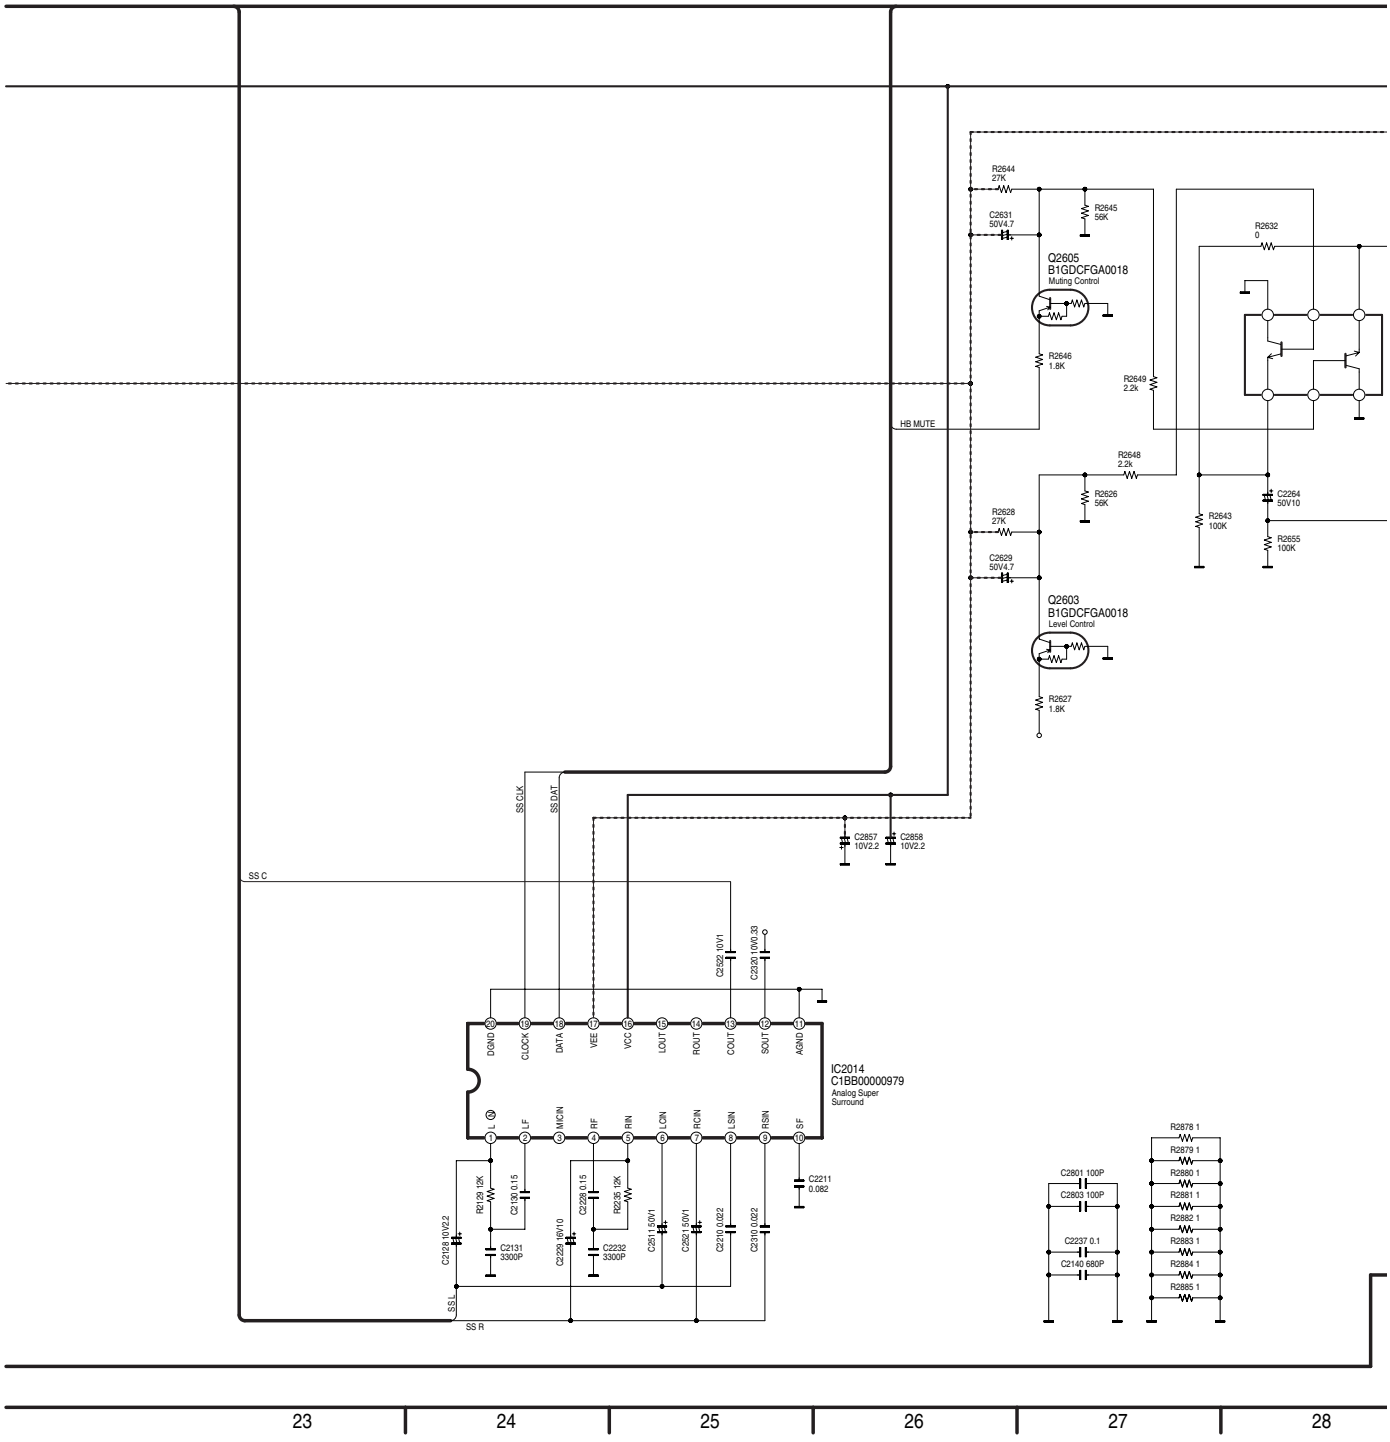

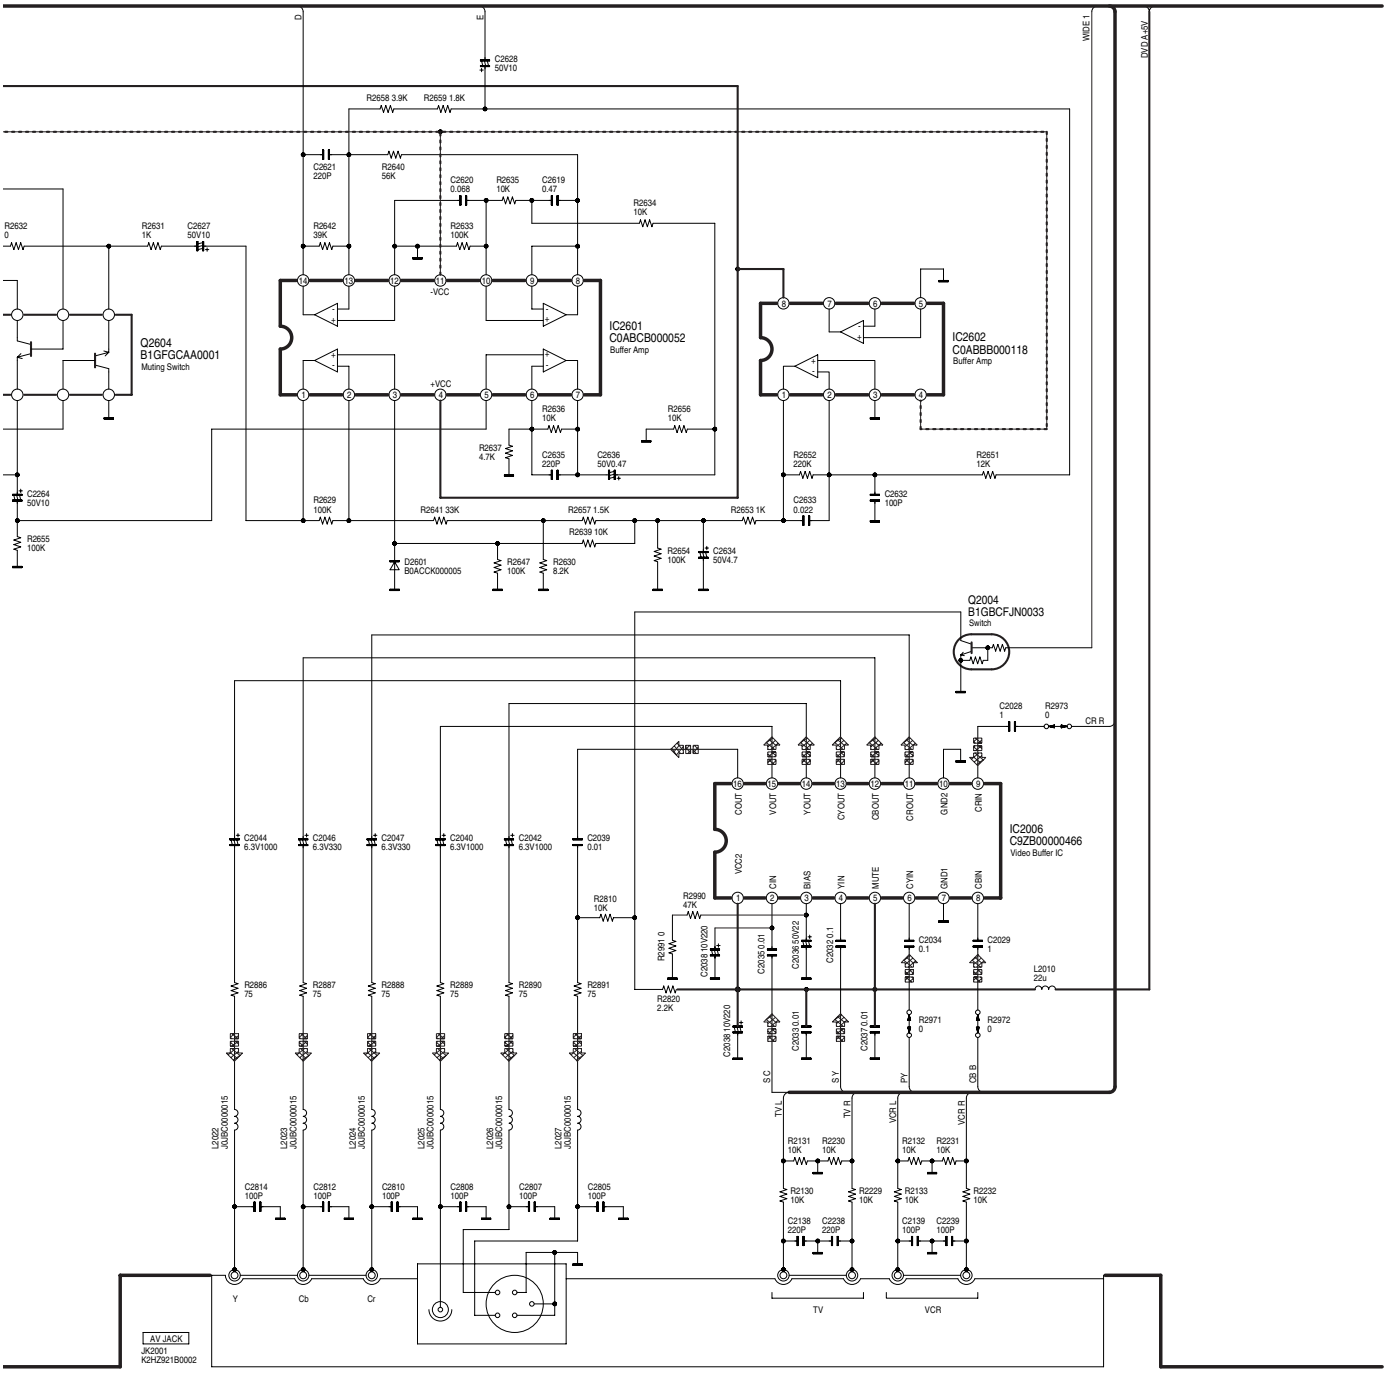

SA-HT730GCP MAIN CIRCUIT

28 | 29 | 30 | 31 | 32 | 33

SCHEMATIC DIAGRAM-7

B MAIN CIRCUIT

—— :+B SIGNAL LINE -·-·- :-B SIGNAL LINE ⇨ :MAIN SIGNAL LINE

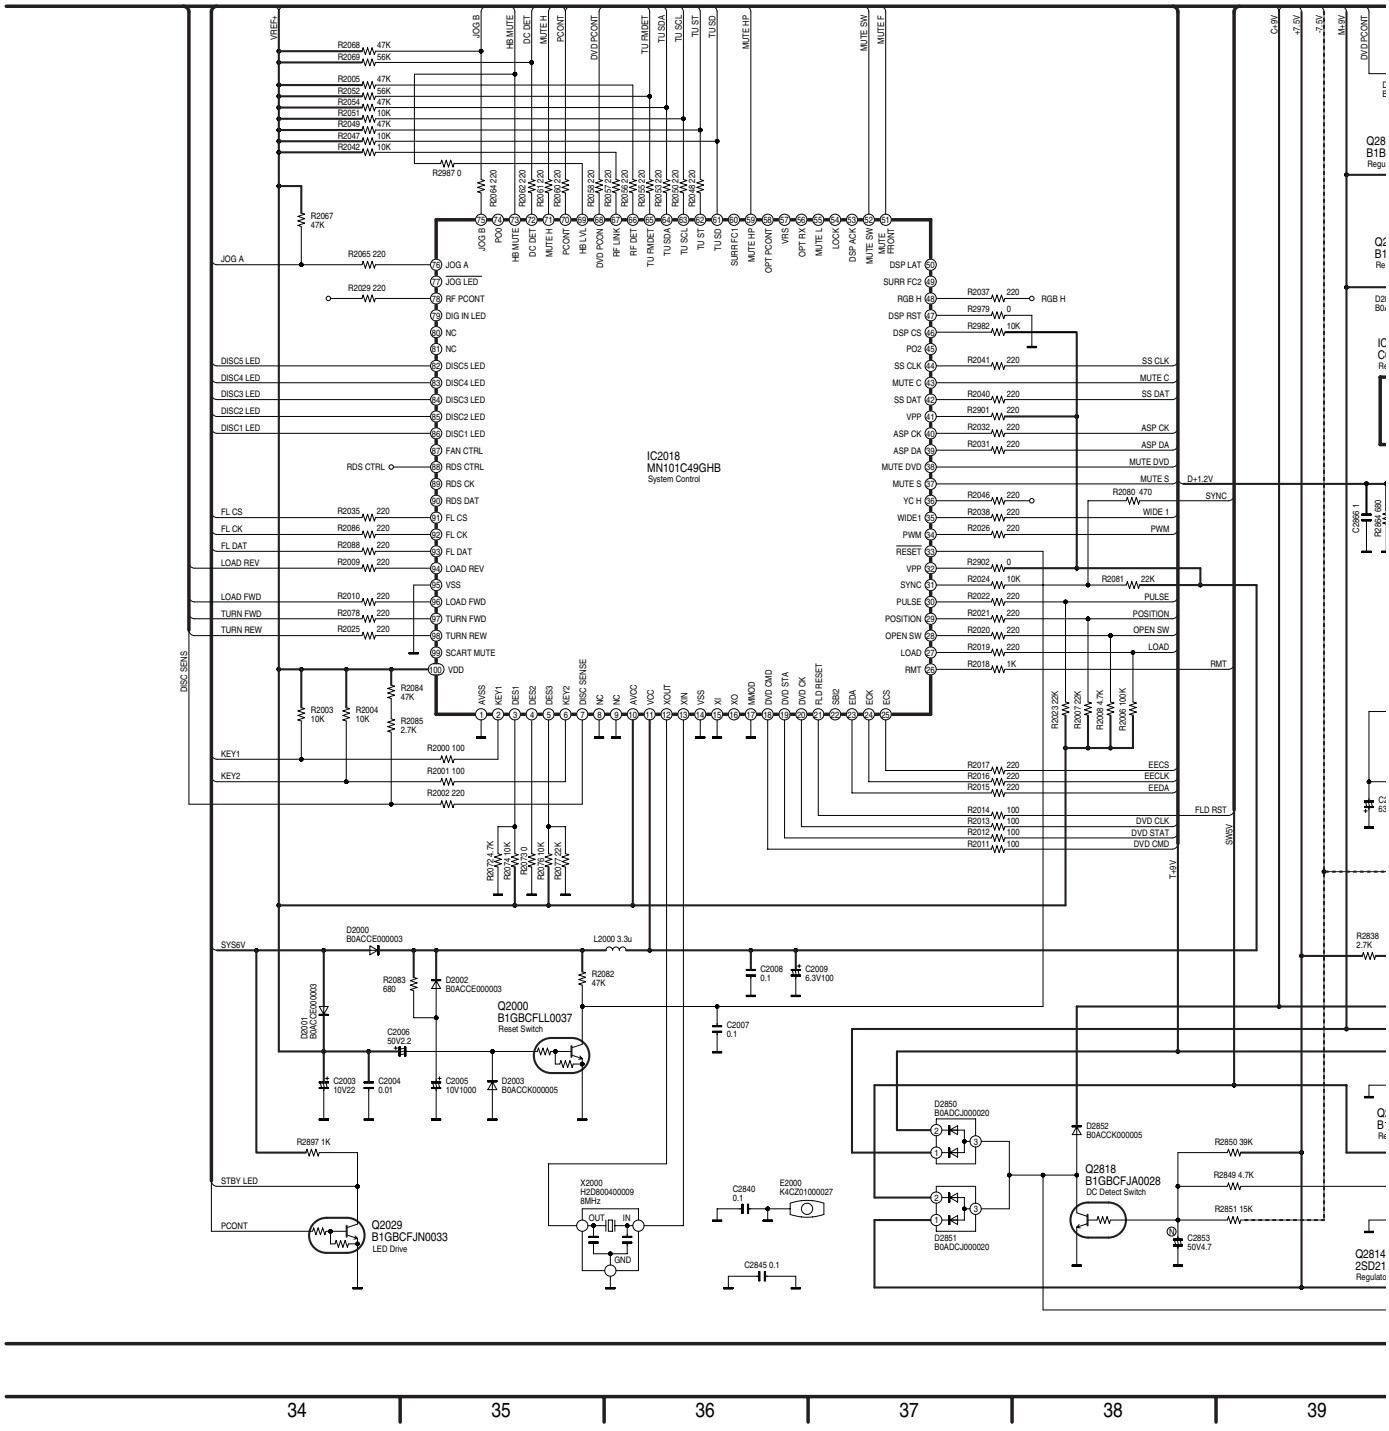

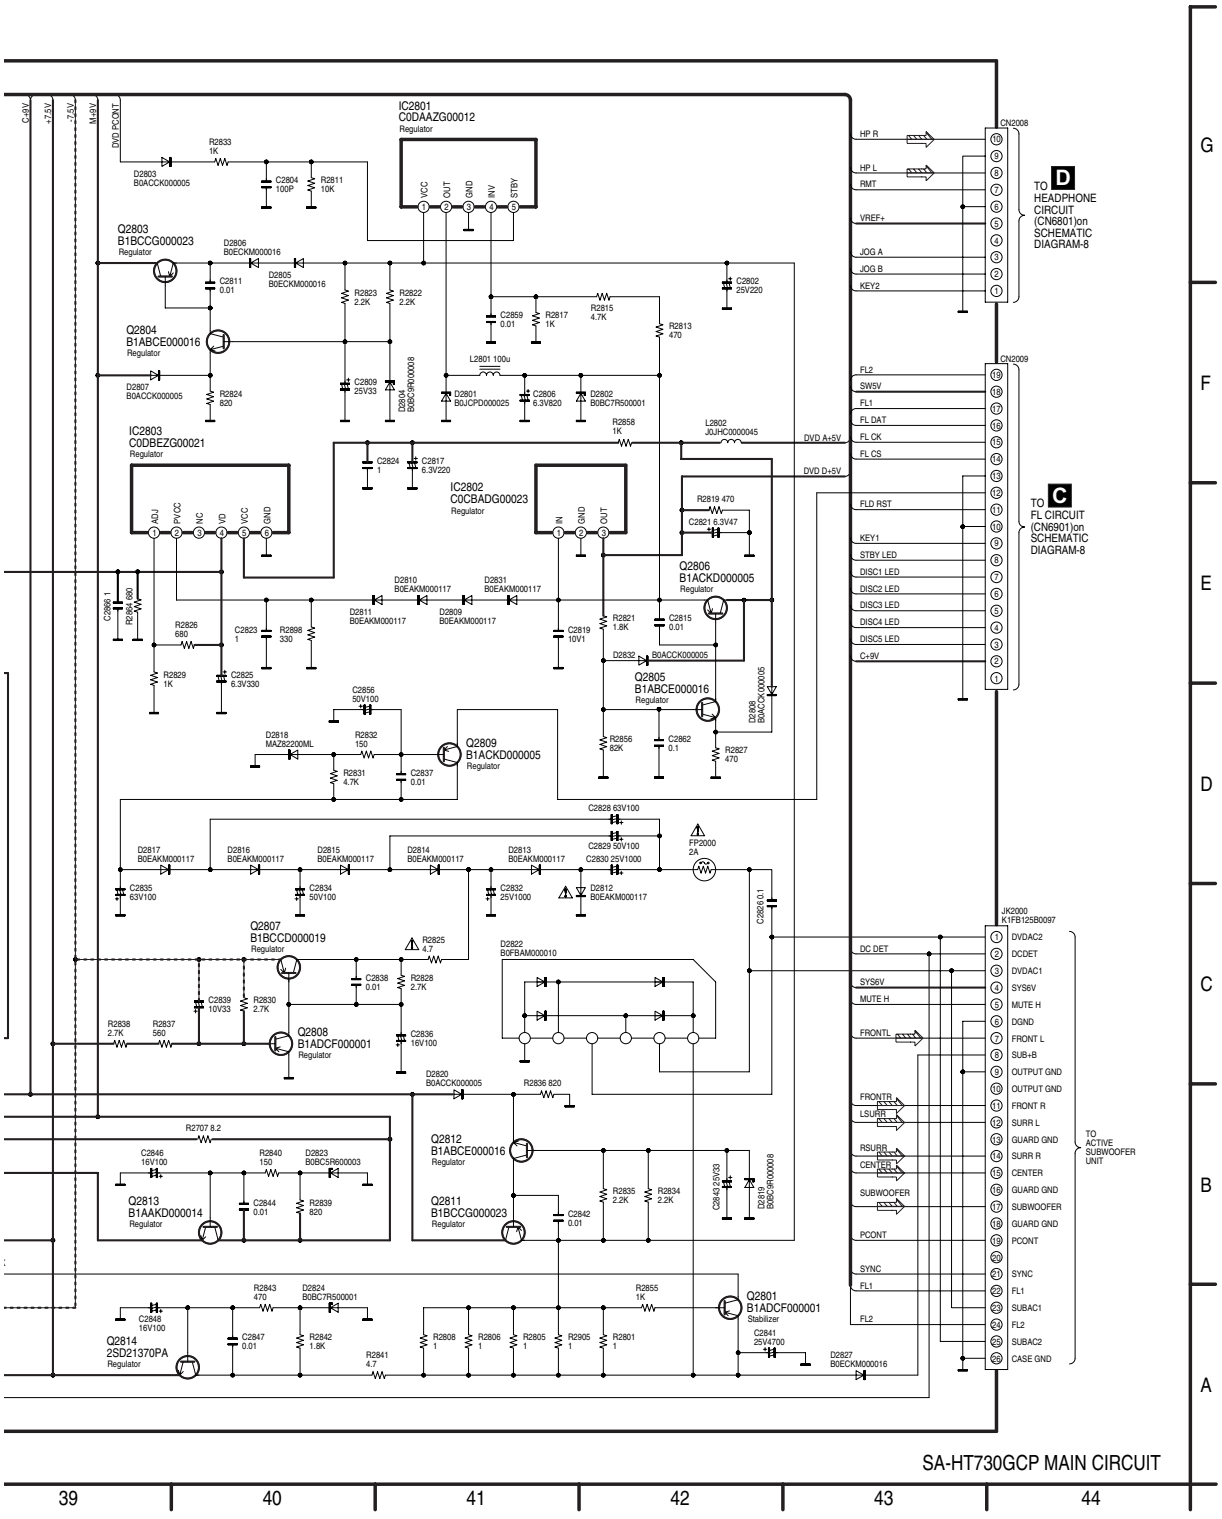

SA-HT730GCP MAIN CIRCUIT

SCHEMATIC DIAGRAM-8

C FL CIRCUIT

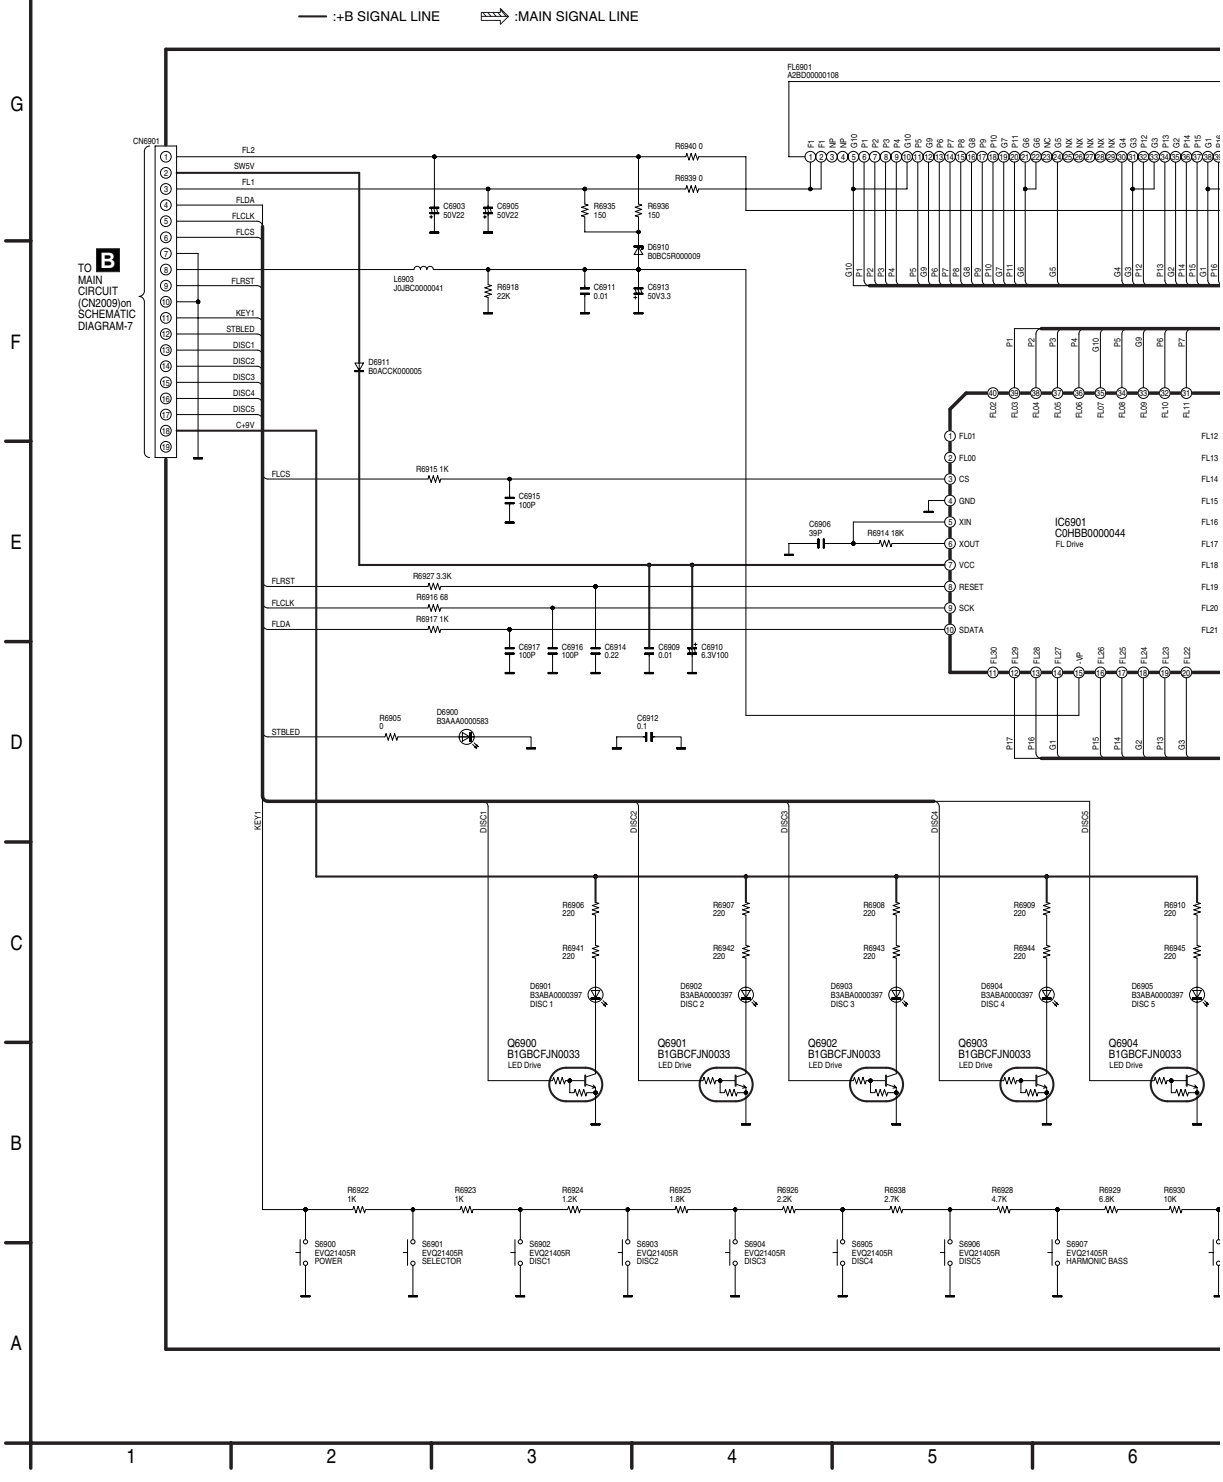

D HEADPHONE CIRCUIT

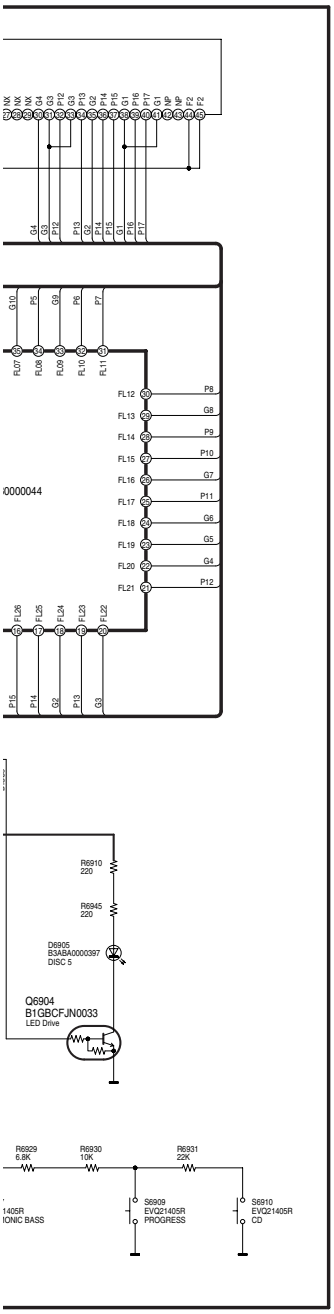

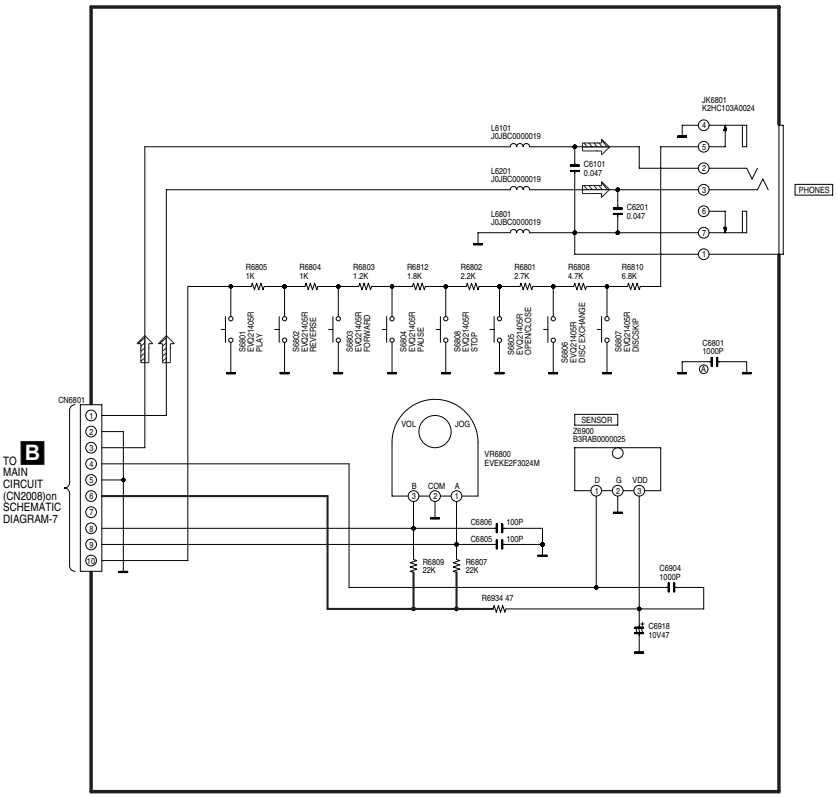

SA-HT730GCP FL/HEADPHONE CIRCUIT

6 | 7 | 8 | 9 | 10 | 11

SCHEMATIC DIAGRAM-9

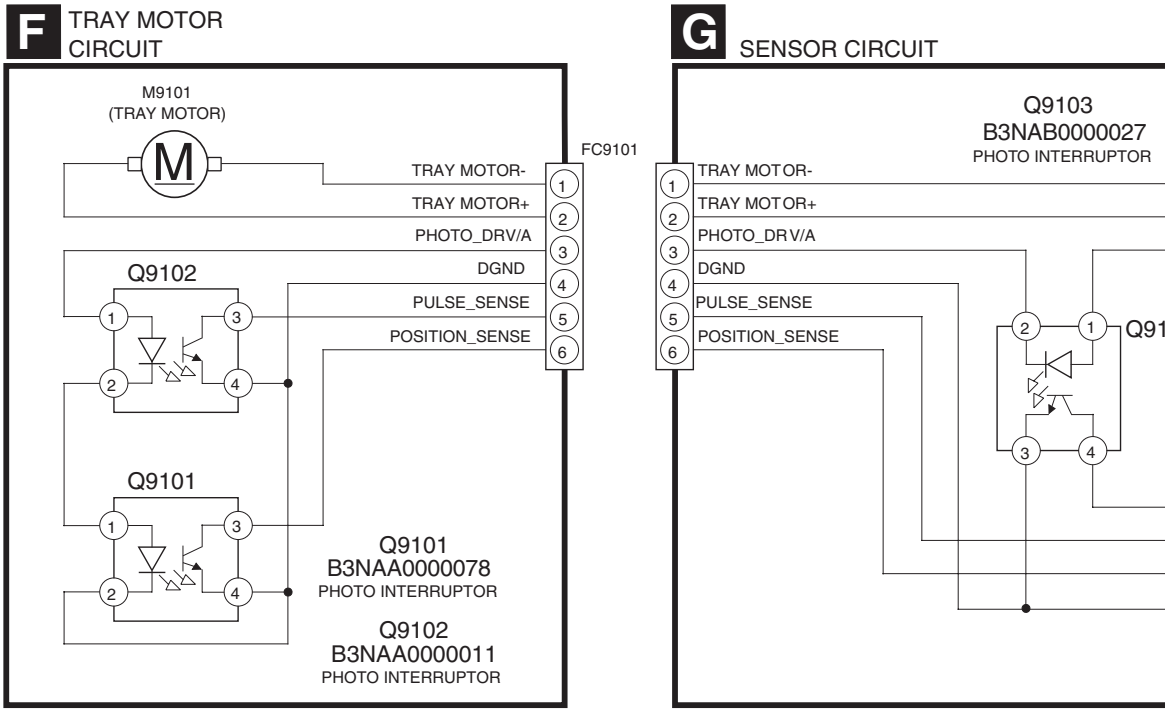

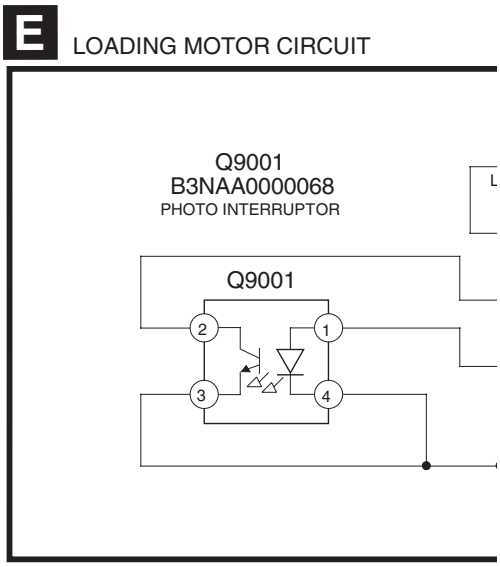

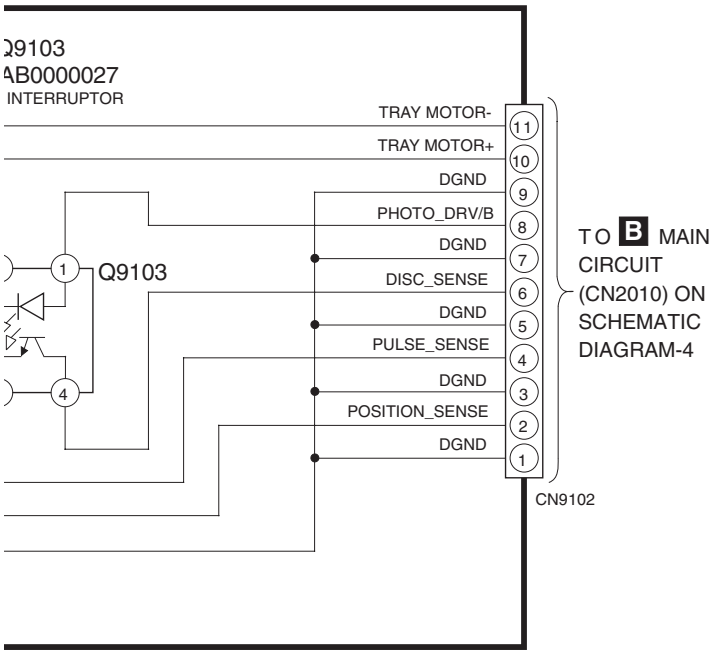

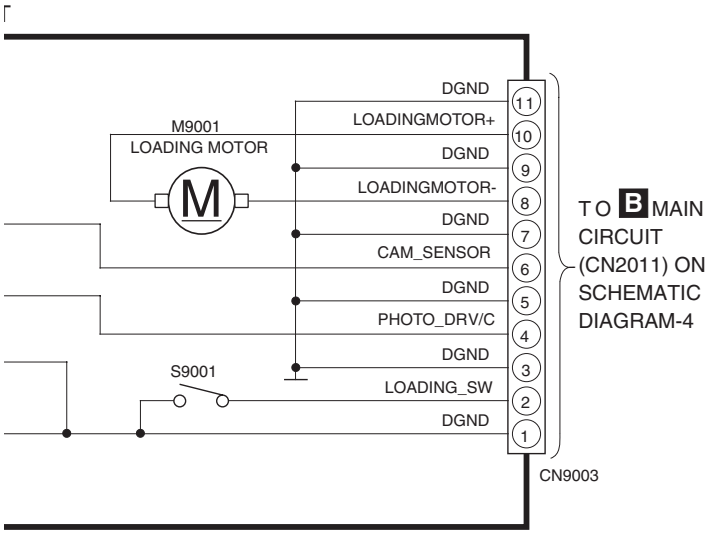

SA-HT730GCP LOADING MOTOR/TRAY MOTOR/SENSOR CIRCUIT

61